



- 4) If steering body, valve housing or pinion and valve is replaced with a new one, add two or three shims, install valve on pinion housing and tighten with two bolts to 25 ± 5 N·m (2.5 ± 0.5 kg·m, 18.1 ± 3.6 ft-lb). Then, measure clearance between steering body and valve housing using a thickness gauge. Remove shims so that the clearance is zero.
- 5) Extend rack "L" beyond pinion side of steering body.

L: 70.8 mm (2.787 in)

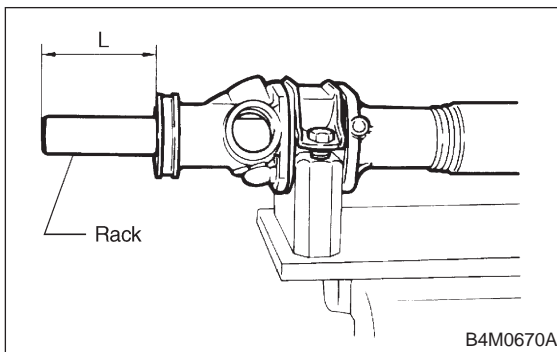

- 6) Apply grease to pinion gear teeth and ball bearing. Insert valve into place.

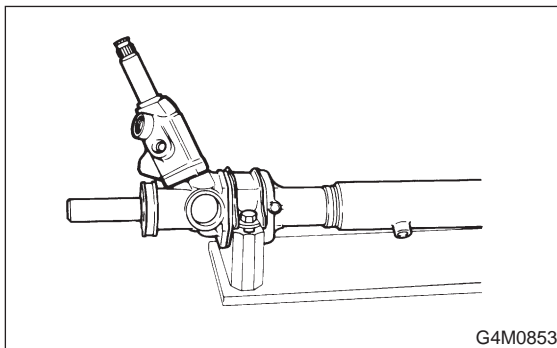

- 7) Alternately and slowly tighten socket bolts.

NOTE:

Replace faulty parts before installing valve. Otherwise, valve may not be installed properly.

Tightening torque:


25 ± 5 N·m (2.5 ± 0.5 kg·m, 18.1 ± 3.6 ft-lb)

7. Pipe Assembly (Power Steering System)

A: REMOVAL

1. LHD MODEL


- 1) Disconnect battery minus terminal.
- 2) Lift vehicle and remove jack-up plate.

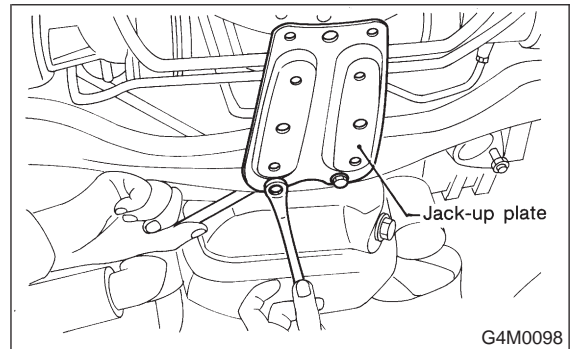

- 3) Remove one pipe joint at the center of gearbox, and connect vinyl hose to pipe and joint. Discharge fluid by turning steering wheel fully clockwise and counterclockwise. Discharge fluid similarly from the other pipe.

CAUTION:

Improper removal and installation of parts often causes fluid leak trouble. To prevent this, clean the surrounding portions before disassembly and reassembly, and pay special attention to keep dirt and other foreign matter from mating surfaces.

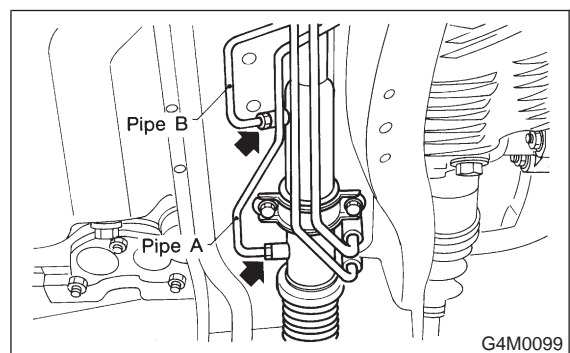


4-3 [W7A2]

7. Pipe Assembly (Power Steering System)

SERVICE PROCEDURE


4) Remove clamp E from pipes C and D.

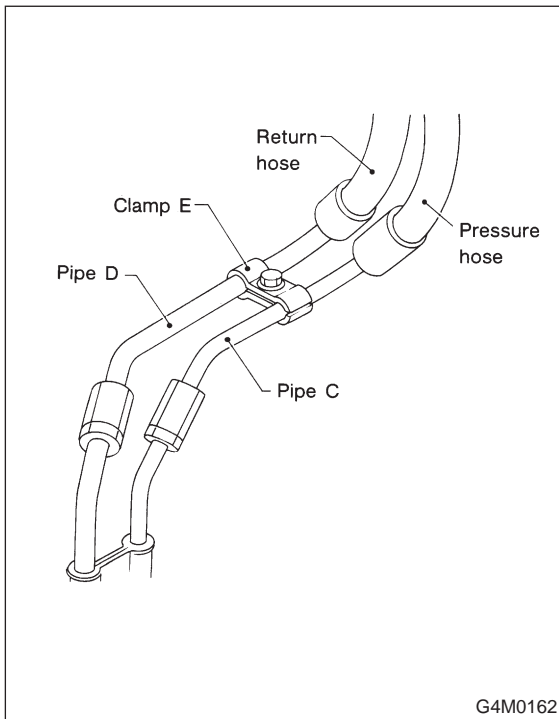

5) Disconnect pipe C-D from pipe (on the gearbox side).

CAUTION:

- When disconnecting pipe C-D, use two wrenches to prevent deformities.
- Be careful to keep pipe connections free from foreign matter.

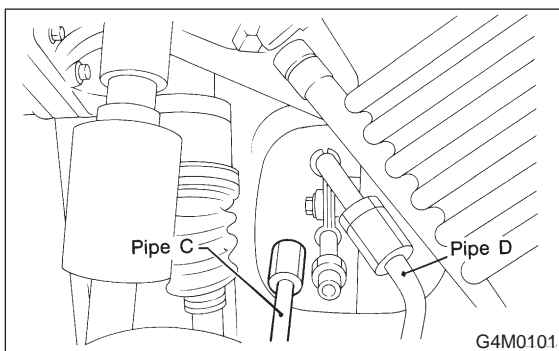


6) Remove bolt A.

Disconnect pipe C from oil pump. Disconnect pipe D from oil tank.


CAUTION:

- Do not allow fluid from the hose end to come into contact with pulley belt.
- To prevent foreign matter from entering the hose and pipe, cover the open ends of them with a clean cloth.

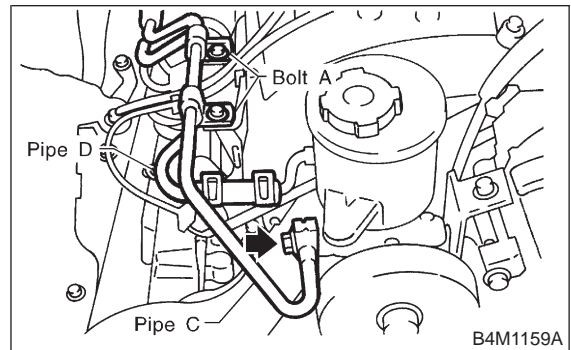

2. RHD MODEL


- 1) Disconnect battery negative terminal.
- 2) Lift vehicle and remove jack-up plate.

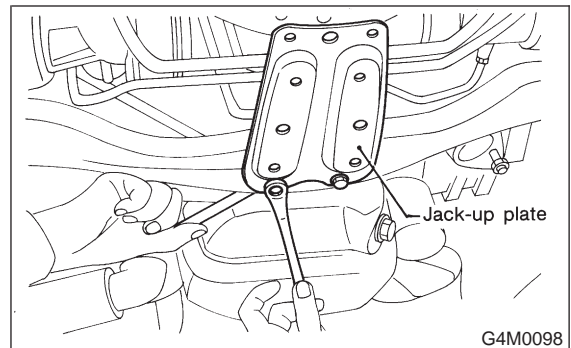


3) Remove one pipe joint at the center of gearbox, and connect vinyl hose to pipe and joint. Discharge fluid by turning steering wheel fully clockwise and counterclockwise. Discharge fluid similarly from the other pipe.

CAUTION:

Improper removal and installation of parts often causes fluid leak trouble. To prevent this, clean the surrounding portions before disassembly and reassembly, and pay special attention to keep dirt and other foreign matter from mating surfaces.

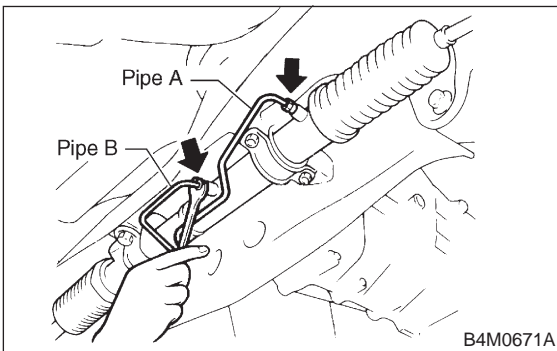

4) Remove clamp E from pipes C and D.

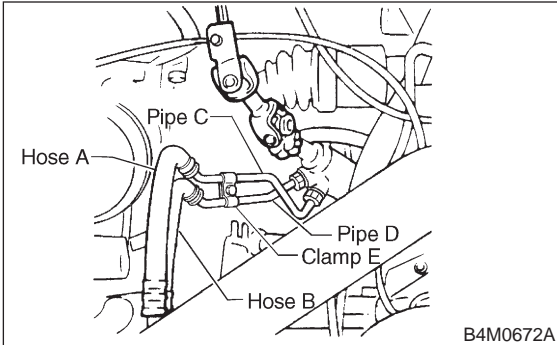

5) Remove flare nuts from control valve of gearbox assembly, and then disconnect pipe C-D.

CAUTION:


- When disconnecting pipe C-D, use two wrenches to prevent deformities.
- Be careful to keep pipe connections free from foreign matter.

6) Remove bolt A.

Disconnect pipe C from oil pump. Disconnect pipe D from oil tank.

CAUTION:

- Do not allow fluid from the hose end to come into contact with pulley belt.
- To prevent foreign matter from entering the hose and pipe, cover the open ends of them with a clean cloth.

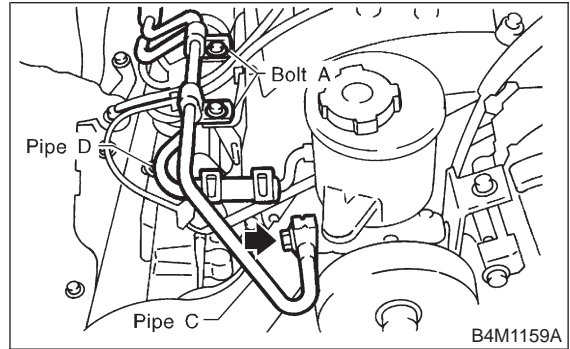

B: CHECK

Check all disassembled parts for wear, damage or other abnormalities. Repair or replace faulty parts as required.

Part name	Inspection	Remedy
Pipe	<ul style="list-style-type: none"> ● O-ring fitting surface for damage ● Nut for damage ● Pipe for damage 	Replace with new one.
Clamp Clamp E	<ul style="list-style-type: none"> ● Clamps for weak clamping force 	Replace with new one.
Hose	<ul style="list-style-type: none"> ● Flared surface for damage ● Flare nut for damage ● Outer surface for cracks ● Outer surface for wear ● Clip for damage ● End coupling or adapter for degradation 	Replace with new one.

C: INSTALLATION

1. LHD MODEL

1) Interconnect pipes C and D.


Tightening torque:

Joint nut

15±5 N·m (1.5±0.5 kg·m, 10.8±3.6 ft·lb)

CAUTION:

Visually check that hose between tank and pipe D is free from bending or twisting.

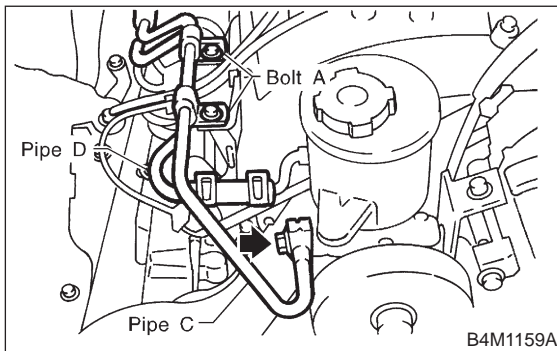

- 2) Connect pipe D from oil tank.
- 3) Connect pipe C from oil pump.

CAUTION:

Use a new gasket.

Tightening torque:


34±5 N·m (3.5±0.5 kg·m, 25.3±3.6 ft·lb)

4) Tighten bolt A.

Tightening torque:

13±3 N·m (1.3±0.3 kg·m, 9.4±2.2 ft·lb)


5) Temporarily connect pipes C and D to pipes (on the gearbox side).

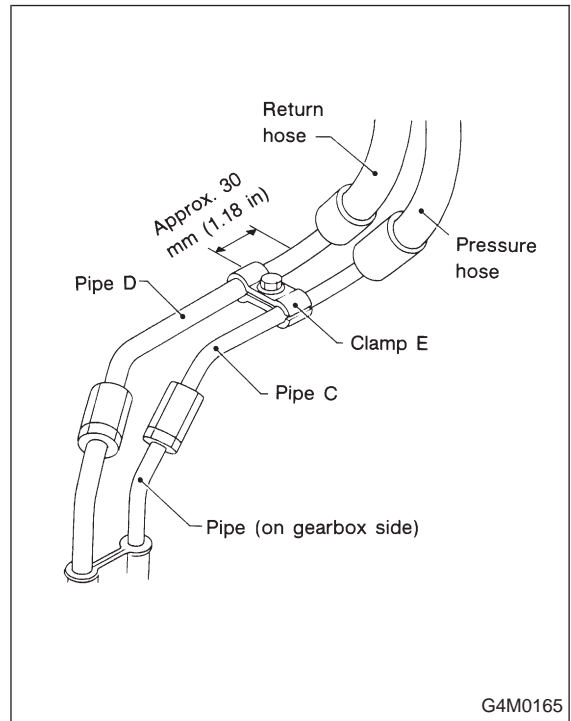

6) Temporarily install clamp E on pipes C and D.

CAUTION:

Ensure that the letter “8” on each clamp side are diagonally opposite each other as shown in the figure.

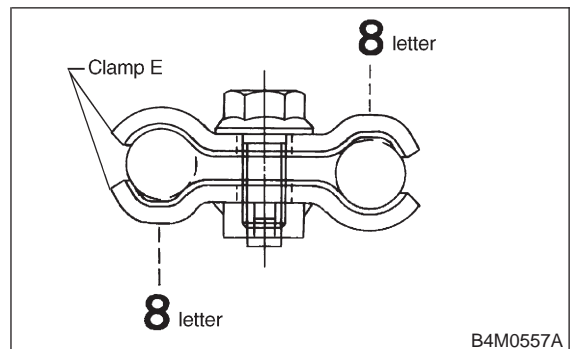

7) Tighten clamp E firmly.

Tightening torque:

7.4±2.0 N·m (0.75±0.20 kg·m, 5.4±1.4 ft·lb)

8) Tighten joint nut.

Tightening torque:

15±5 N·m (1.5±0.5 kg·m, 10.8±3.6 ft·lb)

SERVICE PROCEDURE


[W7C1] 4-3

7. Pipe Assembly (Power Steering System)

9) Connect pipes A and B to four pipe joints of gearbox. Connect upper pipe B first, and lower pipe A second.

Tightening torque:

$13 \pm 3 \text{ N}\cdot\text{m}$ ($1.3 \pm 0.3 \text{ kg}\cdot\text{m}$, $9.4 \pm 2.2 \text{ ft}\cdot\text{lb}$)

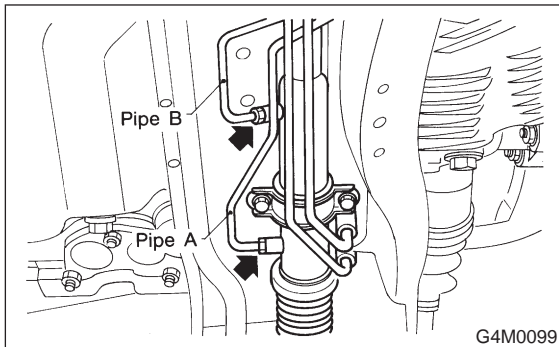


10) Install jack-up plate.

11) Connect battery minus terminal.

12) Feed the specified fluid and discharge air.

NOTE:

Never start the engine before feeding the fluid; otherwise vane pump might be seized up.

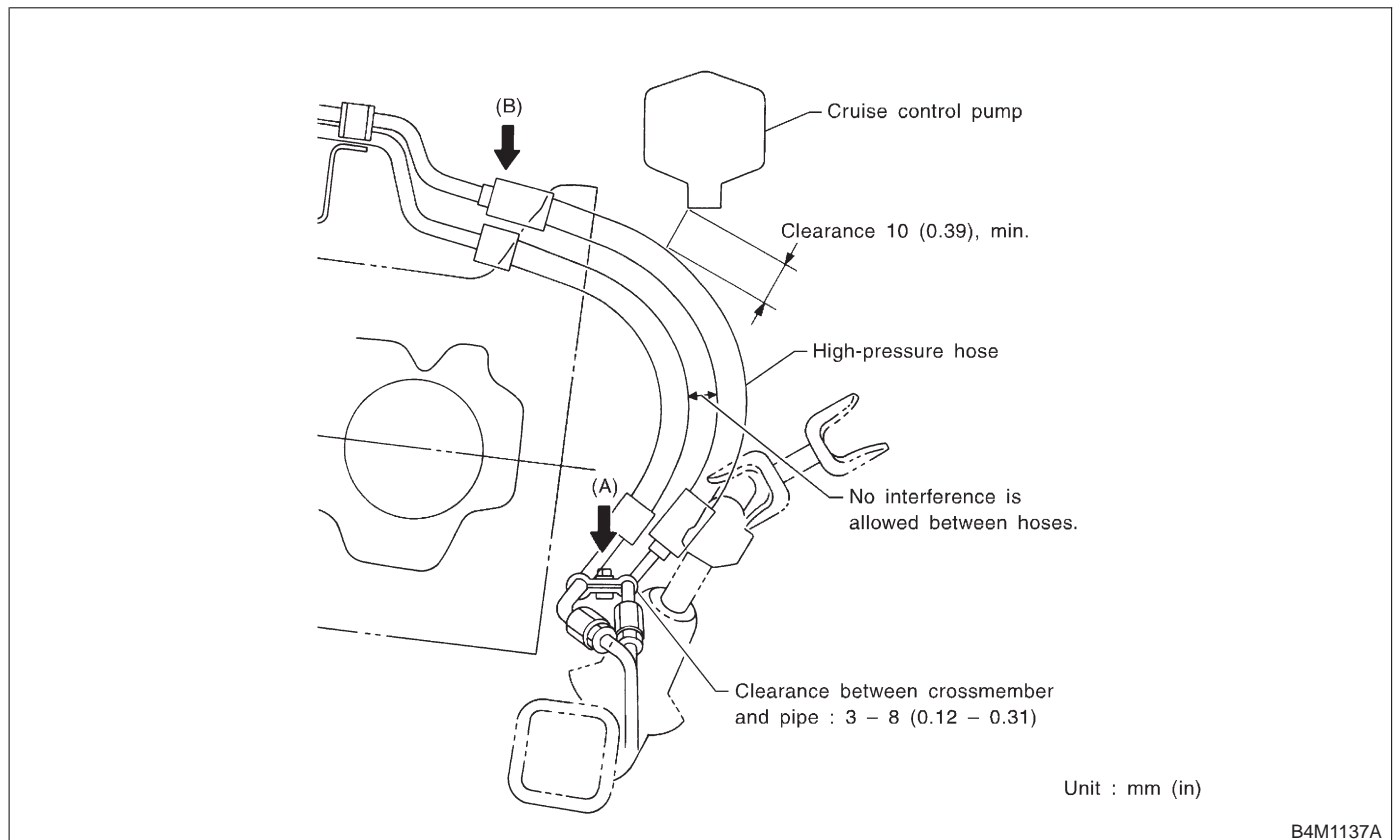

13) Finally check clearance between pipes and/or hoses, as shown above.

If clearance between cruise control pump and power steering hose is less than 10 mm (0.39 in), proceed as follows:

(1) Move clamped section (A) (refer to figure above.) down to a point where pipe is close to crossmember.

Pipe-to-crossmember clearance:

10 mm (0.39 in), min.

(2) Check that clearance between cruise control pump and power steering hose is at least 10 mm (0.39 in). If it is not, bend section (B) down until a clearance of at least 10 mm (0.39 in) is obtained.

2. RHD MODEL

1) Interconnect pipes C and D.


Tightening torque:

Joint nut

15±5 N·m (1.5±0.5 kg·m, 10.8±3.6 ft·lb)

CAUTION:

Visually check that hose between tank and pipe D is free from bending or twisting.

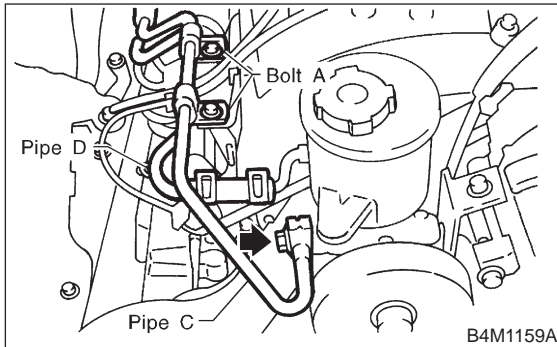

- 2) Connect pipe D from oil tank.
- 3) Connect pipe C from oil pump.

CAUTION:

Use a new gasket.

Tightening torque:


34±5 N·m (3.5±0.5 kg·m, 25.3±3.6 ft·lb)

4) Tighten bolt A.

Tightening torque:

13±3 N·m (1.3±0.3 kg·m, 9.4±2.2 ft·lb)


5) Temporarily connect pipes C and D to control valve of gearbox.

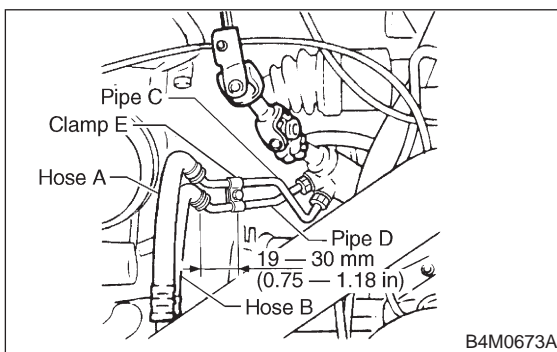

6) Temporarily install clamp E on pipes C and D.

CAUTION:

Ensure that the letter "8" side of clamp E is on the pipe C side as shown in the figure.

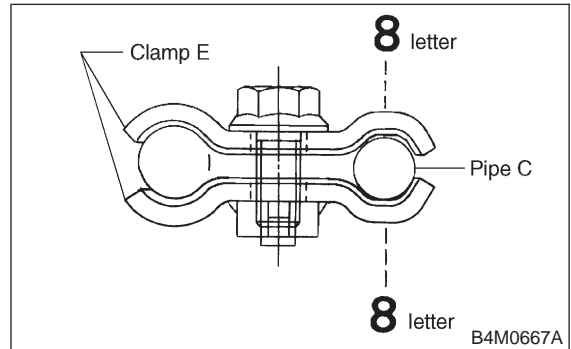

7) Tighten clamp E firmly.

Tightening torque:

7.4±2.0 N·m (0.75±0.20 kg·m, 5.4±1.4 ft·lb)

8) Tighten joint nut.


Tightening torque:

15±5 N·m (1.5±0.5 kg·m, 10.8±3.6 ft·lb)

9) Connect pipes A and B to four pipe joints of gearbox. Connect upper pipe A first, and lower pipe B second.

Tightening torque:

13±3 N·m (1.3±0.3 kg·m, 9.4±2.2 ft·lb)

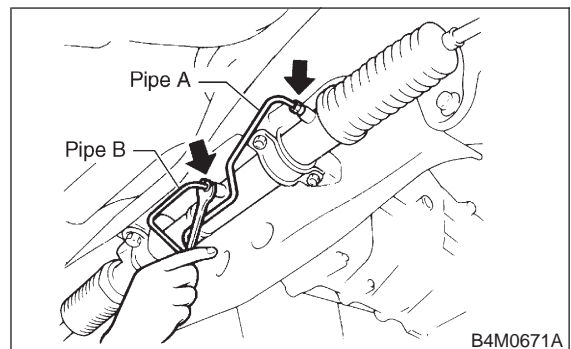

10) Install jack-up plate.

11) Connect battery negative terminal.

SERVICE PROCEDURE

[W7C2] 4-3

7. Pipe Assembly (Power Steering System)

12) Feed the specified fluid and discharge air.

NOTE:

Never start the engine before feeding the fluid; otherwise vane pump might be seized up.

