


24. Transfer Valve Body

A: DISASSEMBLY

- 1) Remove the plate. Then remove the spring and pilot valve together.
- 2) Remove the straight pin and pry out the plug with a screwdriver. Then extract the spring and transfer clutch valve together.

CAUTION:

Be careful not to damage the valve and valve body.

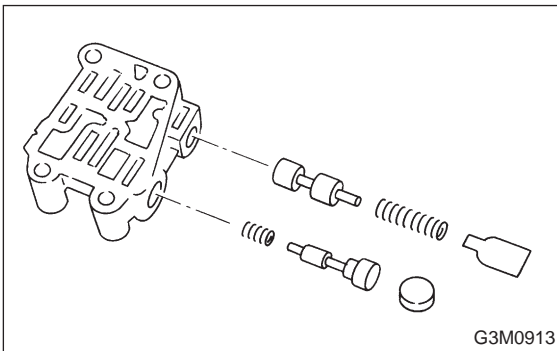

B: INSPECTION

Check each component for harmful cuts, damage, or other faults.

C: ASSEMBLY

To assemble, reverse the removal sequence.

NOTE:


Make sure the valve slides smoothly after assembling.

25. Transmission Control Module


A: REMOVAL

1. LHD


- 1) Disconnect battery ground cable.

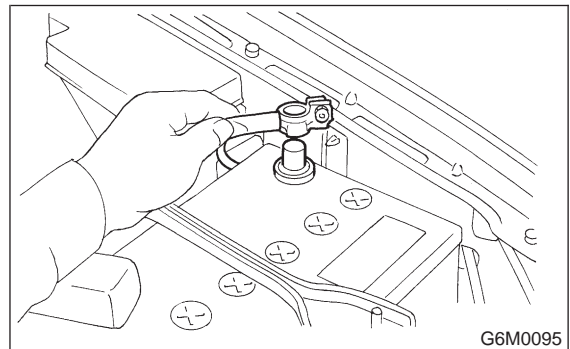

- 2) Remove lower cover and then disconnect connector.

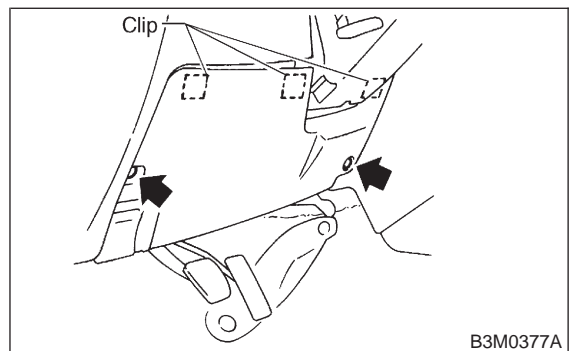

- 3) Remove transmission control module.

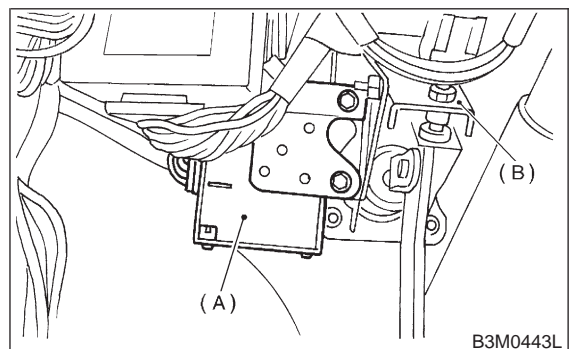

- (A) Transmission control module
- (B) Pedal bracket

- 4) Disconnect connectors form TCM.