
# 18. Rear Spoiler

## A: REMOVAL AND INSTALLATION


- 1) Open trunk lid.
- 2) Disconnect high-mount stop light connector located inside the trunk lid.
- 3) Remove rubber caps.

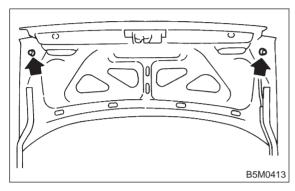

4) Remove rear spoiler mounting nuts.

#### CAUTION:

When removing nuts, be careful not to drop them inside rear gate.

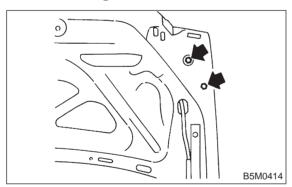

5) Installation is in the reverse order of removal.


### Tightening torque:

7.4±2.0 N·m (0.75±0.2 kg-m, 5.4±1.4 ft-lb)


# 19. Roof Spoiler

### A: REMOVAL AND INSTALLATION

1) Open rear gate and remove rear gate trim upper and side.

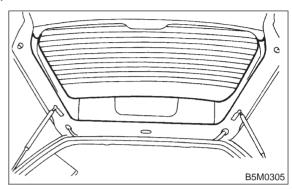


- 2) Remove high-mount stop light. <Ref. to 6-2 [W6A4].>
- 3) Remove plastic caps and harness covers.

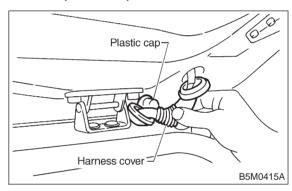

4) Remove roof spoiler mounting nuts.

### **CAUTION:**

- When removing nuts, be careful not to drop them inside rear gate.
- Be careful since two-sided tape is placed between roof spoiler and body panel.

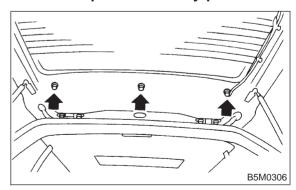

5) Installation is in the reverse order of removal.

### Tightening torque:

7.4±2.0 N·m (0.75±0.2 kg-m, 5.4±1.4 ft-lb)