

5. EGR Valve (2500 cc Model)A: REMOVAL AND INSTALLATION

1) Remove air intake chamber.

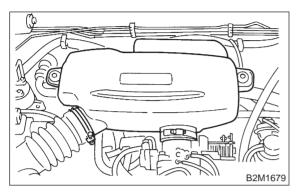

- 2) Disconnect vacuum hose from EGR valve.
- 3) Remove bolts which install EGR valve onto intake manifold.

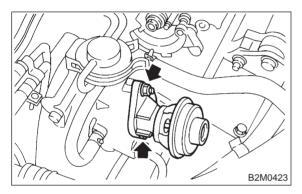

4) Installation is in the reverse order of removal.

CAUTION:

Replace gasket with a new one.


Tightening torque:

18.6±1.5 N·m (1.9±0.15 kg-m, 13.7±1.1 ft-lb)

6. Back-Pressure Transducer (BPT) (2500 cc Model)

A: REMOVAL AND INSTALLATION

- 1) Disconnect vacuum hoses from BPT.
- 2) Remove BPT from bracket.

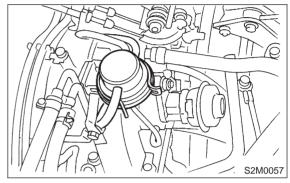

3) Installation is in the reverse order of removal.