


14. Roof Rail

A: REMOVAL AND INSTALLATION

- 1) Remove roof trim. <Ref. to 5-3 [W5A10].>
- 2) Remove five attaching nuts and then carefully detach roof rail.

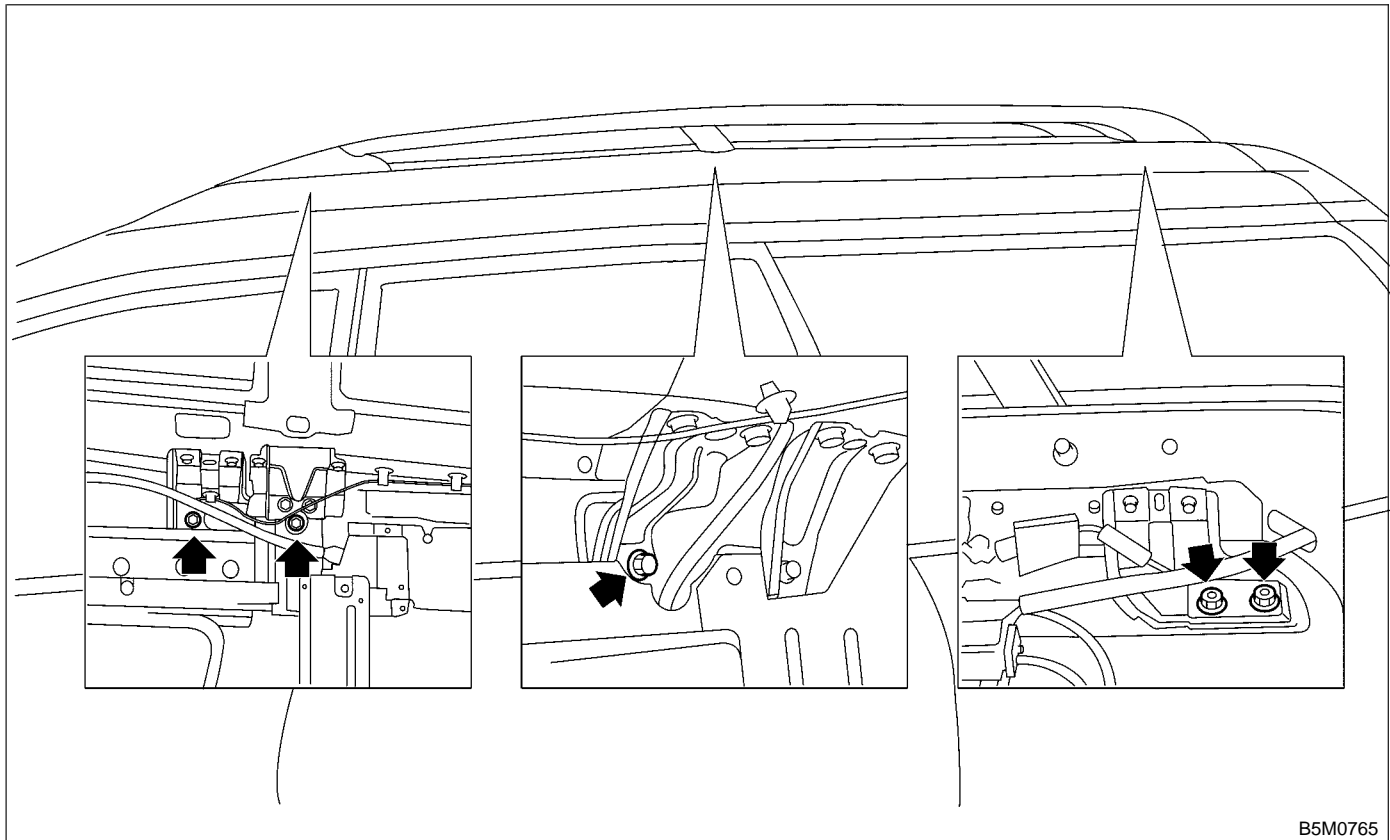

B5M0765

- 3) Installation is in the reverse order of removal.

CAUTION:

Be careful not to scratch body panels with roof rail stud bolts when removing and installing them.