

1. Precaution

A: SUPPLEMENTAL RESTRAINT SYSTEM "AIRBAG"

Airbag system wiring harness is routed near the security control module.

CAUTION:

- All airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuits.
- Be careful not to damage airbag system wiring harness when servicing the security control module.

2. Pre-inspection

A: FUSE

2A1 : CHECK FUSE.

Remove and visually check the fuse No. 7 (in main fuse box).

- CHECK** : *Is fuse No. 7 blown?*
- YES** : Replace fuse (20 A).
- NO** : Go to step **2A2**.

2A2 : CHECK FUSE.

Remove and visually check the fuse No. 2 (in main fuse box).

- CHECK** : *Is fuse No. 2 blown?*
- YES** : Replace fuse (15 A).
- NO** : Go to step **2B1**.