


4. CRUISE CONTROL MODULE

- 1) Remove glove box. <Ref. to 5-4 [W1A0].>
- 2) Remove nut, then remove cruise control module (A) and the other electrical control module (B) while disconnecting connector.

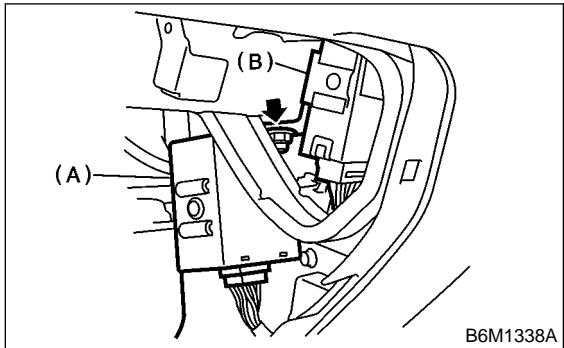

- 3) Disconnect cruise control module and the other electrical control module.
- 4) Installation is in the reverse order of removal.

5. STOP AND BRAKE SWITCH

Disconnect connector from switch, then remove the switch. <Ref. to 4-5 [C100].>

6. CLUTCH SWITCH


Disconnect connector from switch, then remove the switch. <Ref. to 4-5 [C100].>

13. Keyless Entry System

A: REMOVAL AND INSTALLATION

1. KEYLESS ENTRY CONTROL MODULE

- 1) Disconnect battery ground cable.
- 2) Remove glove box. <Ref. to 5-4 [W1A0].>
- 3) Remove nut, then remove keyless entry control module (B) and the other electrical control module (A) while disconnecting connector.

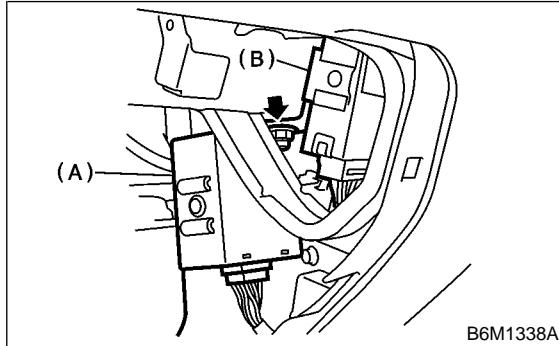

- 4) Disconnect keyless entry control module and the other electrical control module.
- 5) Installation is in the reverse order of removal.