


4) Installation is in the reverse order of removal.

**WARNING:**

- Ground cable must be connected.
- Spark may occur and ignite if fuel is nearby.

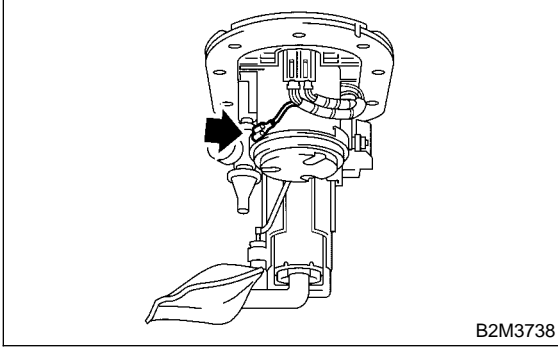

**6. Fuel Temperature Sensor**

**A: REMOVAL AND INSTALLATION**


**WARNING:**

During work procedures, if fuel tank is more than 3/4 full, be careful because fuel may spill.

**NOTE:**

Fuel temperature sensor is built in fuel pump assembly.

- 1) Remove fuel pump assembly. <Ref. to 2-8 [W3A0].>
- 2) Disconnect connector from fuel pump bracket.

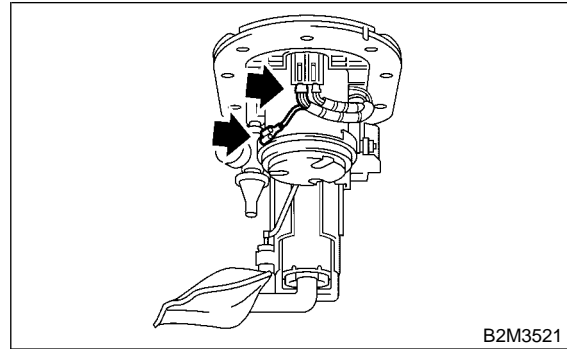

- 3) Remove fuel temperature sensor.

**NOTE:**

When replacing fuel temperature sensor, also replace fuel level sensor. <Ref. to 2-1 [W5A0].>

