



## 8. Fuel Tank Pressure Sensor

### A: REMOVAL AND INSTALLATION


- 1) Set the vehicle on the lift.
- 2) Open fuel flap lid, and remove fuel filler cap.

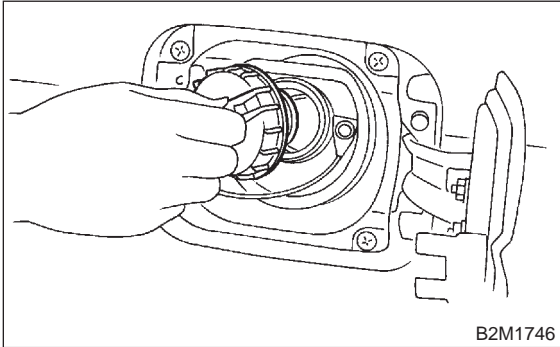


- 3) Disconnect battery ground cable.

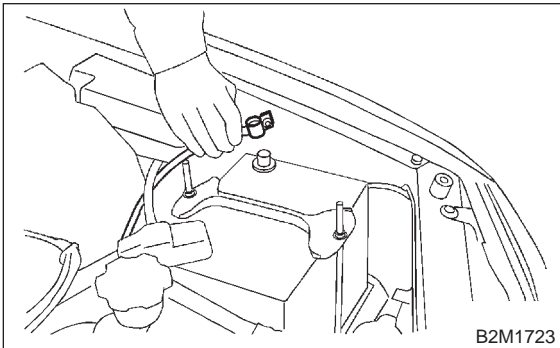


- 4) Lift-up the vehicle.
- 5) Disconnect connector from fuel tank pressure sensor.

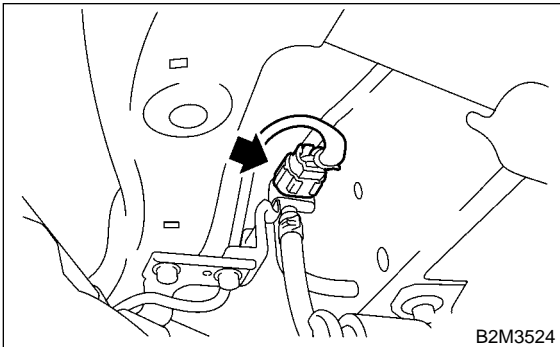

- 6) Disconnect pressure hose from fuel tank pressure sensor.

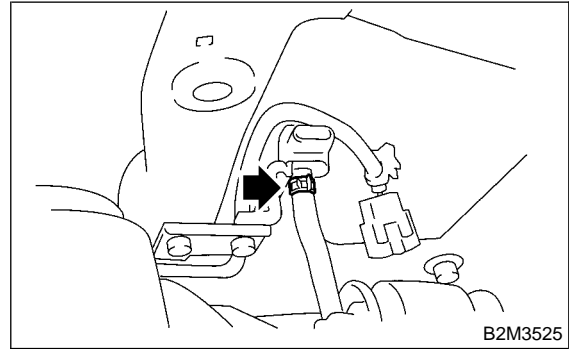

- 7) Remove fuel tank pressure sensor.

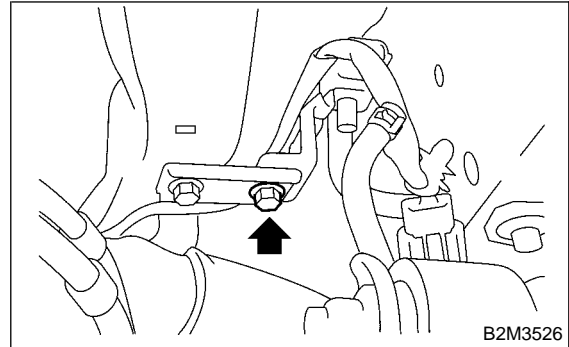

- 8) Installation is in the reverse order of removal.

**Tightening torque:**

**$7.4 \pm 2.0$  N·m ( $0.75 \pm 0.2$  kg·m,  $5.4 \pm 1.4$  ft·lb)**

