



- 4) Install intake manifold. <Ref. to 2-7 [W3D0].>

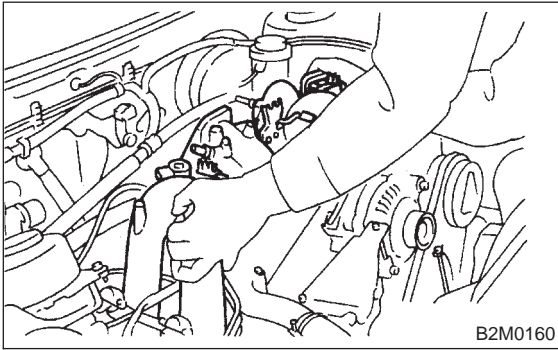

- 5) Connect connector of fuel pump relay.

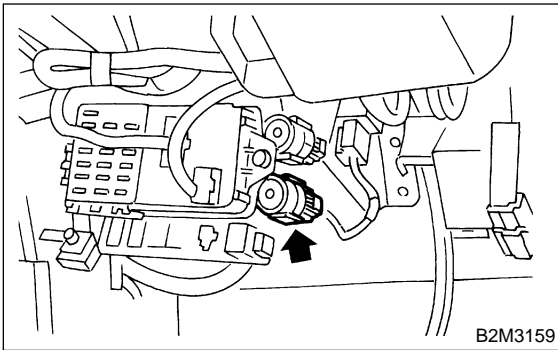


- 6) Connect battery ground cable.  
7) Fill coolant. <Ref. to 2-5 [W9B0].>

## 8. Reservoir Tank

### A: REMOVAL AND INSTALLATION

- 1) Disconnect over flow hose from radiator filler neck position.
- 2) Remove bolts which install reservoir tank onto radiator main fan shroud.
- 3) Remove reservoir tank.

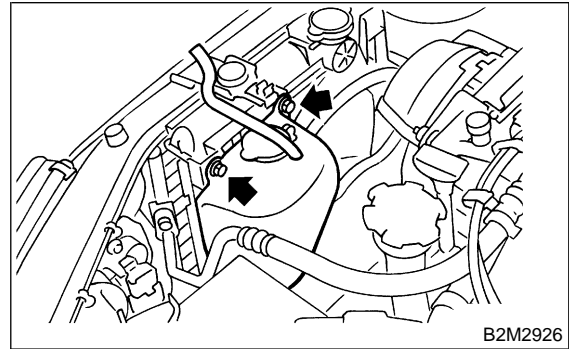

- 4) Installation is in the reverse order of removal.

#### **Tightening torque:**

**$4.9 \pm 1.5$  N·m ( $0.50 \pm 0.15$  kg·m,  $3.6 \pm 1.1$  ft·lb)**

