


2. Rear Exhaust Pipe

A: REMOVAL

1) Separate rear exhaust pipe from center exhaust pipe.

CAUTION:


Be careful, exhaust pipe is hot.

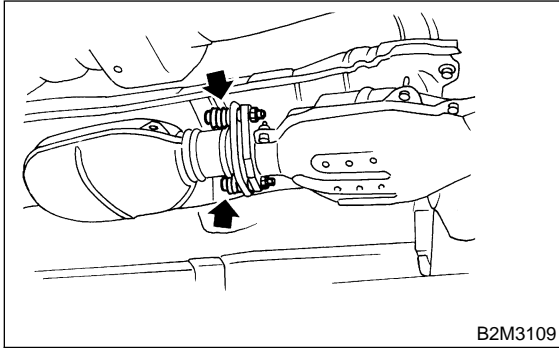

2) Install rear exhaust pipe to center exhaust pipe.

Tightening torque:


$18 \pm 5 \text{ N}\cdot\text{m}$ ($1.8 \pm 0.5 \text{ kg}\cdot\text{m}$, $13.0 \pm 3.6 \text{ ft}\cdot\text{lb}$)

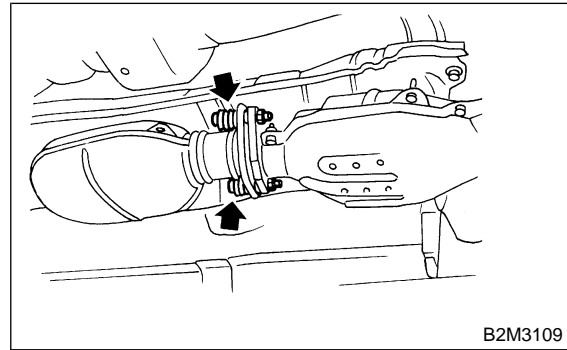

2) Separate rear exhaust pipe from muffler.

CAUTION:

Be careful not to pull down rear exhaust pipe.

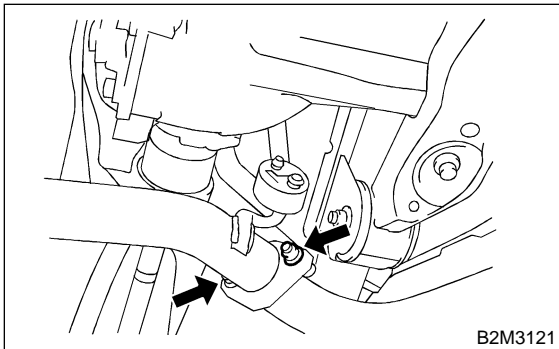

3) Remove rear exhaust pipe.

B: INSTALLATION

CAUTION:

Replace gaskets with new ones.

1) Install rear exhaust pipe to muffler.

Tightening torque:

$48 \pm 5 \text{ N}\cdot\text{m}$ ($4.9 \pm 0.5 \text{ kg}\cdot\text{m}$, $35.4 \pm 3.6 \text{ ft}\cdot\text{lb}$)

