
# 3. Muffler

# A: REMOVAL AND INSTALLATION

1) Separate muffler from rear exhaust pipe.

#### CAUTION:

#### Be careful, exhaust pipe is hot.

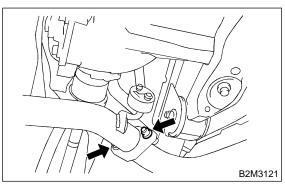

2) Remove left and right rubber cushions.


#### CAUTION:

# Be careful not to drop the muffler during removal.

#### NOTE:

To facilitate removal, apply a coat of SUBARU CRC to mating area of rubber cushions in advance.

#### SUBARU CRC (Part No. 004301003)

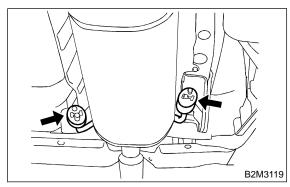


3) Remove front rubber cushion, and detach muffler assembly.

### NOTE:

To facilitate removal, apply a coat of SUBARU CRC to mating area of rubber cushion in advance.

## SUBARU CRC (Part No. 004301003)

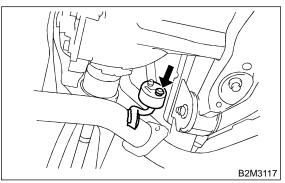

4) Installation is in the reverse order of removal.

## CAUTION: Replace gasket with a new one.

Tightening torque: 48±5 N·m (4.9±0.5 kg-m, 35.4±3.6 ft-lb)

