



- 4) Connect battery ground cable.

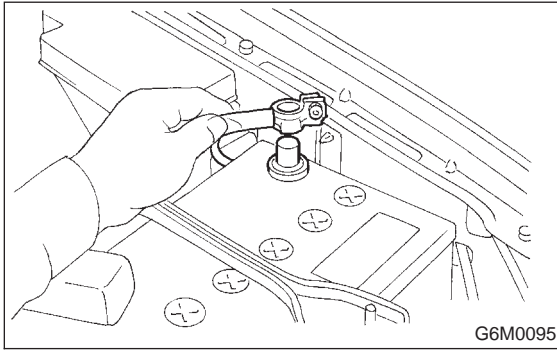


8. Front Oxygen (A/F) Sensor

A: REMOVAL

- 1) Disconnect battery ground cable.

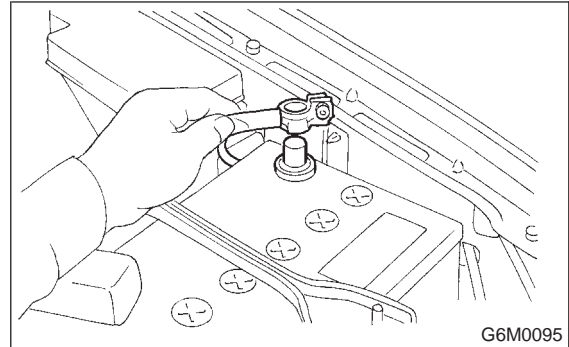

- 2) Disconnect connector from front oxygen (A/F) sensor.

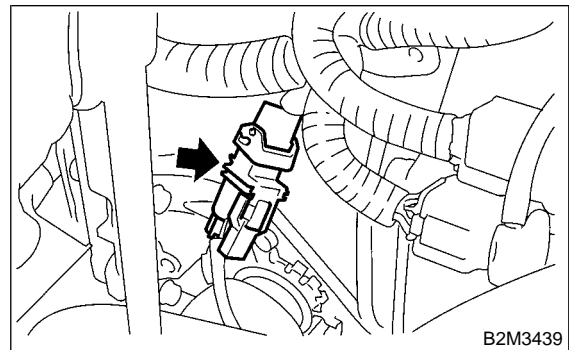


- 3) Lift-up the vehicle.
4) Apply SUBARU CRC or its equivalent to threaded portion of front oxygen (A/F) sensor, and leave it for one minute or more.

SUBARU CRC (Part No. 004301003)

- 5) Remove front oxygen (A/F) sensor.

CAUTION:

When removing front oxygen (A/F) sensor, do not force front oxygen (A/F) sensor especially when exhaust pipe is cold, otherwise it will damage exhaust pipe.

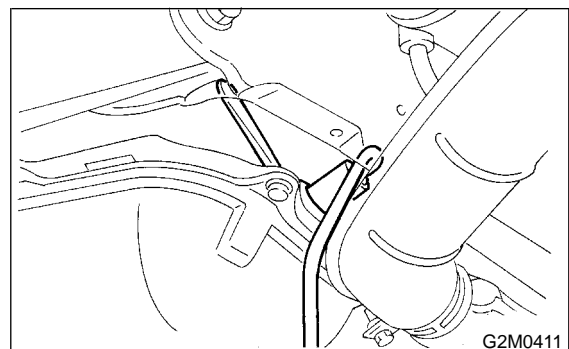


8. Front Oxygen (A/F) Sensor

B: INSTALLATION

1) Before installing front oxygen (A/F) sensor, apply anti-seize compound only to threaded portion of front oxygen (A/F) sensor to make the next removal easier.


Anti-seize compound:
SS-30 by JET LUBE

CAUTION:
Never apply anti-seize compound to protector of front oxygen (A/F) sensor.

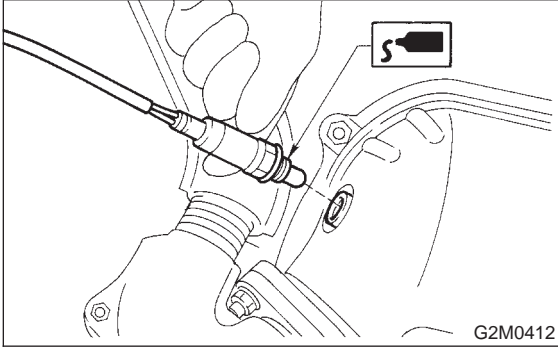


2) Install front oxygen (A/F) sensor.

Tightening torque:
21±3 N·m (2.1±0.3 kg·m, 15.2±2.2 ft·lb)

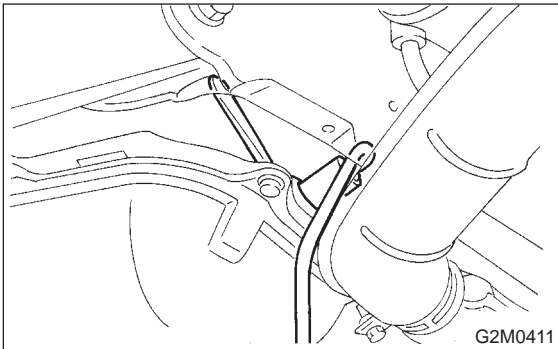

3) Lower the vehicle.

4) Connect connector of front oxygen (A/F) sensor.

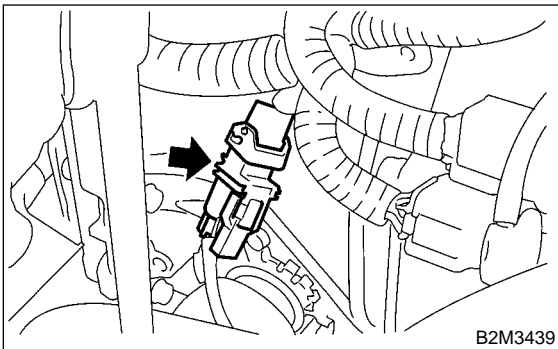

5) Connect battery ground cable.

