



## 9. Rear Oxygen Sensor

### A: REMOVAL

- 1) Disconnect battery ground cable.

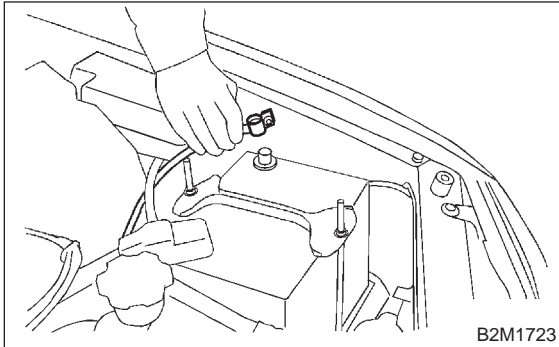

- 2) Disconnect connector from rear oxygen sensor.

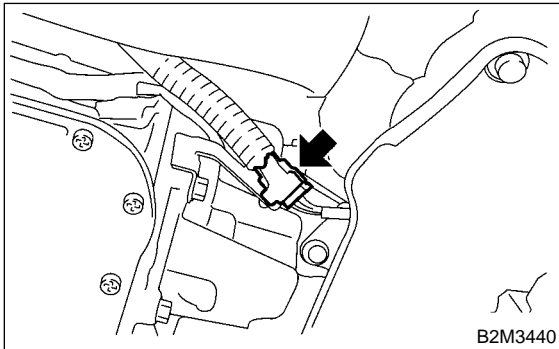


- 3) Lift-up the vehicle.
- 4) Apply SUBARU CRC or its equivalent to threaded portion of rear oxygen sensor, and leave it for one minute or more.

**SUBARU CRC (Part No. 004301003)**

- 5) Remove rear oxygen sensor.

#### CAUTION:

**When removing, do not force rear oxygen sensor in an unnatural way especially when exhaust pipe is cold, otherwise it will damage exhaust pipe.**

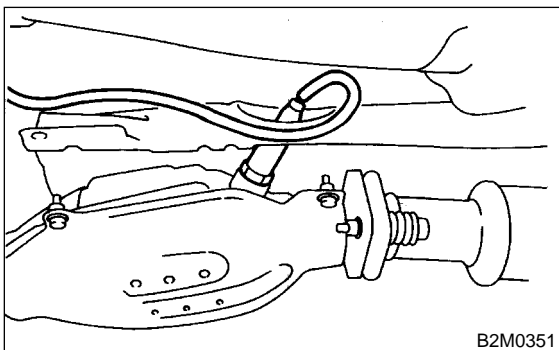

### B: INSTALLATION


- 1) Before installing rear oxygen sensor, apply anti-seize compound only to threaded portion of rear oxygen sensor to make the next removal easier.

#### CAUTION:

**Never apply anti-seize compound to protector of rear oxygen sensor.**

**Anti-seize compound:**


**SS-30 by JET LUBE**

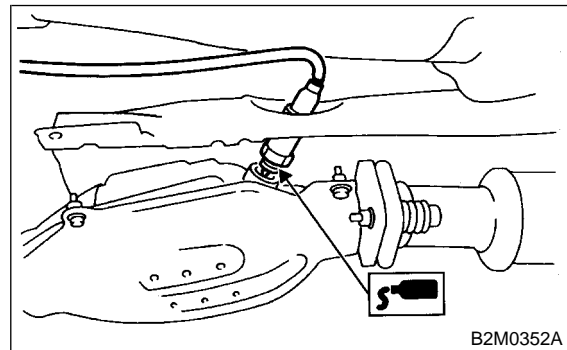


- 2) Install rear oxygen sensor.

#### Tightening torque:

**21±3 N·m (2.1±0.3 kg·m, 15.2±2.2 ft·lb)**

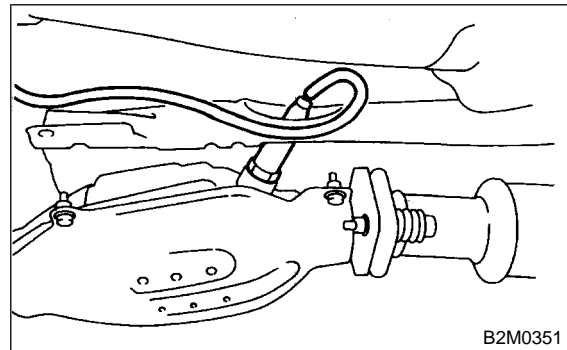

- 3) Connect connector to rear oxygen sensor.

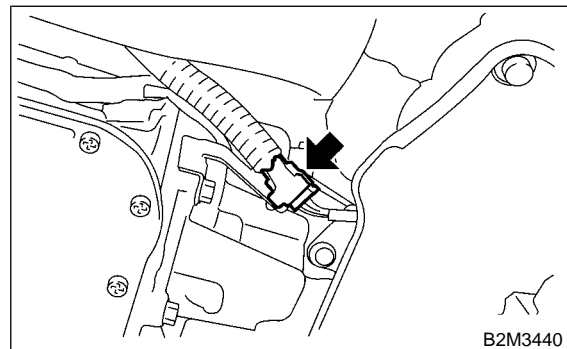

- 4) Lower the vehicle.