


*Condition: Throttle fully closed  
Throttle opening angle 0.00%  
Throttle sensor voltage 0.50 V*


## 11. Intake Manifold Pressure Sensor (MT vehicles)

### A: REMOVAL AND INSTALLATION

- 1) Disconnect battery ground cable.

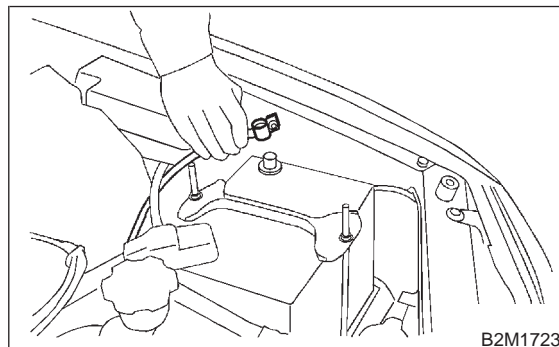

- 2) Remove idle air control solenoid valve. <Ref. to 2-7 [W15A1].>

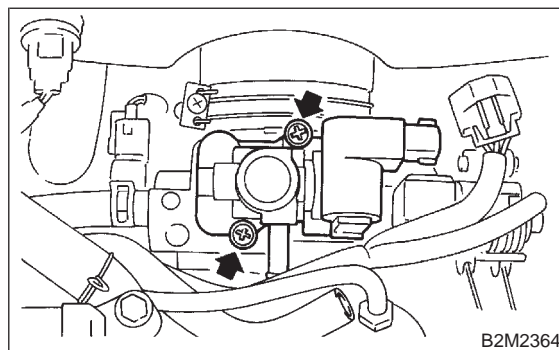

- 3) Disconnect connector from intake manifold pressure sensor.

