


15. Idle Air Control Solenoid Valve


A: REMOVAL AND INSTALLATION

1. MT VEHICLES


- 1) Disconnect battery ground cable.

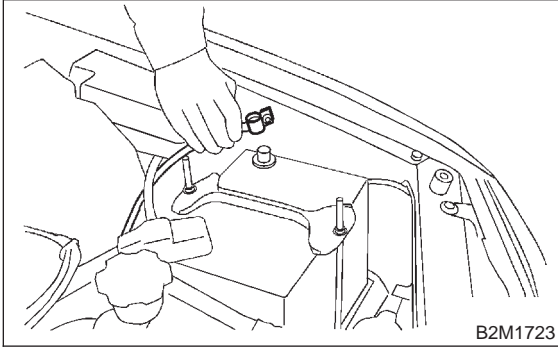


- 2) Disconnect connector from idle air control solenoid valve.

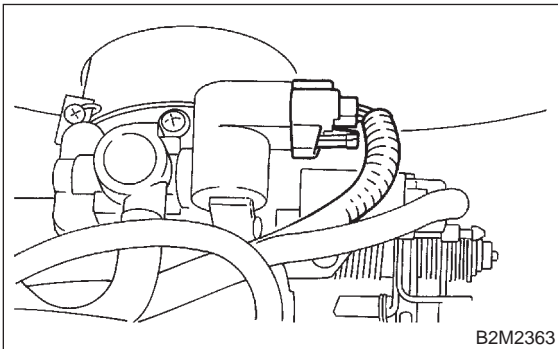

- 3) Disconnect air by-pass hose from idle air control solenoid valve.

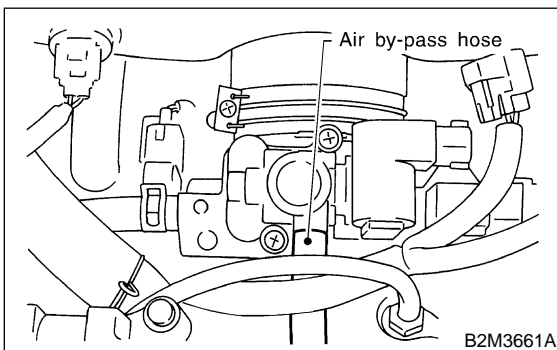

- 4) Remove idle air control solenoid valve from throttle body.

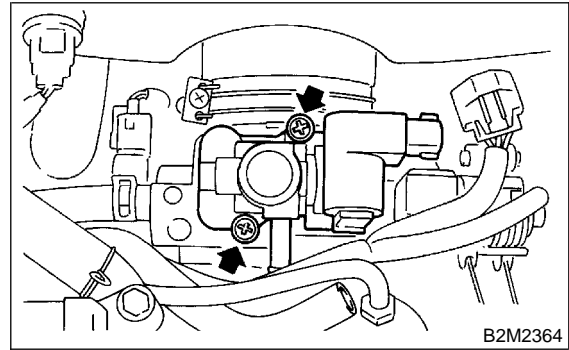


- 5) Installation is in the reverse order of removal.

CAUTION:
Replace gasket with a new one.

Tightening torque:

$6.0 \pm 0.8 \text{ N}\cdot\text{m}$ ($0.61 \pm 0.08 \text{ kg}\cdot\text{m}$, $4.4 \pm 0.6 \text{ ft}\cdot\text{lb}$)

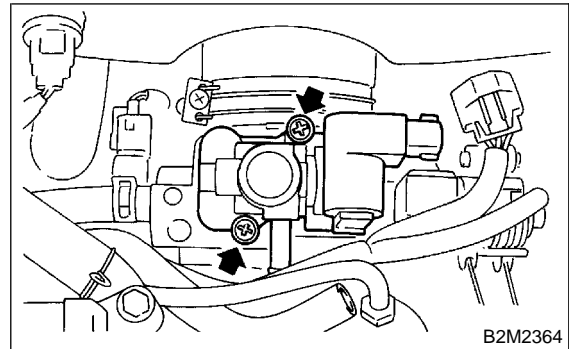

2. AT VEHICLES

- 1) Disconnect battery ground cable.

