


17. Purge Control Solenoid Valve

4) Installation is in the reverse order of removal.

Tightening torque:


$15.7 \pm 1.5 \text{ N}\cdot\text{m}$ ($1.6 \pm 0.15 \text{ kg}\cdot\text{m}$, $11.6 \pm 1.1 \text{ ft}\cdot\text{lb}$)

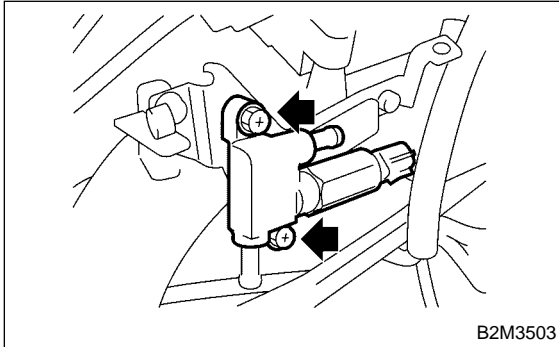


17. Purge Control Solenoid Valve

A: REMOVAL AND INSTALLATION

1) Disconnect battery ground cable.

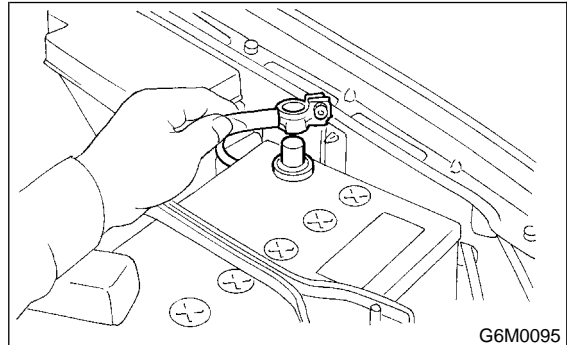

2) Remove bolt which installs purge control solenoid valve onto intake manifold.

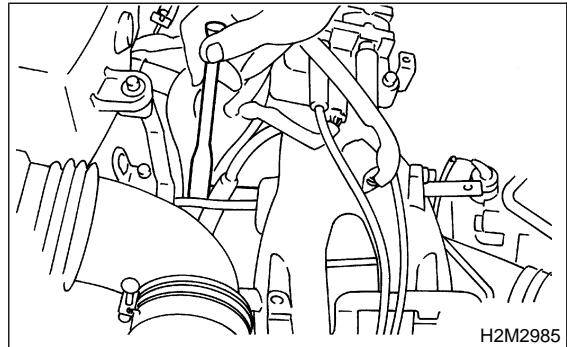

3) Take out purge control solenoid valve through the bottom of the intake manifold.

4) Disconnect connector and hoses from purge control solenoid valve.

