


21. Fuel Pump Relay


A: REMOVAL AND INSTALLATION

1) Disconnect battery ground cable.

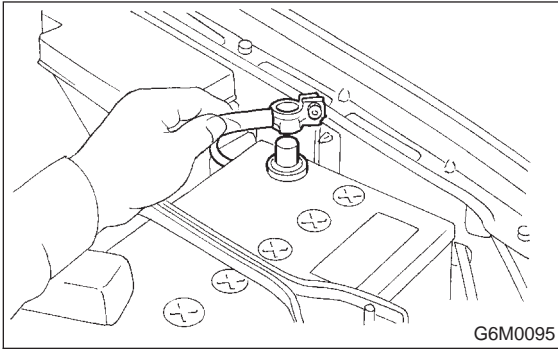

2) Remove lower cover. <Ref. to 5-4 [W1A0].>

3) Disconnect connector from fuel pump relay.

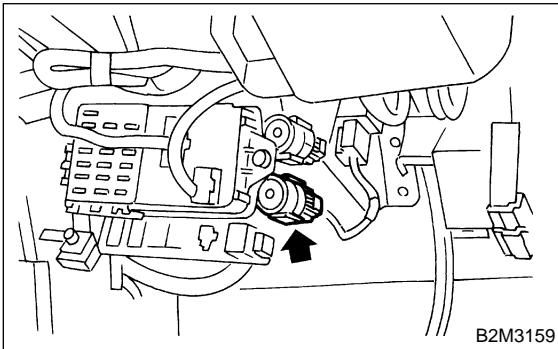

4) Remove fuel pump relay from mounting bracket.

5) Installation is in the reverse order of removal.