

1-5 [G5A0] 5. Engine Oil Filter

PERIODIC MAINTENANCE SERVICES


5. Engine Oil Filter

MAINTENANCE INTERVAL [Number of months or km (miles), whichever occurs first]																	
Months	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120
× 1,000 km	4.8	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192
× 1,000 miles	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120
	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R

A: REPLACEMENT

1) Remove oil filter with ST.

ST 498547000 OIL FILTER WRENCH

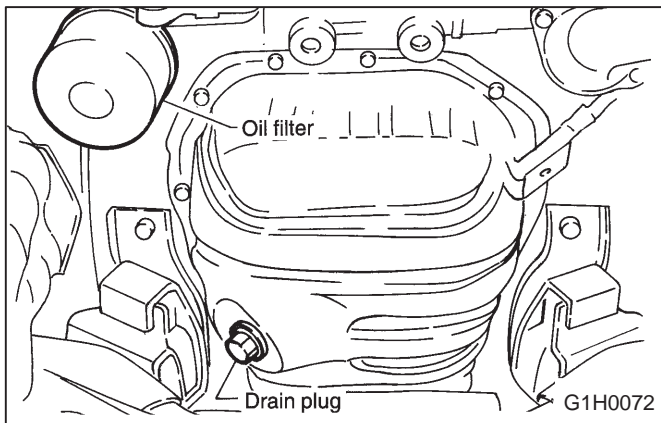

2) Get a new oil filter and apply a thin coat of engine oil to the seal rubber.

3) Install oil filter by turning it by hand, being careful not to damage seal rubber.

4) Tighten more (approximately 2/3 to 3/4 turn) after the seal rubber contacts the oil pump case. Do not tighten excessively, or oil may leak.

5) After installing oil filter, run engine and make sure that no oil is leaking around seal rubber.

NOTE:

The filter element and filter case are permanently joined; therefore, interior cleaning is not necessary.

6) Check the engine oil level. <Ref. to 1-5 [G4B0].>