

1-5 [G15A1] PERIODIC MAINTENANCE SERVICES

15. Inspect Brake Lines and Check Operation of Parking and Service Brake System

15. Inspect Brake Lines and Check Operation of Parking and Service Brake System

MAINTENANCE INTERVAL																	
[Number of months or km (miles), whichever occurs first]																	
Months	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120
×1,000 km	4.8	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192
×1,000 miles	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120
			P		P		P		P		P		P		P		P



A: INSPECTION

1. BRAKE LINE

- 1) Check scratches, swelling, corrosion and/or traces of fluid leakage on brake hoses or pipe joints.
- 2) Check the possibility of adjacent parts interfering with brake pipes/hoses during driving, and loose connections/clamps.
- 3) Check any trace of fluid leakage, scratches, etc. on master cylinder, wheel cylinder and pressure control valve.

NOTE:

When the brake fluid level in the reservoir tank is lower than the specified limit, the brake fluid warning light on the combination meter will come on.

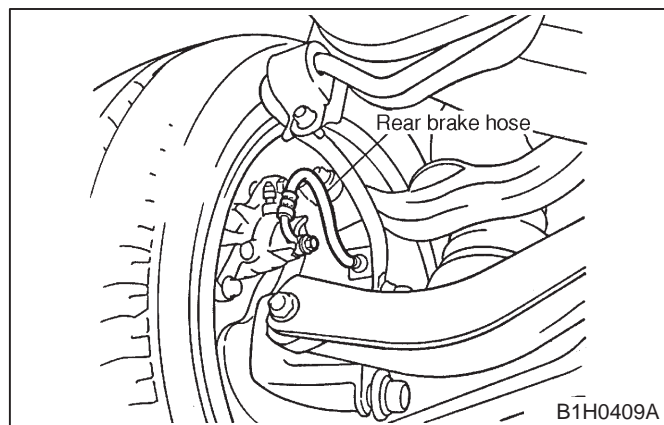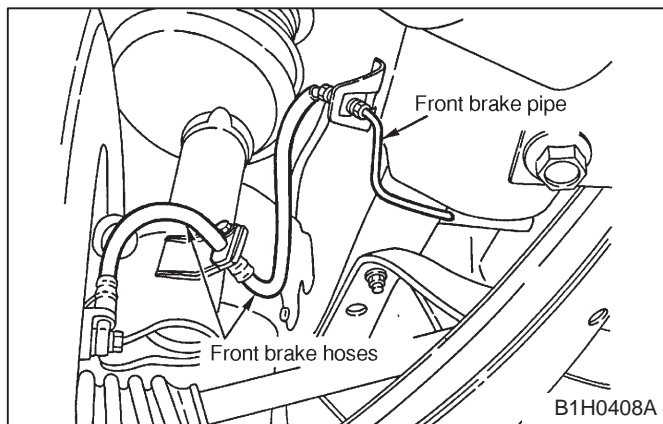


B: CHECKING

1. SERVICE BRAKE

- 1) Check the free play of brake pedal with a force of less than 10 N (1 kg, 2 lb).

Brake pedal free play:

1 — 3 mm (0.04 — 0.12 in)

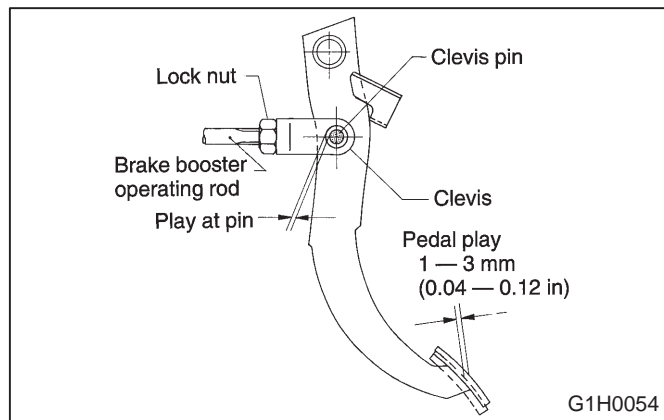

PERIODIC MAINTENANCE SERVICES**[G15B2] 1-5****15. Inspect Brake Lines and Check Operation of Parking and Service Brake System**

2) If the free play is out of specifications above, adjust the brake pedal as follows:


(1) Be sure engine is off. (No vacuum is applied to brake booster.)

(2) There should be play between brake booster clevis and pin at brake pedal installing portion.

[Depress brake pedal pad with a force of less than 10 N (1 kg, 2 lb) to a stroke of 1 to 3 mm (0.04 to 0.12 in).]

(3) Depress the surface of brake pad by hand.


(4) If there is no free play between clevis pin and clevis, turn brake switch adjusting nut until the clearance between stopper and screw of brake switch becomes 0.3 mm (0.01 in).

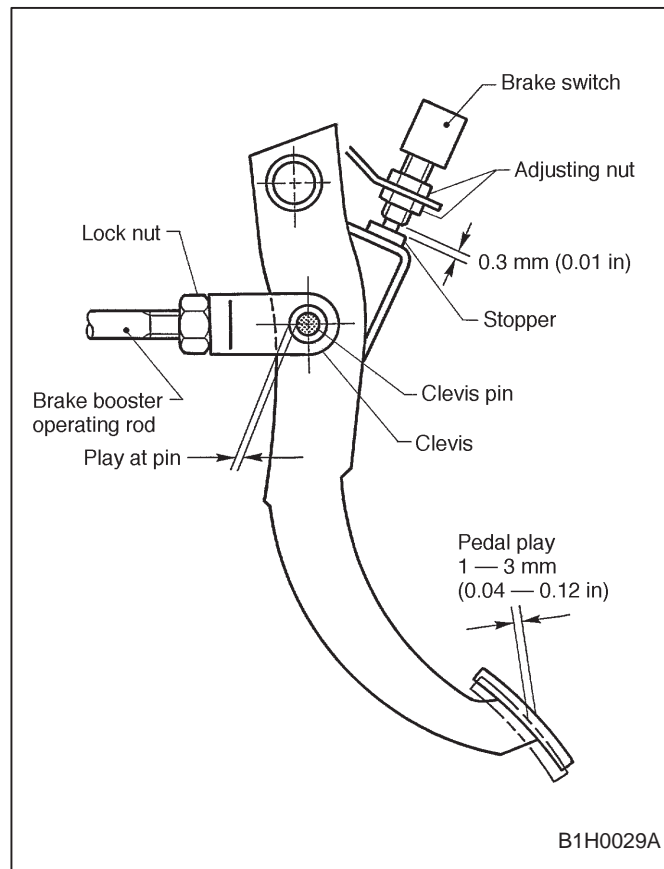

3) Check the pedal stroke.
While the engine is idling, depress the brake pedal with a 490 N (50 kg, 110 lb) load and

measure the distance between the brake pedal and steering wheel. With the brake pedal released, measure the distance between the pedal and steering wheel again. The difference between the two measurements must be less than 95 mm (3.74 in). If the distance is more than specified, there is a possibility air is in the inside of the hydraulic unit.

**Brake pedal reserve distance: A
more than 95 mm (3.74 in)/
490 N (50 kg, 110 lb)**

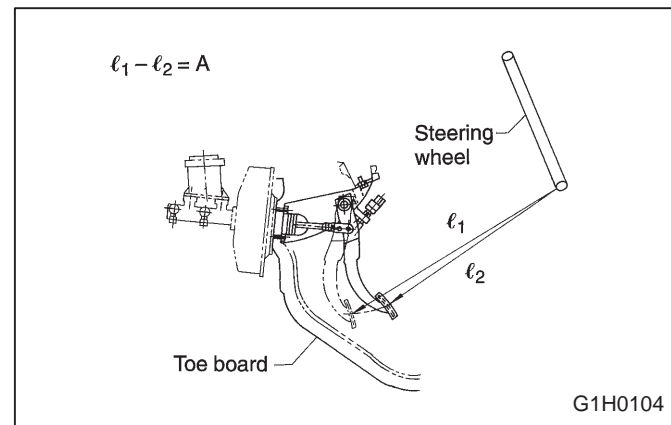

4) Check to see if air is in the hydraulic brake line by the feel of pedal operation. If air appears to exist in the line, bleed it from the system.

5) Check for even operation of all brakes, using a brake tester or by driving the vehicle for a short distance on a straight road.

2. PARKING BRAKE SYSTEM

1) Operation of parking brake is normal if is applied at sixth notch of ratchet when brake lever is pulled by force of about 196 N (20 kg, 44 lb). Total number of the notches is 21.

**Parking brake lever stroke:
7 to 8th notch/196 N (20 kg, 44 lb)**


2) Parking brake should be adjusted after adjusting the shoe clearance of rear brakes.

3) Remove rear console cover.

4) Adjust parking brake lever by turning adjuster (double nut) (A) until parking brake lever stroke is set at 7 to 8 notches with operating force of 196 N (20 kg, 44 lb).

1-5 [G15B3] PERIODIC MAINTENANCE SERVICES

15. Inspect Brake Lines and Check Operation of Parking and Service Brake System

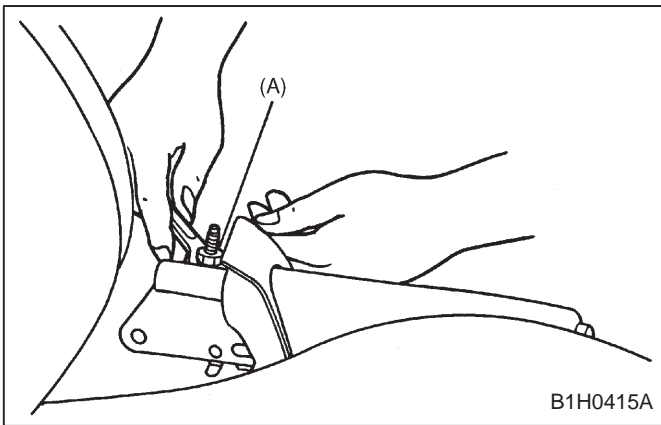

5) Check vacuum hose for cracks or other damage.

NOTE:

When installing the vacuum hose on the engine and brake booster, do not use soapy water or lubricating oil on their connections.

6) Check vacuum hose to make sure it is tight and secure.

3. BRAKE SERVO SYSTEM

1) With the engine off, depress the brake pedal several times applying the same pedal force: Make sure the travel distance should not change.

2) With the brake pedal depressed, start the engine: Make sure the pedal should move slightly toward the floor.

3) With the brake pedal depressed, stop the engine and keep the pedal depressed for 30 seconds: Make sure the pedal height should not change.

4) Check valve is built into vacuum hose. Disconnect vacuum hose to inspect function of check valve.

Blow air into vacuum hose from its brake booster side end: Air must flow out of engine side end of hose. Next blow air into hose from engine side: Air should not flow out of hose.

Replace both check valve and vacuum hose if check valve is faulty. Engine side of vacuum hose is indicated by marking "ENGINE" as shown.

