

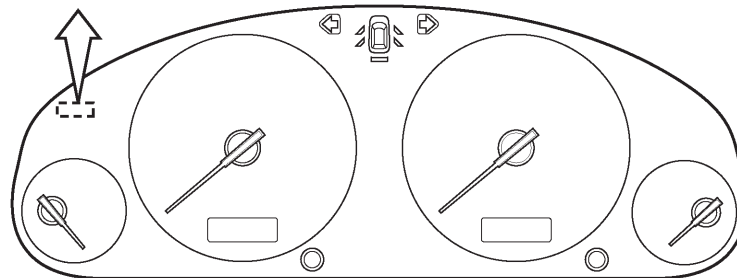
1-5 [G19A0] PERIODIC MAINTENANCE SERVICES**19. Supplemental Restraint System (Airbag)****19. Supplemental Restraint System (Airbag)**

MAINTENANCE INTERVAL																	
[Number of months or km (miles), whichever occurs first]																	
Months	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120
×1,000 km	4.8	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192
×1,000 miles	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120
Inspect every 10 years																	

A: INSPECTION

Check the airbag system in accordance with the result of the self-diagnosis. <Ref. to 5-5 [T4A0].>

1) Ensure that airbag connectors are connected. If not, properly connect (also double lock the connector). When the ignition switch is turned ON with the connector(s) disconnected, the airbag warning light blinks to identify the fault.

AIR BAG

B5H0633

2) Turn the ignition switch ON, and connect the airbag diagnosis terminal of the service connector (located below lower cover) to the ground terminal.

3) The warning light blinks to indicate a trouble code (a fault is identified). When the airbag system is in good order (no trouble codes are stored in the memory), the warning light blinks on and off at 0.6 second intervals (as long as the diagnosis terminal is connected to the ground terminal).

4) When the warning light indicates a trouble code, check the airbag system in accordance with the troubleshooting procedure. <Ref. to 5-5 [T4A0].>