


## U: SECURITY SYSTEM

### CHECK POINTS


1. **Front right, front left, rear right and rear left door switches**
2. **Rear gate switch**
3. **Impact sensor**

- 1) Open all the door windows fully.
- 2) Remove the key from the ignition switch and close all the doors including rear gate (wagon).
- 3) Press the "LOCK/ARM" button on the transmitter momentarily once and check if all the doors are locked, the horn chirps once, the parking lights flash once and the security indicator light flashes slowly to ensure that the security system has been brought into the arming state.

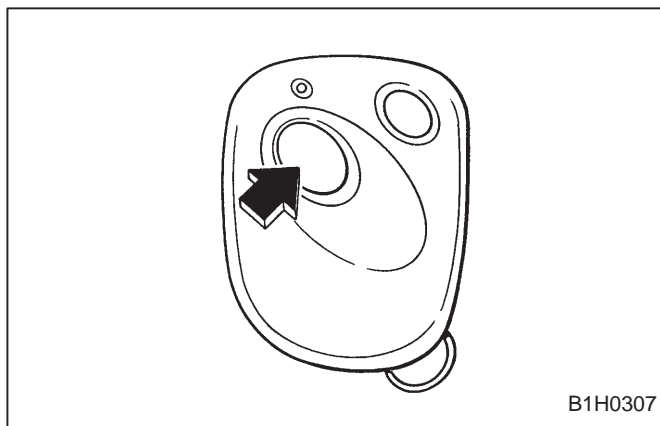

- 4) Press the "UNLOCK/DISARM" button on the transmitter momentarily once and check if the driver's door is unlocked, the horn chirps twice,

the parking lights flash twice, the dome light illuminates and the security indicator light goes off to ensure that the system has been brought into the disarming state.

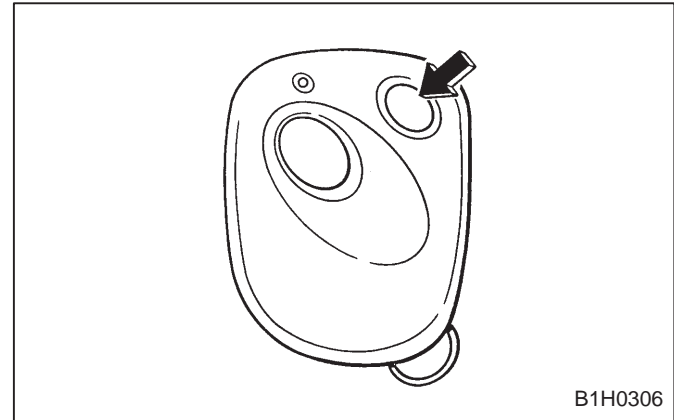

- 5) Press the "UNLOCK/DISARM" button on the transmitter momentarily once again and check if all the doors including the rear gate on wagon are unlocked.
- 6) Press the "LOCK/ARM" button on the transmitter a little bit of time (approx. 1.5 sec.) and check if a panicking condition occurs; the horn sounds continuously, the parking lights flash and the security indicator light flashes rapidly. Also, check if that condition lasts for 30 seconds or until any button of the transmitter is pressed.
- 7) Press the "LOCK/ARM" button on the transmitter momentarily once with one of the doors including the rear gate (wagon) open and check if the horn chirps three times to warn of a door ajar. Then, bring all doors including the rear gate (wagon) in closed condition and check if the arming condition is brought about; all the doors are locked, the horn chirps once and the parking lights flash once.
- 8) Press the "LOCK" side of the power door locking switch with any one of the doors including the rear gate (wagon) open. Then, bring all the doors including the rear gate (wagon) in the closed condition and check if all the doors are locked, the horn chirps once and the parking lights flash once to ensure that the security system has been brought into the arming state.