5. Suspension Tools

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
(1) (1) (2) (2) (2) (2) (2) (2) (3) (4) (4)	927380002	ADAPTER	Used as an adapter for camber & caster gauge when measuring camber and caster. (1) 28199AC000 PLATE (2) 28199AC010 BOLT
B1H0244	927680000	INSTALLER & REMOVER	Used for replacing transverse link bushing (Front).
B1H0421	20099AE000	INSTALLER & REMOVER	Used for replacing link rear bushing.
B1H0422	20099AE010	INSTALLER & REMOVER	Used for replacing link upper bushing.
B1H0423	20099AE020	INSTALLER & REMOVER	Used for replacing rear arm front bushing.

31

1-6 [G500]5. Suspension Tools

SPECIAL TOOLS

20099AE040 INSTALLER & REMOVER Used for replacing rear arm rear bushing. B1H0424 20099AE030 HELPER SOCKET Used for replacing helper. B1H0425 20099AE030 HELPER SOCKET Used for replacing helper. B1H0425 927760000 STRUT MOUNT Used for disassembling and assembling strut and shock mount. B1H0427 927760000 STRUT MOUNT Used for disassembling and assembling strut and shock mount.	ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
WRENCH WRENCH B1H0425 927760000 STRUT MOUNT Used for disassembling and assembling strut and shock mount. Visit of the struct of the	B1H0424	20099AE040		Used for replacing rear arm rear bushing.
SOCKET and shock mount.	B1H0425	20099AE030		Used for replacing helper.
	В1H0247	927760000		Used for disassembling and assembling strut and shock mount.