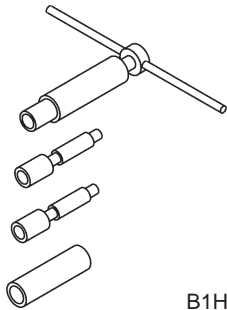
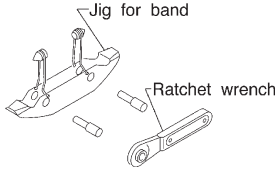
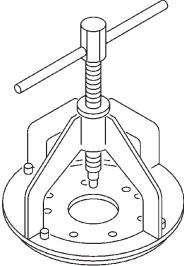
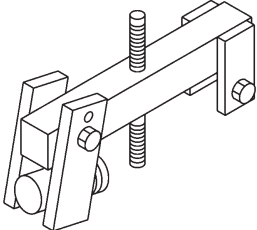
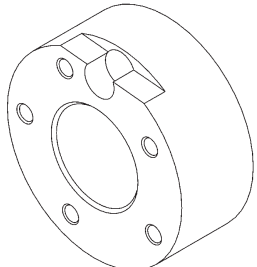


SPECIAL TOOLS

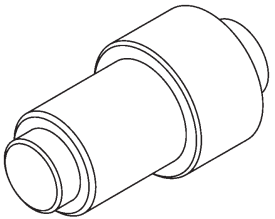
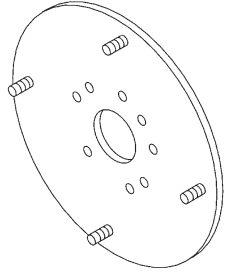
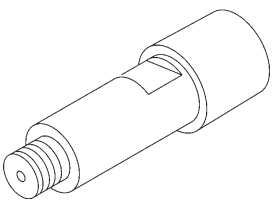
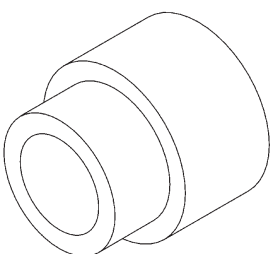
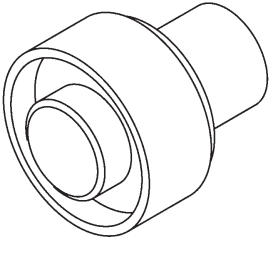
[G600] 1-6
6. Wheels and Axles Tools

6. Wheels and Axles Tools

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p>B1H0145</p>	922431000	AXLE SHAFT INSTALLER	<ul style="list-style-type: none"> Used for installing axle shaft into housing. Used with ADAPTER (927390000).
 <p>Jig for band Ratchet wrench</p> <p>B1H0146A</p>	925091000	BAND TIGHTENING TOOL	Used for tightening boot band.
 <p>H1H0503</p>	926470000	AXLE SHAFT PULLER	Used for removing axle shaft.
 <p>G1H0250</p>	927060000	HUB REMOVER	<ul style="list-style-type: none"> Used for removing front hub. Used with HUB STAND (927080000).
 <p>B1H0248</p>	927080000	HUB STAND	Used for disassembling and assembling hub bolt in hub.

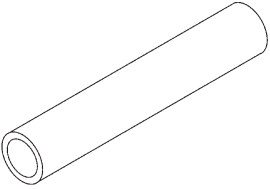
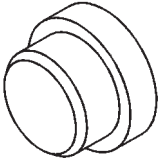
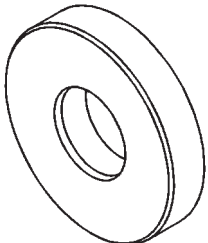
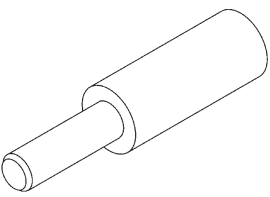
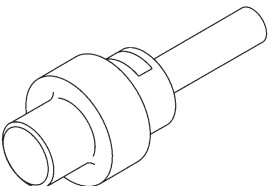
1-6 [G600]
6. Wheels and Axles Tools

SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p>G1H0252</p>	927100000	BEARING PULLER	<ul style="list-style-type: none"> Used for disassembling and assembling front housing bearing. Used with HOUSING STAND (927400000).
 <p>B1H0249</p>	927140000	AXLE SHAFT PULLER PLATE	Same as plate 2 included in AXLE SHAFT PULLER (926470000).
 <p>B1H0250</p>	927390000	ADAPTER	Used as an adapter for AXLE SHAFT INSTALLER (922431000).
 <p>B1H0251</p>	927400000	HOUSING STAND	<ul style="list-style-type: none"> Used for disassembling and assembling front housing bearing. Used with BEARING PULLER (927100000).
 <p>G1H0256</p>	927410000	OIL SEAL INSTALLER	<ul style="list-style-type: none"> Used for installing oil seal into front housing. Used with HOUSING STAND (927400000).

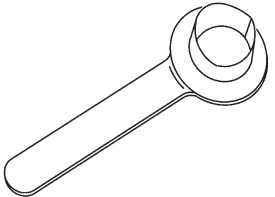
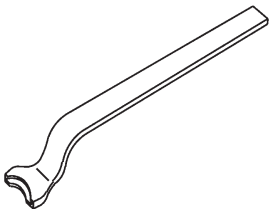
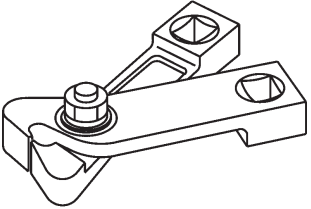
SPECIAL TOOLS

[G600] 1-6
6. Wheels and Axles Tools

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p>B1H0241</p>	398507703	DUMMY COLLAR	Used for removing hub COMPL from hub unit.
 <p>B1H0428</p>	399520105	SEAT	Used for removing inner race from hub COMPL.
 <p>B1H0429</p>	28499AE000	BEARING SPACER	Used for installing hub unit into hub COMPL.
 <p>B1H0255</p>	927120000	HUB INSTALLER	Used for installing hub.
 <p>B1H0256</p>	927450000	HUB INSTALLER	<ul style="list-style-type: none"> • Used for installing hub unit into hub COMPL. • Used with BEARING SPACER (28499AE000) and HUB STAND (927080000).

1-6 [G600]
6. Wheels and Axles Tools

SPECIAL TOOLS

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 G1H0303	28099PA090	OIL SEAL PROTECTOR	<ul style="list-style-type: none"> • Used for installing rear drive shaft into rear differential. • For protecting oil seal.
 G1H0338	28099PA100	DRIVE SHAFT REMOVER	Used for removing rear drive shaft from rear differential.
 B1H0272	28099AC000	BOOT BAND PLIER	Used for tightening front BJ boot band.