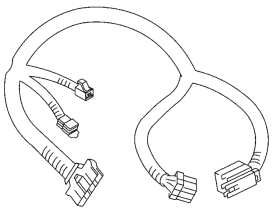 
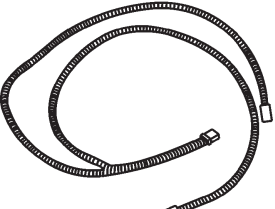 
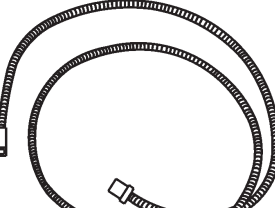 
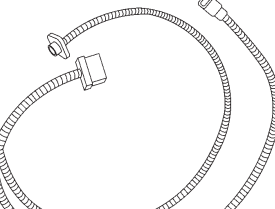 
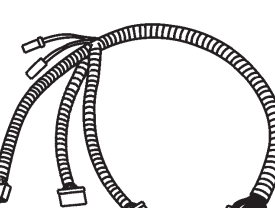 

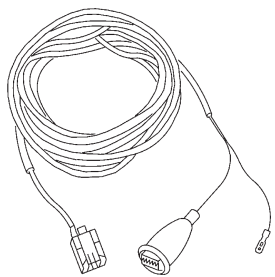 
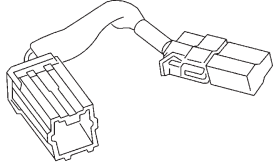 


1-6 [G1000]**SPECIAL TOOLS****10. Supplemental Restraint System Tools****10. Supplemental Restraint System Tools**

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p>G1H0284</p>	98299PA000	TEST HARNESS A	Used for checking the supplemental restraint system.
 <p>S1H0002</p>	98299FC010	TEST HARNESS F	Used for checking the supplemental restraint system.
 <p>S1H0003</p>	98299FC020	TEST HARNESS G	Used for checking the supplemental restraint system.
 <p>S1H0101</p>	98299FA030	TEST HARNESS H	Used for checking the supplemental restraint system.
 <p>B1H0469</p>	98299FC041	TEST HARNESS I2	Used for checking the supplemental restraint system.

SPECIAL TOOLS**[G1000] 1-6**

10. Supplemental Restraint System Tools

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p>S1H0028</p>	98299FC030	ADAPTER A (DEPLOYMENT)	<ul style="list-style-type: none"> • Used for deploying the airbag module. • Used with DEPLOYMENT TOOL (98299PA030).
 <p>G1H0287</p>	98299PA030	DEPLOYMENT TOOL	<ul style="list-style-type: none"> • Used for deploying the airbag module. • Used with ADAPTER A (DEPLOYMENT) (98299FC030).
 <p>G1H0389</p>	98299PA040	AIR BAG RESISTOR	Used for checking the supplemental restraint system.