


## 9. Parking Brake Cable

### A: REPLACEMENT

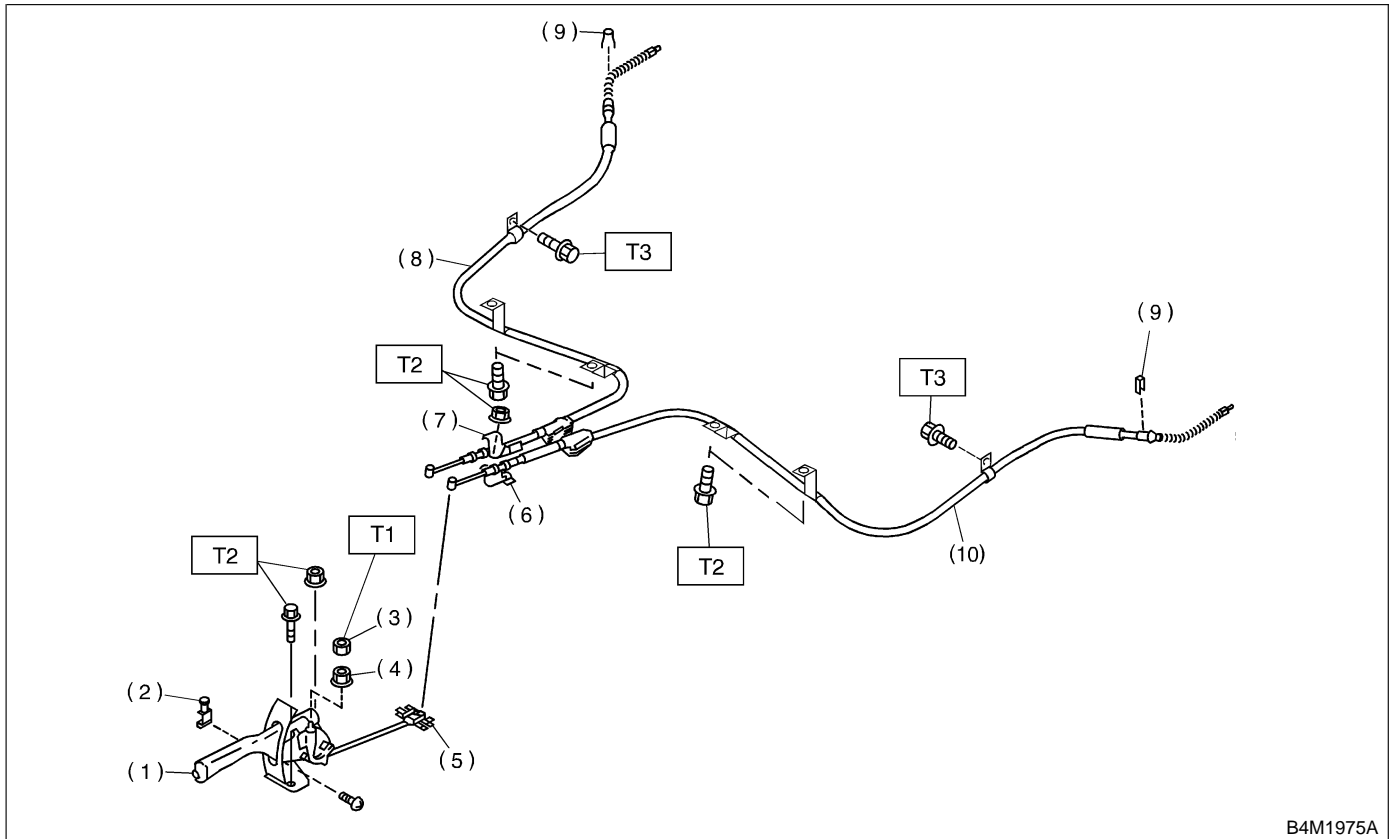

- |                          |  |
|--------------------------|--|
| (1) Parking brake lever  | (7) Clamp                              |
| (2) Parking brake switch | (8) Parking brake cable RH             |
| (3) Lock nut             | (9) Clamp (Rear disc brake model only) |
| (4) Adjusting nut        | (10) Parking brake cable LH            |
| (5) Equalizer            |  |
| (6) Bracket              |  |

**Tightening torque: N-m (kg-m, ft-lb)**

**T1: 5.9±1.5 (0.60±0.15, 4.3±1.1)**

**T2: 18±5 (1.8±0.5, 13.0±3.6)**

**T3: 32±10 (3.3±1.0, 24±7)**

- 1) Lift-up vehicle.
- 2) Remove rear tires and wheels.
- 3) Remove rear cushion.
- 4) Remove console box from front floor.
- 5) Loosen parking cable adjusting nut and console bracket.
- 6) Remove parking brake lever.

- 7) Unbend parking brake lever pawls and remove cable.

