



5. Filter

A: REMOVAL AND INSTALLATION

- 1) Remove glove box. <Ref. to 5-4 [W1A0].>
- 2) Disconnect resistor connector (a) and then remove cover (b) from the cooling unit (c) by removing the four clips (d).

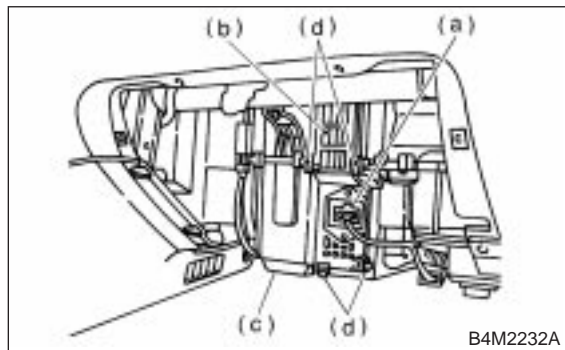

- 3) Pull out filter (a).

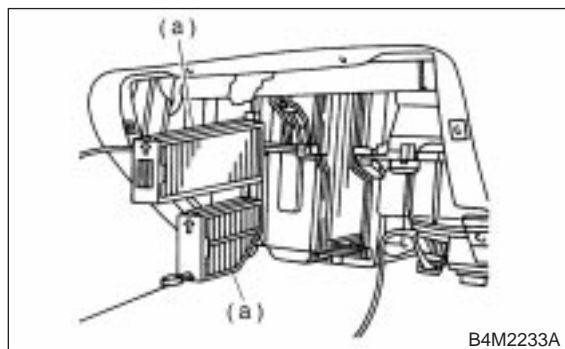

- 4) Installation is in the reverse order of removal.


NOTE:

- The passenger compartment side of each filter is marked with an arrow. Ensure the arrow points up.
- Ensure each filter assembly's tongues and grooves fit the corresponding cooling unit and matching filter tongues and grooves.
- Ensure no air leaks from the cooling unit through the cover.

- 5) Fill in the maintenance label with the replacement date and mileage.

NOTE:

Install maintenance label (a) on the outside of the glove box as shown.

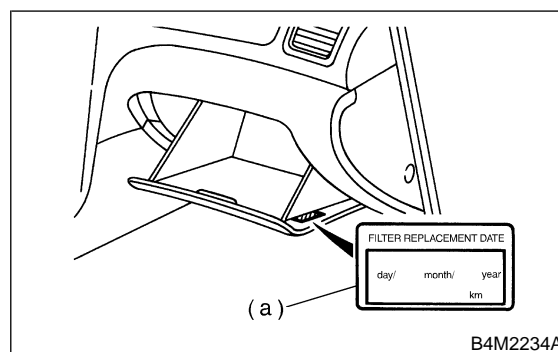

MEMO: