

FOREWORD

FOREWORD [M100]

1. How to use this manual

- The description of this area is provided with four types of titles different in size as shown below. The Title No. or Symbol prefixes each title in order that the construction of the article and the flow of explanation can be easily understood.

[Example of each title]


• Area title	M. Mechanism and Function
• Large title (Heading)	1. Fuel Line (to denote the main item of explanation)
• Medium title (Section)	A. GENERAL (to denote a derivative item of explanation)
• Small title (Sub-section)	1. 2000 cc MODEL (to denote a derivative item of explanation)

FOREWORD

FOREWORD [M100]

- The Title Index No. is indicated on the top left (or right) side of the page as the book is opened. This is useful for retrieving the necessary portion.

(Example of usage)

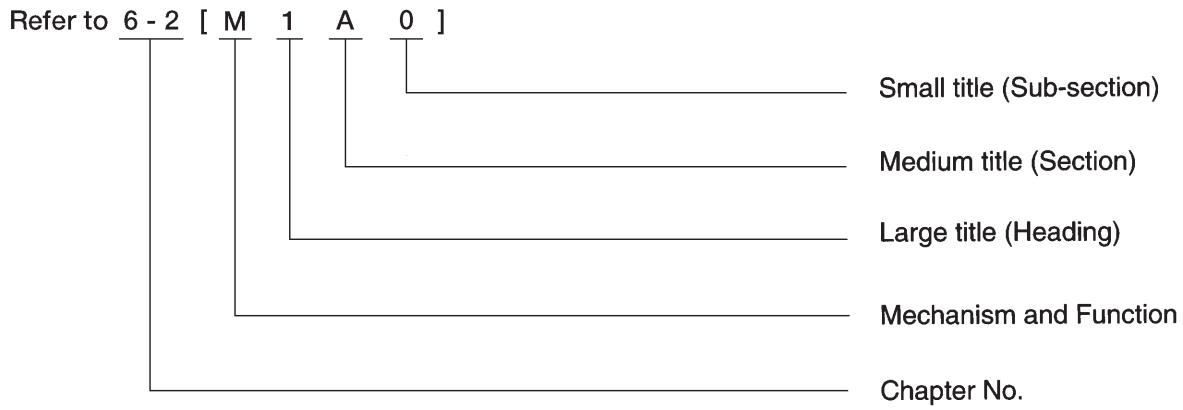

Title index No.

6-2 [M1A0] **BODY ELECTRICAL SYSTEM**

1. Cruise Control

1. Cruise Control

A. OPERATION

- The cruise control automatically controls car speed and allows the car to run at a constant speed without depressing the accelerator pedal.
- The cruise control unit compares the actual car speed detected by feedback signals from the speedometer with the speed set in the memory memorized when the set switch was turned on. A signal is then transmitted according to the difference between the two speeds. This signal is transmitted to the solenoid valve of the vacuum actuator located in the engine compartment. The movement of the actuator operates the throttle cam, thereby keeping the car speed constant.
- **Detection of car speed**

Large title

Medium title

H0H0009