


2-8 [M200]

2. Fuel Tank

MECHANISM AND FUNCTION


2. Fuel Tank

The fuel tank has two chambers, and is provided with a suction jet pump which transfers fuel from one chamber to another. Each fuel chamber has a built-in fuel sub level sensor.

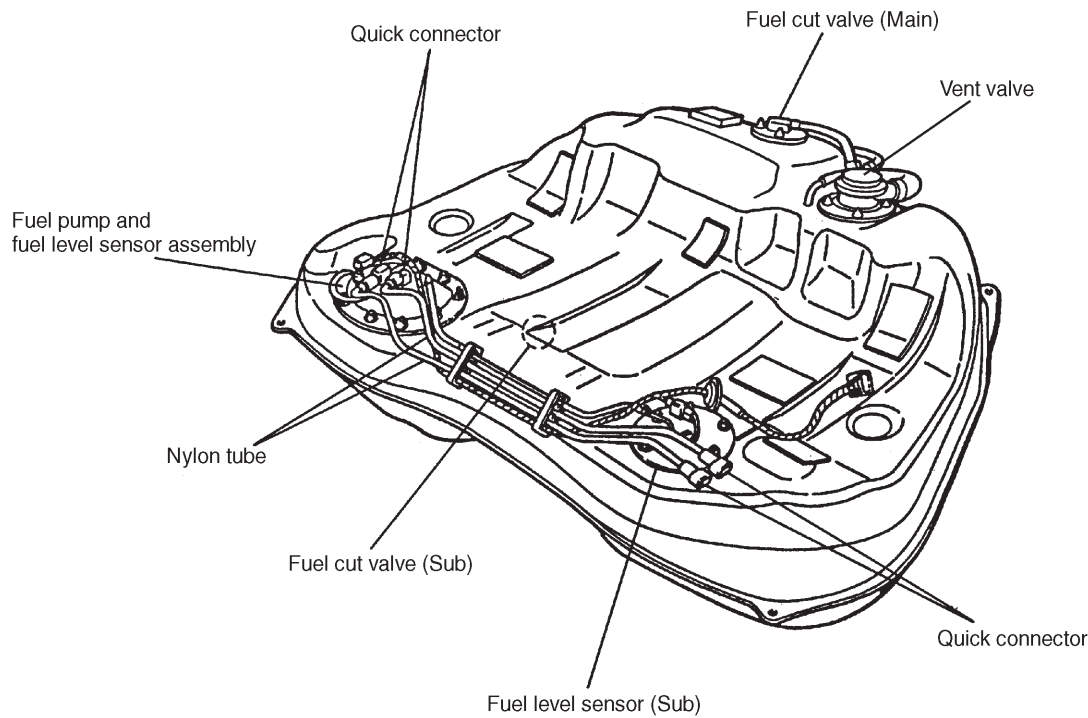

B2H3651A

The fuel tank is located under the rear seat and secured with hold down bands. The fuel tank utilizes a dented design to prevent interference with the rear differential.

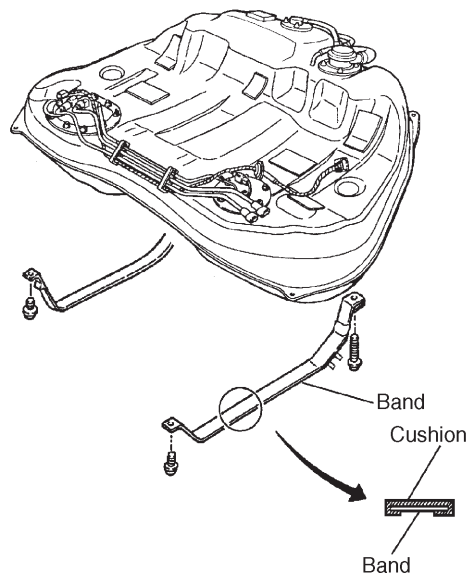

B2H3652A