


4. Fuel Sub Level Sensor

The fuel sub level sensor detects the level of fuel tank chamber located other side of fuel pump and act as a fuel distribution line when jet pump is in function to make the levels of both fuel tank chambers equal.

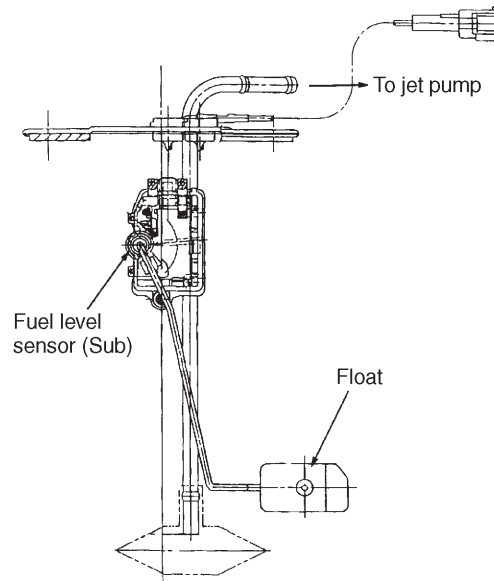

B2H2912A