


## 4-6 [M600] 6. Blower System

### MECHANISM AND FUNCTION

## 6. Blower System

Operation of the blower relay is controlled by turning ON and OFF the ignition switch. When the ignition switch is ON and the fan switch is operated from 1st to 4th speed, electric current from the battery goes through the blower motor, the resistor, the fan switch and ground. The resistor is switched by the position of the fan switch, and controls the blower motor speed from 1st to 4th.

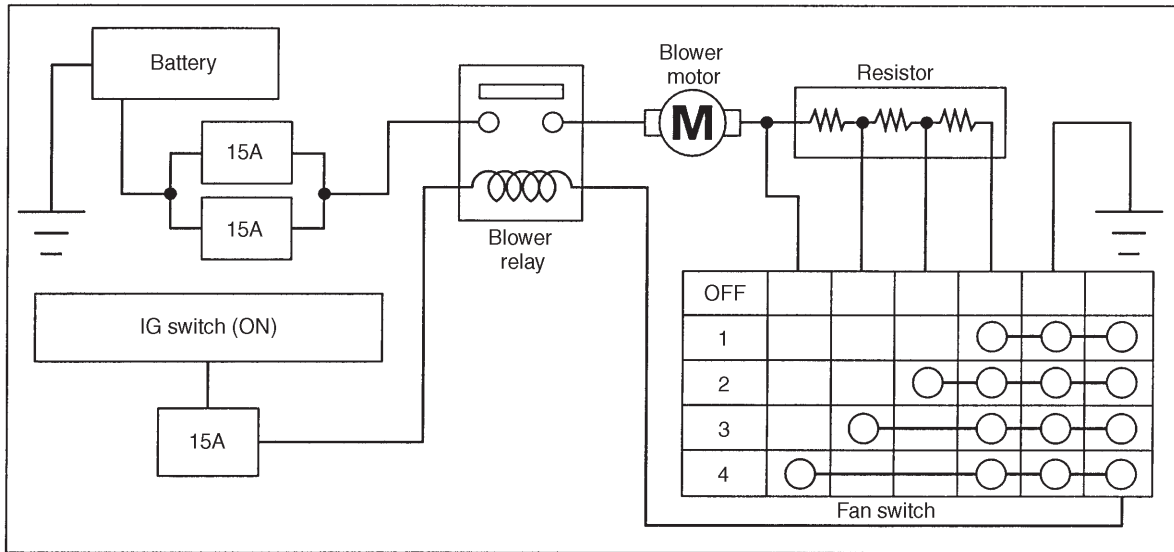

H4H1097A