
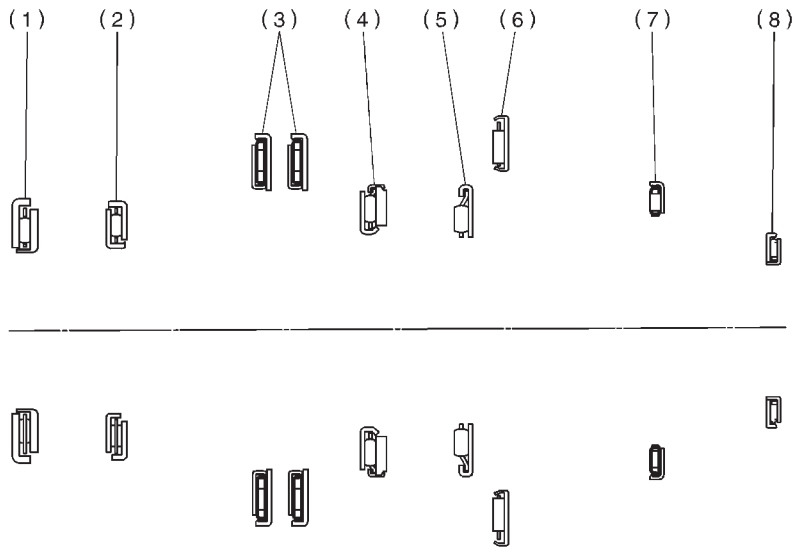


## 12. Location and Installing Direction of Thrust Needle Bearing

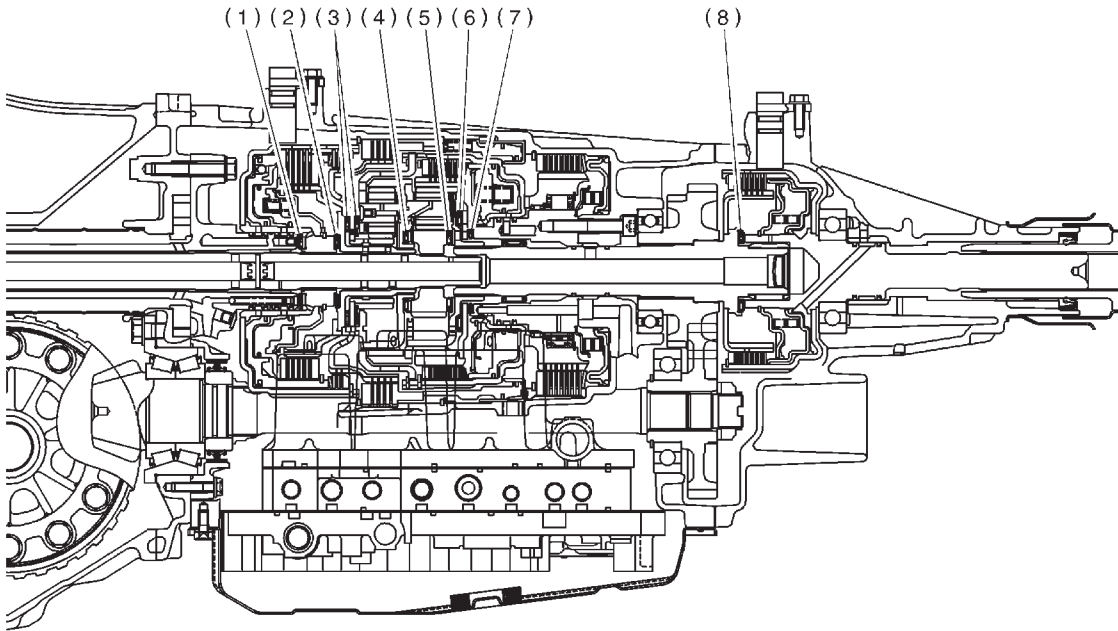

S3M0220A

# SPECIFICATIONS AND SERVICE DATA

[S1200] **3-2**

## 12. Location and Installing Direction of Thrust Needle Bearing

No.	Part Name	Part Number	Inside diameter mm (in)	Outside diameter mm (in)	Dimension mm (in)	Application
(1)	Thrust needle bearing	806528050 806528060 806528070 806528080 806528090 806528100	28.5 (1.122)	48 (1.89)	4.11 (0.1618) 4.3 (0.169) 4.5 (0.177) 4.7 (0.185) 4.9 (0.193) 5.1 (0.201)	Adjusting total end play
(2)	Thrust needle bearing	806530040	30 (1.18)	47 (1.85)	3.8 (0.150)	Place of high clutch
(3)	Thrust needle bearing	806551020	51 (2.01)	71 (2.80)	3.3 (0.130)	Place of front sun gear
(4)	Thrust needle bearing	806535120	35 (1.38)	53 (2.09)	4.8 (0.189)	Place of rear sun gear
(5)	Thrust needle bearing	806534060	35 (1.38)	53 (2.09)	3.3 (0.130)	Place of rear sun gear
(6)	Thrust needle bearing	806558030	58 (2.28)	78 (3.07)	2.8 (0.110)	Place of rear internal gear
(7)	Thrust needle bearing	806541020	39.7 (1.563)	54 (2.13)	3.6 (0.142)	Place of one-way clutch
(8)	Thrust needle bearing	806536020 806535030 806535040 806535050 806535060 806535070 806535090	36 (1.42)	53 (2.09)	3.8 (0.150) 4.0 (0.157) 4.2 (0.165) 4.4 (0.173) 4.6 (0.181) 4.8 (0.189) 5.0 (0.197)	Adjusting end play of transfer clutch