


5) Measure signal voltage indicated on oscilloscope.

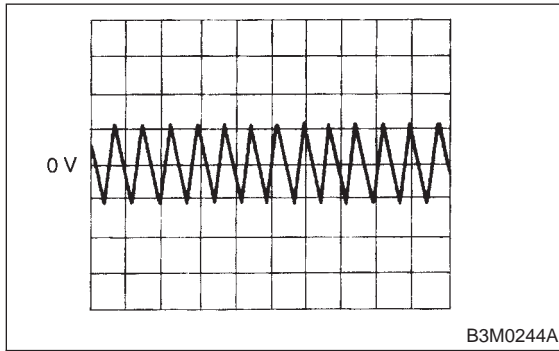

- CHECK** : **Is the signal voltage more than AC 1 V?**
- YES** : Even if "AT OIL TEMP" lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector or harness may be the cause. Repair harness or connector in the TCM and transmission.
- NO** : Go to step **8R11**.

**8R11 : CHECK POOR CONTACT.**

- CHECK** : **Is there poor contact in vehicle speed sensor 1 circuit?**
- YES** : Repair poor contact.
- NO** : Replace TCM. <Ref. to 3-2 [W23A0].>

## 9. Diagnostic Chart with Select Monitor

### A: BASIC DIAGNOSTIC CHART


If no trouble codes appear in the on-board diagnostics operation (although problems have occurred or are occurring), measure performance characteristics of sensors, actuators, etc., in the Subaru Select Monitor and compare with the "basic data" to determine the cause of problems.

- 1) Trouble occurs.
- 2) No trouble codes appear in on-board diagnostics operation.
- 3) Measure each item using Subaru Select Monitor.
- 4) Compare measured values with basic data.
- 5) Determine item which is outside basic data specifications.
- 6) Check sensor and actuator affected.

### B: BATTERY VOLTAGE

**9B1 : CHECK BATTERY VOLTAGE.**

- 1) Turn ignition switch to OFF.
- 2) Connect Subaru Select Monitor to data link connector.

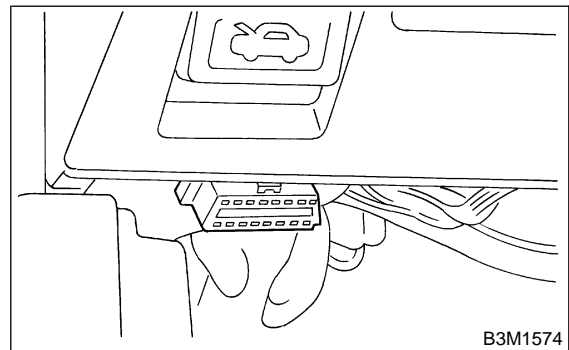

- 3) Start the engine, and engine idling after warm-up.
- 4) Turn Subaru Select Monitor switch to ON.
- 5) Read data of battery voltage using Subaru Select Monitor.

- Battery voltage applied to TCM.

- CHECK** : **Is voltage between 10 and 16 V?**
- YES** : Go to step VEHICLE SPEED SENSOR 1. <Ref. to 3-2 [T9C0].>
- NO** : Check battery voltage and specification of electrolyte, regulating voltage under no loads and generator (as a single unit).

**C: CHECK VEHICLE SPEED SENSOR 1.****9C1 : CHECK VEHICLE SPEED SENSOR 1.**

1) Lift-up the vehicle and place safety stand.

**CAUTION:**

**On AWD models, raise all wheels off ground.**

2) Read data of vehicle speed #1 using Subaru Select Monitor.

- Compare speedometer with Subaru Select Monitor indications.
- Vehicle speed is indicated in "MPH" or "km/h".

**NOTE:**

The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When AT control diagnosis is finished, perform the ABS memory clearance procedure of on-board diagnostics system. <Ref. to 4-4 [T6D2].>

**CHECK** : *Does the speedometer indication increase as the Subaru Select Monitor data increases?*

**YES** : Go to step VEHICLE SPEED SENSOR 2. <Ref. to 3-2 [T9D0].>

**NO** : Check vehicle speed sensor 1 circuit. <Ref. to 3-2 [T8R0].>

**D: CHECK VEHICLE SPEED SENSOR 2.****9D1 : CHECK VEHICLE SPEED SENSOR 2.**

Read data of vehicle speed #2 using Subaru Select Monitor.

- Compare speedometer with Subaru Select Monitor indications.
- Vehicle speed is indicated in "MPH" or "km/h".

**NOTE:**

The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When AT control diagnosis is finished, perform the ABS memory clearance procedure of on-board diagnostics system. <Ref. to 4-4 [T6D2].>

**CHECK** : *Does the speedometer indication increase as the Subaru Select Monitor data increases?*

**YES** : Go to step ENGINE SPEED SIGNAL. <Ref. to 3-2 [T9E0].>

**NO** : Check vehicle speed sensor 2 circuit. <Ref. to 3-2 [T8F0].>

**E: CHECK ENGINE SPEED SIGNAL.****9E1 : CHECK ENGINE SPEED SIGNAL.**

- 1) Turn A/C switch to OFF (with A/C models).
- 2) Warm-up the engine until engine coolant temperature is above 80°C (176°F).

**NOTE:**

If ambient temperature is below 0°C (32°F), drive the vehicle until the ATF reaches its operating temperature.

3) Read data of engine speed using Subaru Select Monitor.

- Engine speed is indicated in "rpm".

**NOTE:**

The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When AT control diagnosis is finished, perform the ABS memory clearance procedure of on-board diagnostics system. <Ref. to 4-4 [T6D2].>

**CHECK** : *Does the tachometer revolution increase as the Subaru Select Monitor revolution data increases?*

**YES** : Go to step ATF TEMPERATURE SENSOR. <Ref. to 3-2 [T9F0].>

**NO** : Check engine speed signal circuit. <Ref. to 3-2 [T8C0].>

**F: CHECK ATF TEMPERATURE SENSOR.****9F1 : CHECK AT OIL TEMP WARNING LIGHT.**

**CHECK** : *Does the AT OIL TEMP warning light remain on 2 seconds after the engine has been started?*

**YES** : Go to step 9F2.

**NO** : Check ATF temperature sensor and combination meter circuit. <Ref. to 3-2 [T8D0].>

**9F2 : CHECK ATF TEMPERATURE SENSOR.**

1) Read data of ATF temperature using Subaru Select Monitor.

- ATF temperature is indicated in “°F” or “°C”.
- 2) Warm-up the transmission until ATF temperature is above 80°C (176°F).

**NOTE:**

If ambient temperature is below 0°C (32°F), drive the vehicle until the ATF reaches its operating temperature.

3) Turn ignition switch to ON (engine OFF).

**CHECK** : *Does the ATF temperature change from 176°F (80°C)?*

**YES** : Go to step THROTTLE POSITION SENSOR. <Ref. to 3-2 [T9G0].>

**NO** : Check ATF temperature sensor circuit. <Ref. to 3-2 [T8D0].>

**G: CHECK THROTTLE POSITION SENSOR.****9G1 : CHECK INPUT SIGNAL FOR TCM.**

Read data of throttle position sensor using Subaru Select Monitor.

- Throttle position sensor input signal is indicated.

**CHECK** : *Is voltage between 0.3 and 0.7 V when the accelerator pedal is completely released?*

**YES** : Go to step 9G2.

**NO** : Check throttle position sensor circuit. <Ref. to 3-2 [T8E0].>

**9G2 : CHECK INPUT SIGNAL FOR TCM.**

**CHECK** : *Is voltage between 4.4 and 4.8 V when the accelerator pedal is completely depressed?*

**YES** : Go to step 9G3.

**NO** : Check throttle position sensor circuit. <Ref. to 3-2 [T8E0].>

**9G3 : CHECK INPUT SIGNAL FOR TCM.**

**CHECK** : *Does voltage decrease smoothly when the accelerator pedal is fully depressed and then fully released?*

**YES** : Go to step GEAR POSITION. <Ref. to 3-2 [T9H0].>

**NO** : Check throttle position sensor circuit. <Ref. to 3-2 [T8E0].>

**H: CHECK GEAR POSITION.****9H1 : CHECK GEAR POSITION.**

1) Lift-up the vehicle and place safety stand.

**CAUTION:**

**On AWD models, raise all wheels off ground.**

2) Start the engine.

3) Move select lever to “D”, and drive vehicle.

4) Read data of gear position using Subaru Select Monitor.

- Gear position is indicated.

**NOTE:**

The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When AT control diagnosis is finished, perform the ABS memory clearance procedure of on-board diagnostics system. <Ref. to 4-4 [T6D2].>

**CHECK** : *Does the transmission gear correspond to the gear which is shown on display?*

**YES** : Go to step LINE PRESSURE DUTY SOLENOID. <Ref. to 3-2 [T9I0].>

**NO** : Check shift solenoid 1 and shift solenoid 2 signal circuit. <Ref. to 3-2 [T8J0].> and <Ref. to 3-2 [T8K0].>

**I: CHECK LINE PRESSURE DUTY SOLENOID.****911 : CHECK OUTPUT SIGNAL EMITTED FROM TCM.**

1) Warm-up the transmission until ATF temperature is above 80°C (176°F).

**NOTE:**

If ambient temperature is below 0°C (32°F), drive the vehicle until the ATF reaches its operating temperature.

2) Stop the engine and turn ignition switch to ON (engine OFF).

3) Move selector lever to "N".

4) Read data of line pressure duty solenoid using Subaru Select Monitor.

- Line pressure duty solenoid is indicated in "%".

**CHECK** : *Does the Subaru Select Monitor indicate 100% when the accelerator pedal is completely released?*

**YES** : Go to step 912.

**NO** : Go to step 914.

**912 : CHECK OUTPUT SIGNAL EMITTED FROM TCM.**

**CHECK** : *Does the Subaru Select Monitor indicate between 10 and 20% when the accelerator pedal is completely depressed?*

**YES** : Go to step 913.

**NO** : Go to step 914.

**913 : CHECK OUTPUT SIGNAL EMITTED FROM TCM.**

**CHECK** : *Does the Subaru Select Monitor change smoothly when the accelerator pedal is fully depressed and then fully released?*

**YES** : Go to step LOCK-UP DUTY SOLENOID. <Ref. to 3-2 [T9J0].>

**NO** : Go to step 914.

**914 : CHECK THROTTLE POSITION SENSOR.****NOTE:**

For the diagnostics procedure on throttle position sensor circuit. <Ref. to 3-2 [T9G0].>

**CHECK** : *Is there any trouble in throttle position sensor circuit?*

**YES** : Repair or replace throttle position sensor circuit. <Ref. to 3-2 [T8E0].>

**NO** : Go to step 915.

**915 : CHECK ENGINE SPEED SIGNAL.****NOTE:**

For the diagnostics procedure on engine speed signal circuit. <Ref. to 3-2 [T9E0].>

**CHECK** : *Is there any trouble in engine speed signal circuit?*

**YES** : Repair or replace engine speed signal circuit. <Ref. to 3-2 [T8C0].>

**NO** : Go to step 916.

**916 : CHECK ATF TEMPERATURE SENSOR.****NOTE:**

For the diagnostics procedure on ATF temperature sensor circuit. <Ref. to 3-2 [T9F1].>

**CHECK** : *Is there any trouble in ATF temperature sensor circuit?*

**YES** : Repair or replace ATF temperature sensor circuit. <Ref. to 3-2 [T8D0].>

**NO** : Go to step 917.

**917 : CHECK INHIBITOR SWITCH.**

1) Turn ignition switch and Subaru Select Monitor to ON.

2) Read data of range switch using Subaru Select Monitor.

- Range switch is indicated in ON ⇔ OFF.

**CHECK** : *When each range is selected, does LED of the range switch on Subaru Select Monitor light up?*

**YES** : Go to step LOCK-UP DUTY SOLENOID. <Ref. to 3-2 [T9J0].>

**NO** : Check inhibitor switch circuit. <Ref. to 3-2 [T9T0].>

## J: CHECK LOCK-UP DUTY SOLENOID.

### 9J1 : CHECK OUTPUT SIGNAL EMITTED FROM TCM.

Read data of lock-up duty solenoid using Subaru Select Monitor.

- Lock-up duty solenoid is indicated in "%".

**CHECK** : **Does the Subaru Select Monitor indicate 5%?**

**YES** : Go to step **9J2**.

**NO** : Go to step **9J3**.

### 9J2 : CHECK OUTPUT SIGNAL EMITTED FROM TCM.

Move selector lever to "D" and slowly increase vehicle speed to 75 km/h (47 MPH).

NOTE:

The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When AT control diagnosis is finished, perform the ABS memory clearance procedure of on-board diagnostics system. <Ref. to 4-4 [T6D2].>

**CHECK** : **Does the Subaru Select Monitor indicate 95%?**

**YES** : Go to step TRANSFER DUTY SOLENOID. <Ref. to 3-2 [T9K0].>

**NO** : Go to step **9J3**.

### 9J3 : CHECK THROTTLE POSITION SENSOR.

NOTE:

For the diagnostics procedure on throttle position sensor circuit. <Ref. to 3-2 [T9G0].>

**CHECK** : **Is there any trouble in throttle position sensor circuit?**

**YES** : Repair or replace throttle position sensor circuit. <Ref. to 3-2 [T8E0].>

**NO** : Go to step **9J4**.

### 9J4 : CHECK VEHICLE SPEED SENSOR 1.

NOTE:

For the diagnostics procedure on vehicle speed sensor 1 circuit. <Ref. to 3-2 [T9C0].>

**CHECK** : **Is there any trouble in vehicle speed sensor 1 circuit?**

**YES** : Repair or replace vehicle speed sensor 1 circuit. <Ref. to 3-2 [T8R0].>

**NO** : Go to step **9J5**.

### 9J5 : CHECK VEHICLE SPEED SENSOR 2.

NOTE:

For the diagnostics procedure on vehicle speed sensor 2 circuit. <Ref. to 3-2 [T9D0].>

**CHECK** : **Is there any trouble in vehicle speed sensor 2 circuit?**

**YES** : Repair or replace vehicle speed sensor 2 circuit. <Ref. to 3-2 [T8F0].>

**NO** : Go to step **9J6**.

### 9J6 : CHECK ENGINE SPEED SIGNAL.

NOTE:

For the diagnostics procedure on engine speed signal circuit. <Ref. to 3-2 [T9E0].>

**CHECK** : **Is there any trouble in engine speed signal circuit?**

**YES** : Repair or replace engine speed signal circuit. <Ref. to 3-2 [T8C0].>

**NO** : Go to step **9J7**.

### 9J7 : CHECK INHIBITOR SWITCH.

Read data of range switch using Subaru Select Monitor.

- Range switch is indicated in ON ⇔ OFF.

**CHECK** : **When each range is selected, does LED of the range switch on Subaru Select Monitor light up?**

**YES** : Go to step TRANSFER DUTY SOLENOID. <Ref. to 3-2 [T9K0].>

**NO** : Check inhibitor switch circuit. <Ref. to 3-2 [T9T0].>

## K: CHECK TRANSFER DUTY SOLENOID.

### 9K1 : CHECK OUTPUT SIGNAL EMITTED FROM TCM.

- 1) Turn ignition switch to ON (engine OFF).
- 2) Move selector lever to "D".
- 3) Read data of transfer duty solenoid using Subaru Select Monitor.
  - Transfer duty solenoid is indicated in "%".

**CHECK** : *Does the duty ratio change in response to the depress-release motion of the accelerator pedal?*

**YES** : Go to step 9K2.

**NO** : Go to step 9K3.

### 9K2 : CHECK OUTPUT SIGNAL EMITTED FROM TCM.

- 1) Turn ignition switch to OFF.
- 2) Set FWD mode.
- 3) Turn ignition switch to ON (engine OFF).

**CHECK** : *Does the Subaru Select Monitor indicate 95%?*

**YES** : Go to step THROTTLE POSITION SENSOR POWER SUPPLY. <Ref. to 3-2 [T9L0].>

**NO** : Go to step 9K3.

### 9K3 : CHECK THROTTLE POSITION SENSOR.

#### NOTE:

For the diagnostics procedure on throttle position sensor circuit, <Ref. to 3-2 [T9G0].>

**CHECK** : *Is there any trouble in throttle position sensor circuit?*

**YES** : Repair or replace throttle position sensor circuit. <Ref. to 3-2 [T8E0].>

**NO** : Go to step 9K4.

### 9K4 : CHECK VEHICLE SPEED SENSOR 1.

#### NOTE:

For the diagnostics procedure on vehicle speed sensor 1 circuit. <Ref. to 3-2 [T9C0].>

**CHECK** : *Is there any trouble in vehicle speed sensor 1 circuit?*

**YES** : Repair or replace vehicle speed sensor 1 circuit. <Ref. to 3-2 [T8R0].>

**NO** : Go to step 9K5.

### 9K5 : CHECK VEHICLE SPEED SENSOR 2.

#### NOTE:

For the diagnostics procedure on vehicle speed sensor 2 circuit. <Ref. to 3-2 [T9D0].>

**CHECK** : *Is there any trouble in vehicle speed sensor 2 circuit?*

**YES** : Repair or replace vehicle speed sensor 2 circuit. <Ref. to 3-2 [T8F0].>

**NO** : Go to step 9K6.

### 9K6 : CHECK ATF TEMPERATURE SENSOR.

#### NOTE:

For the diagnostics procedure on ATF temperature sensor circuit. <Ref. to 3-2 [T9F0].>

**CHECK** : *Is there any trouble in ATF temperature sensor circuit?*

**YES** : Repair or replace ATF temperature sensor circuit. <Ref. to 3-2 [T8D0].>

**NO** : Go to step 9K7.

### 9K7 : CHECK INHIBITOR SWITCH.

Read data of range switch using Subaru Select Monitor.

- Range switch is indicated in ON ⇔ OFF.

**CHECK** : *When each range is selected, does LED of range switch on Subaru Select Monitor light up?*

**YES** : Go to step 9K8.

**NO** : Check inhibitor switch circuit. <Ref. to 3-2 [T9T0].>

**9K8 : CHECK ABS SIGNAL.**

1) Start the engine, and turn Subaru Select Monitor switch to ON.

2) Read data of ABS signal using Subaru Select Monitor.

- ABS switch is indicated in ON ⇔ OFF.

**CHECK** : ***Does the LED of ABS switch light up?***

**YES** : Check ABS signal circuit. <Ref. to 4-4 [T10Z0].> and <Ref. to 4-4 [T10Y0].>

**NO** : Go to step THROTTLE POSITION SENSOR POWER SUPPLY. <Ref. to 3-2 [T9L0].>

**L: CHECK THROTTLE POSITION SENSOR POWER SUPPLY.****9L1 : CHECK THROTTLE POSITION SENSOR POWER SUPPLY.**

Read data of throttle position sensor power supply using Subaru Select Monitor.

- Throttle position sensor power supply voltage is indicated.

**CHECK** : ***Is the value fixed between 5.02 and 5.22 V?***

**YES** : Go to step INTAKE MANIFOLD PRESSURE. <Ref. to 3-2 [T9M0].>

**NO** : Check throttle position sensor power supply circuit. <Ref. to 3-2 [T8F0].>

**M: CHECK INTAKE MANIFOLD PRESSURE SIGNAL.****9M1 : CHECK INPUT SIGNAL FOR TCM.**

1) Start the engine.

2) Warm-up the engine until engine coolant temperature is above 80°C (176°F).

NOTE:

If ambient temperature is below 0°C (32°F), drive the vehicle until the ATF reaches its operating temperature.

3) Engine idling after warm-up.

4) Move selector lever to "N".

5) Read data of intake manifold pressure signal using Subaru Select Monitor.

- Display shows intake manifold pressure signal value sent from ECM.

**CHECK** : ***Does voltage change in response to the depress-release motion of the accelerator pedal?***

**YES** : Go to step **9M2**.

**NO** : Check intake manifold pressure signal circuit. <Ref. to 3-2 [T8I0].>

**9M2 : CHECK ECM.**

**CHECK** : ***Has trouble been eliminated after ECM replacement?***

**YES** : Replace ECM. <Ref. to 2-7 [W19A0].>

**NO** : Go to step **9M3**.

**9M3 : CHECK TCM.**

NOTE:

Install former ECM.

**CHECK** : ***Has trouble been eliminated after TCM replacement?***

**YES** : Replace TCM. <Ref. to 3-2 [W23A0].>

**NO** : Go to step TORQUE CONVERTER TURBINE SPEED SENSOR. <Ref. to 3-2 [T9N0].>

**N: CHECK TORQUE CONVERTER TURBINE SPEED SENSOR.****9N1 : CHECK TORQUE CONVERTER TURBINE SPEED SENSOR.**

1) Lift-up the vehicle and place safety stand.

**CAUTION:**

**On AWD models, raise all wheels off ground.**

2) Read data of torque converter turbine speed sensor using Subaru Select Monitor.

- Compare speedometer with Subaru Select Monitor indications.
- Vehicle speed is indicated in "MPH" or "km/h".

**NOTE:**

The speed difference between front and rear wheels may light the ABS warning light, but this indicates no malfunction. When AT control diagnosis is finished, perform the ABS memory clearance procedure of on-board diagnostics system. <Ref. to 4-4 [T6D2].>

**CHECK** : *Does the speedometer indication increase as the Subaru Select Monitor data increases?*

**YES** : Go to step 2-4 BRAKE DUTY SOLENOID. <Ref. to 3-2 [T900].>

**NO** : Check torque converter turbine speed sensor circuit. <Ref. to 3-2 [T8G0].>

**O: CHECK 2-4 BRAKE DUTY SOLENOID.****9O1 : CHECK OUTPUT SIGNAL EMITTED FROM TCM.**

1) Warm-up the transmission until ATF temperature is above 80°C (176°F).

**NOTE:**

If ambient temperature is below 0°C (32°F), drive the vehicle until the ATF reaches its operating temperature.

2) Stop the engine and turn ignition switch to ON (engine OFF).

3) Move selector lever to "N".

4) Read data of 2-4 brake duty solenoid using Subaru Select Monitor.

- 2-4 brake duty solenoid is indicated in "%".

**CHECK** : *Does the Subaru Select Monitor indicate 100% when the accelerator pedal is completely released?*

**YES** : Go to step 9O2.

**NO** : Go to step 9O4.

**9O2 : CHECK OUTPUT SIGNAL EMITTED FROM TCM.**

**CHECK** : *Does the Subaru Select Monitor indicate between 10 and 20% when the accelerator pedal is completely depressed?*

**YES** : Go to step 9O3.

**NO** : Go to step 9O4.

**9O3 : CHECK OUTPUT SIGNAL EMITTED FROM TCM.**

**CHECK** : *Does the Subaru Select Monitor change smoothly when the accelerator pedal is fully depressed and then fully released?*

**YES** : Go to step FWD SWITCH. <Ref. to 3-2 [T9Q0].>

**NO** : Go to step 9O4.



**904 : CHECK THROTTLE POSITION SENSOR.**

## NOTE:

For the diagnostics procedure on throttle position sensor circuit. <Ref. to 3-2 [T9G0].>

**CHECK** : ***Is there any trouble in throttle position sensor circuit?***

**YES** : Repair or replace throttle position sensor circuit. <Ref. to 3-2 [T8E0].>

**NO** : Go to step **905**.

**905 : CHECK ENGINE SPEED SIGNAL.**

## NOTE:

For the diagnostics procedure on engine speed signal circuit. <Ref. to 3-2 [T9E0].>

**CHECK** : ***Is there any trouble in engine speed signal circuit?***

**YES** : Repair or replace engine speed signal circuit. <Ref. to 3-2 [T8C0].>

**NO** : Go to step **906**.

**906 : CHECK ATF TEMPERATURE SENSOR.**

## NOTE:

For the diagnostics procedure on ATF temperature sensor circuit. <Ref. to 3-2 [T9F0].>

**CHECK** : ***Is there any trouble in ATF temperature sensor circuit?***

**YES** : Repair or replace ATF temperature sensor circuit. <Ref. to 3-2 [T8D0].>

**NO** : Go to step **907**.

**907 : CHECK INHIBITOR SWITCH.**

1) Turn ignition switch and Subaru Select Monitor to ON.

2) Read data of range switch using Subaru Select Monitor.

● Range switch is indicated in ON ⇔ OFF.

**CHECK** : ***When each range is selected, does LED of the range switch on Subaru Select Monitor light up?***

**YES** : Go to step FWD SWITCH. <Ref. to 3-2 [T9Q0].>

**NO** : Check inhibitor switch circuit. <Ref. to 3-2 [T9T0].>


**MEMO:**

**P: CHECK FWD SWITCH.**

**DIAGNOSIS:**

- LED does not come on even if FWD switch is ON.
- FWD switch circuit is open or short.

**WIRING DIAGRAM:**

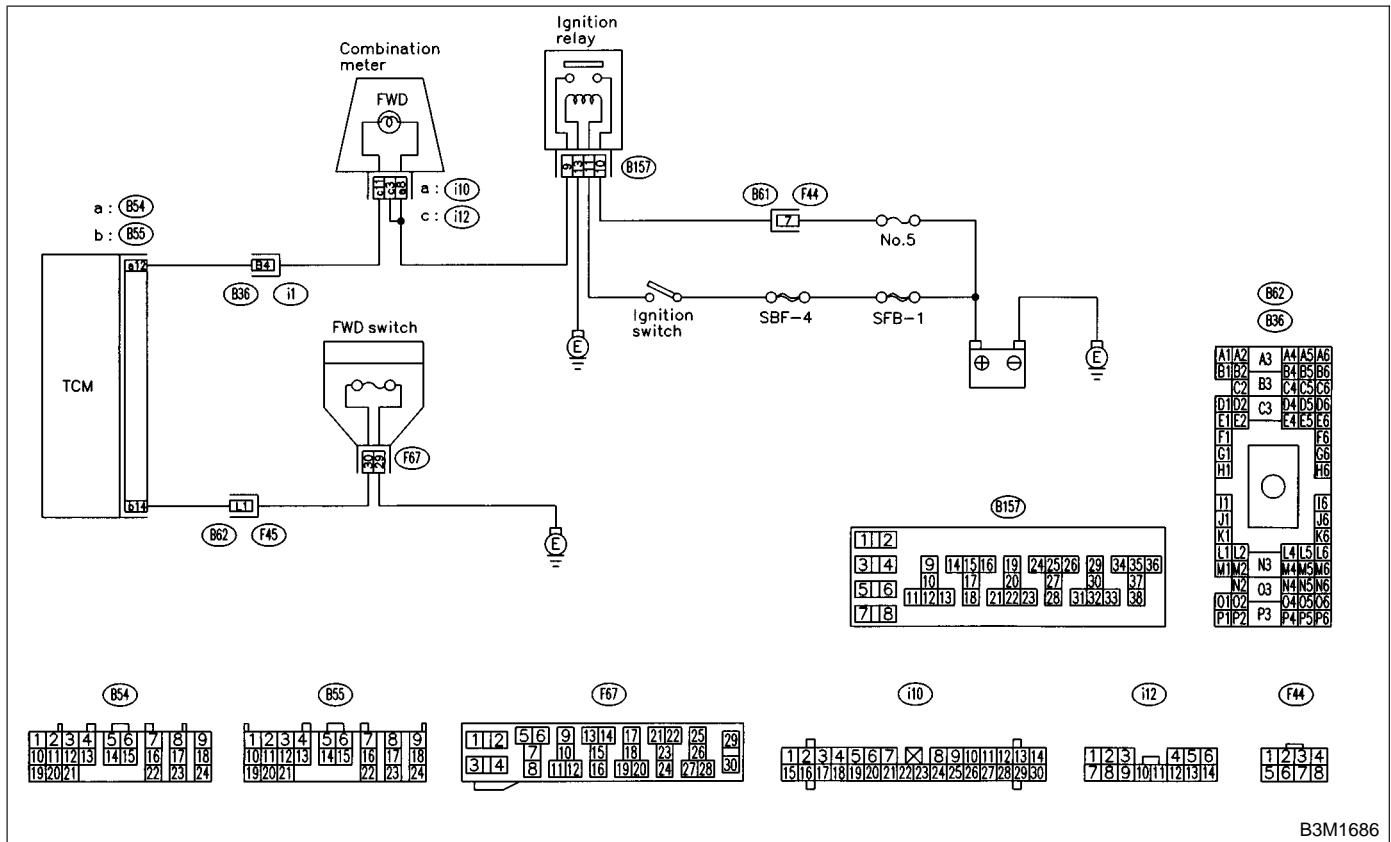

B3M1686

**9P1 : CHECK FWD SWITCH.**

- CHECK** : *When fuse is inserted to FWD switch, does LED light up?*
- YES** : Go to step BRAKE SWITCH. <Ref. to 3-2 [T9Q0].>
- NO** : Go to step 9P2.

**9P2 : CHECK FWD INDICATOR LIGHT.**


- 1) Turn ignition switch to OFF.
- 2) Remove combination meter.
- 3) Remove FWD indicator light bulb from combination meter.

- CHECK** : *Is FWD indicator light bulb OK?*
- YES** : Go to step 9P3.
- NO** : Replace FWD indicator light bulb.

**9P3 : CHECK HARNESS CONNECTOR BETWEEN TCM AND FWD SWITCH.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from TCM and FWD switch.
- 3) Measure resistance of harness between TCM and FWD switch connector.

**Connector & terminal**  
**(B55) No. 14 — (F67) No. 30:**

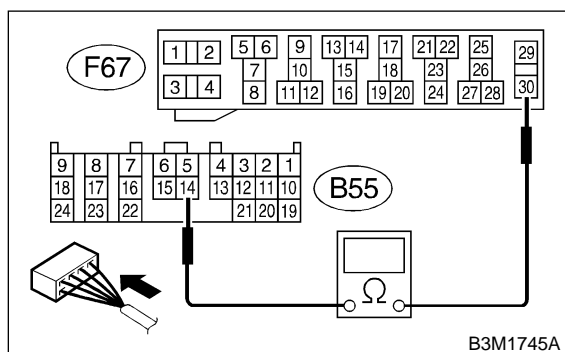


- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 9P4.
- NO** : Repair open circuit in harness between TCM and FWD switch connector.

**9P4 : CHECK HARNESS CONNECTOR BETWEEN TCM AND FWD SWITCH.**

Measure resistance of harness connector between TCM and body to make sure that circuit does not short.

**Connector & terminal**  
**(B55) No. 14 — Chassis ground:**

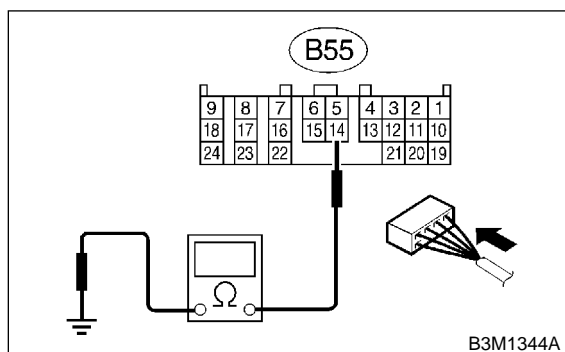


- CHECK** : Is the resistance more than 1 MΩ?
- YES** : Go to step 9P5.
- NO** : Repair short circuit in harness connector between TCM and chassis ground.

**9P5 : CHECK INPUT SIGNAL FOR TCM.**

- 1) Turn ignition switch to OFF.
- 2) Connect connector to TCM and FWD switch.
- 3) Turn ignition switch to ON.
- 4) Measure signal voltage for TCM while installing the fuse to FWD switch connector.

**Connector & terminal**  
**(B55) No. 14 (+) — Chassis ground (-):**

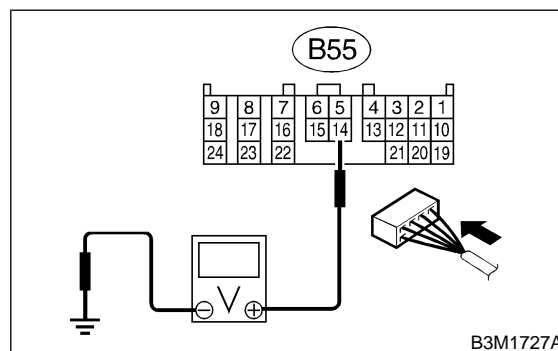


- CHECK** : Is the voltage less than 1 V in FWD switch while installing?
- YES** : Go to step 9P6.
- NO** : Go to step 9P11.

**9P6 : CHECK INPUT SIGNAL FOR TCM.**

Measure signal voltage for TCM while removing the fuse from FWD switch connector.

**Connector & terminal**  
**(B55) No. 14 (+) — Chassis ground (-):**

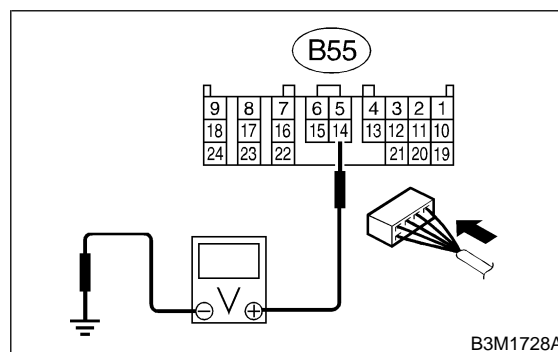


- CHECK** : Is the voltage more than 10 V in FWD switch while removing?
- YES** : Go to step 9P7.
- NO** : Replace TCM. <Ref. to 3-2 [W23A0].>

**9P7 : CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from TCM and combination meter.
- 3) Measure resistance of harness between TCM and diagnosis connector.

**Connector & terminal**

**(B54) No. 12 — (i12) No. 11:**

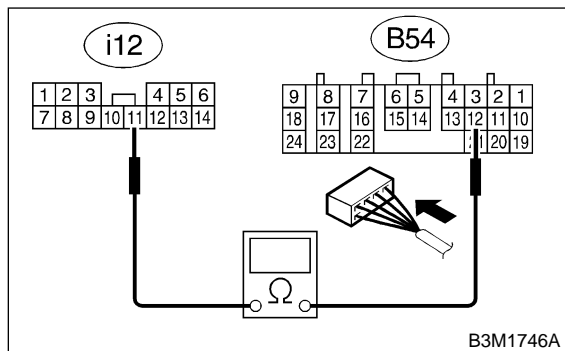


- CHECK** : *Is the resistance less than 1 Ω?*
- YES** : Go to step **9P8**.
- NO** : Repair open circuit in harness between TCM and combination meter and poor contact in coupling connector.

**9P8 : CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.**

Measure resistance of harness connector between TCM and chassis ground to make sure that circuit does not short.

**Connector & terminal**

**(B54) No. 12 — Chassis ground:**

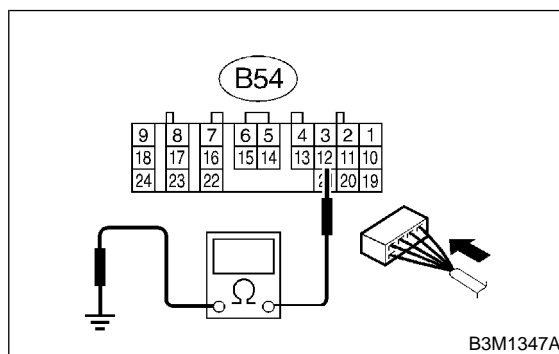


- CHECK** : *Is the resistance more than 1 MΩ?*
- YES** : Go to step **9P9**.
- NO** : Repair short circuit in harness between TCM and combination meter connector.

**9P9 : CHECK OUTPUT SIGNAL EMITTED FROM TCM.**

- 1) Turn ignition switch to OFF.
- 2) Connect connector to TCM and combination meter.
- 3) Turn ignition switch to ON.
- 4) Measure signal voltage for TCM while installing and removing the fuse to FWD switch connector.

**Connector & terminal**

**(B54) No. 12 — Chassis ground:**

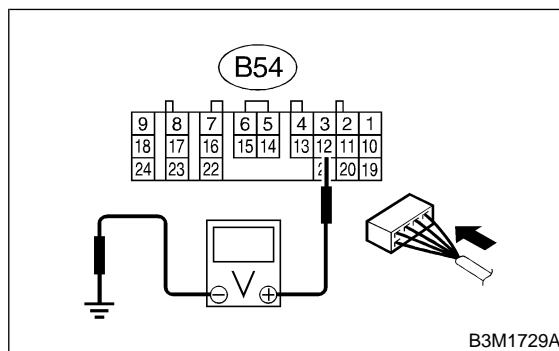


- CHECK** : *Is the voltage less than 1 V in FWD switch while installing?*
- YES** : Go to step **9P10**.
- NO** : Go to step **9P11**.

**9P10 : CHECK OUTPUT SIGNAL EMITTED FROM TCM.**

Measure signal voltage for TCM while removing the fuse from FWD switch connector.

**Connector & terminal**

**(B54) No. 12 — Chassis ground:**

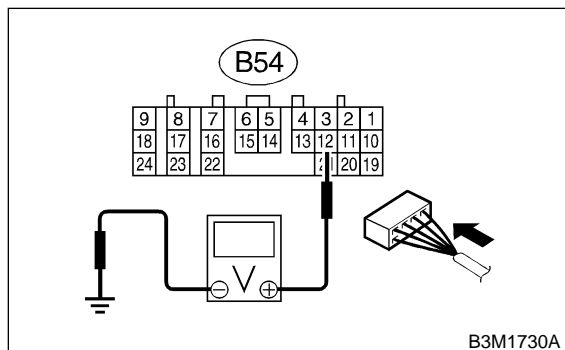

**CHECK** : *Is the voltage more than 10 V in FWD switch while removing?*

**YES** : Go to step **9P11**.

**NO** : Replace TCM. <Ref. to 3-2 [W23A0].>

**9P11 : CHECK POOR CONTACT.**

**CHECK** : *Is there poor contact in FWD switch circuit?*

**YES** : Repair poor contact.

**NO** : Replace TCM. <Ref. to 3-2 [W23A0].>

**Q: CHECK BRAKE SWITCH.****9Q1 : CHECK BRAKE SWITCH.**

**CHECK** : *When the brake pedal is depressed, does LED light up?*

**YES** : Go to step ABS SWITCH. <Ref. to 3-2 [T9S0].>

**NO** : Check brake switch circuit. <Ref. to 2-7 [T11AW0].>

**R: CHECK ABS SWITCH.****9R1 : CHECK ABS SWITCH.**

**CHECK** : *Does the LED of ABS switch light up?*

**YES** : Check ABS switch circuit. <Ref. to 4-4 [T10Z0].> and <Ref. to 4-4 [T10Y0].>

**NO** : Go to step CRUISE CONTROL SWITCH. <Ref. to 3-2 [T9S0].>

**S: CHECK CRUISE CONTROL SWITCH.****9S1 : CHECK CRUISE CONTROL SWITCH.**

**CHECK** : *When cruise control is set, does LED light up?*

**YES** : Go to step INHIBITOR SWITCH. <Ref. to 3-2 [T9T0].>

**NO** : Check cruise control. <Ref. to 6-2a [T2A0].>

**T: CHECK INHIBITOR SWITCH.**


**DIAGNOSIS:**

Input signal circuit of inhibitor switch is open or shorted.

**TROUBLE SYMPTOM:**

- Shift characteristics are erroneous.
- Engine brake is not effected when selector lever is in "3" range.
- Engine brake is not effected when selector lever is in "2" range.
- Engine brake is not effected when selector lever is in "1" range.

**WIRING DIAGRAM:**

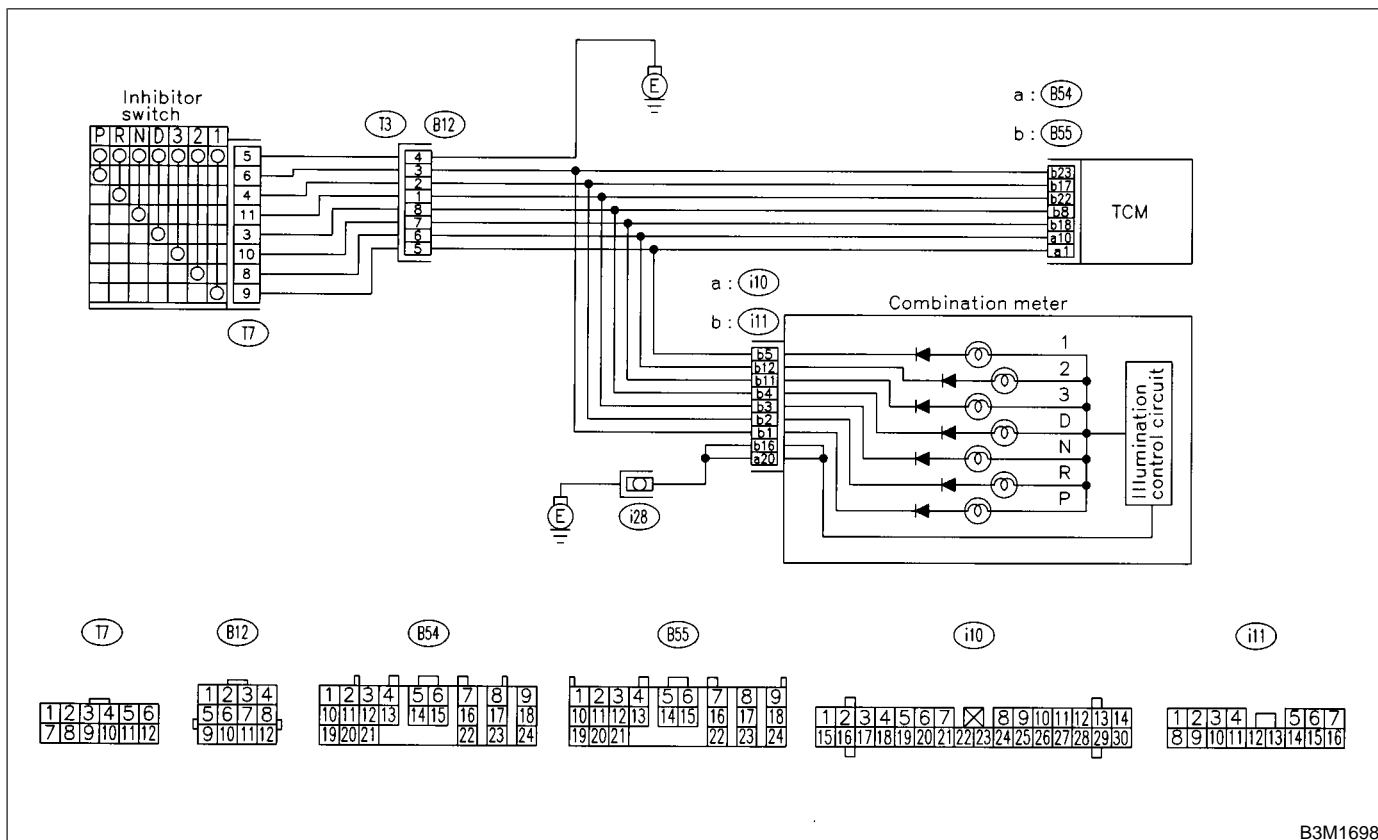

B3M1698

**9T1 : CHECK "P" RANGE SWITCH.**

- CHECK** : When "P" range is selected, does LED light up?
- YES** : Go to step 9T2.
- NO** : Go to step 9T22.

**9T2 : CHECK INDICATOR LIGHT.**

- CHECK** : Does combination meter "P" range indicator illuminate?
- YES** : Go to step 9T3.
- NO** : Go to step 9T27.

**9T3 : CHECK "P" RANGE SWITCH.**

- CHECK** : When the "R" range is selected, does "P" range LED light up?
- YES** : Go to step 9T29.
- NO** : Go to step 9T4.

**9T4 : CHECK "R" RANGE SWITCH.**

- CHECK** : When the "R" range is selected, does LED light up?
- YES** : Go to step 9T5.
- NO** : Go to step 9T31.

**9T5 : CHECK INDICATOR LIGHT.**

**CHECK** : Does combination meter "R" range indicator illuminate?

**YES** : Go to step 9T6.

**NO** : Go to step 9T35.

**9T6 : CHECK "R" RANGE SWITCH.**

**CHECK** : When the "N" range is selected, does "R" range LED light up?

**YES** : Go to step 9T37.

**NO** : Go to step 9T7.

**9T7 : CHECK "N" RANGE SWITCH.**

**CHECK** : When the "N" range is selected, does LED light up?

**YES** : Go to step 9T8.

**NO** : Go to step 9T39.

**9T8 : CHECK INDICATOR LIGHT.**

**CHECK** : Does combination meter "N" range indicator illuminate?

**YES** : Go to step 9T9.

**NO** : Go to step 9T43.

**9T9 : CHECK "N" RANGE SWITCH.**

**CHECK** : When the "D" range is selected, does "N" range LED light up?

**YES** : Go to step 9T45.

**NO** : Go to step 9T10.

**9T10 : CHECK "D" RANGE SWITCH.**

**CHECK** : When the "D" range is selected, does LED light up?

**YES** : Go to step 9T11.

**NO** : Go to step 9T47.

**9T11 : CHECK INDICATOR LIGHT.**

**CHECK** : Does combination meter "D" range indicator illuminate?

**YES** : Go to step 9T12.

**NO** : Go to step 9T51.

**9T12 : CHECK "D" RANGE SWITCH.**

**CHECK** : When the "3" range is selected, does "D" range LED light up?

**YES** : Go to step 9T53.

**NO** : Go to step 9T13.

**9T13 : CHECK "3" RANGE SWITCH.**

**CHECK** : When the "3" range is selected, does LED light up?

**YES** : Go to step 9T14.

**NO** : Go to step 9T55.

**9T14 : CHECK INDICATOR LIGHT.**

**CHECK** : Does combination meter "3" range indicator illuminate?

**YES** : Go to step 9T15.

**NO** : Go to step 9T59.

**9T15 : CHECK "3" RANGE SWITCH.**

**CHECK** : When the "2" range is selected, does "3" range LED light up?

**YES** : Go to step 9T61.

**NO** : Go to step 9T16.

**9T16 : CHECK "2" RANGE SWITCH.**

**CHECK** : When the "2" range is selected, does LED light up?

**YES** : Go to step 9T17.

**NO** : Go to step 9T63.

**9T17 : CHECK INDICATOR LIGHT.**

**CHECK** : Does combination meter "2" range indicator illuminate?

**YES** : Go to step 9T18.

**NO** : Go to step 9T67.

**9T18 : CHECK "2" RANGE SWITCH.**

**CHECK** : When the "1" range is selected, does "2" range LED light up?

**YES** : Go to step 9T69.

**NO** : Go to step 9T19.



**9T19 : CHECK "1" RANGE SWITCH.**

- CHECK** : When the "1" range is selected, does LED light up?
- YES** : Go to step 9T20.
- NO** : Go to step 9T71.

**9T20 : CHECK INDICATOR LIGHT.**

- CHECK** : Does combination meter "1" range indicator illuminate?
- YES** : Go to step 9T21.
- NO** : Go to step 9T75.


**9T21 : CHECK "1" RANGE SWITCH.**

- CHECK** : When the "P" range is selected, does "1" range LED light UP?
- YES** : Go to step 9T77.
- NO** : Go to step SHIFT SOLENOID 1. <Ref. to 3-2 [T9U0].>

**9T22 : CHECK HARNESS CONNECTOR BETWEEN INHIBITOR SWITCH AND CHASSIS GROUND.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from inhibitor switch.
- 3) Measure resistance of harness between inhibitor switch and chassis ground.

**Connector & terminal**  
(B12) No. 4 — Chassis ground:

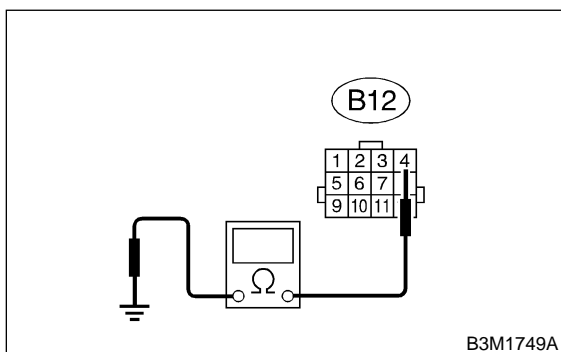


- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 9T23.
- NO** : Repair open circuit in harness between inhibitor switch connector and combination meter.

**9T23 : CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from TCM and inhibitor switch.
- 3) Measure resistance of harness between TCM and inhibitor switch connector.

**Connector & terminal**  
(B55) No. 23 — (B12) No. 3:

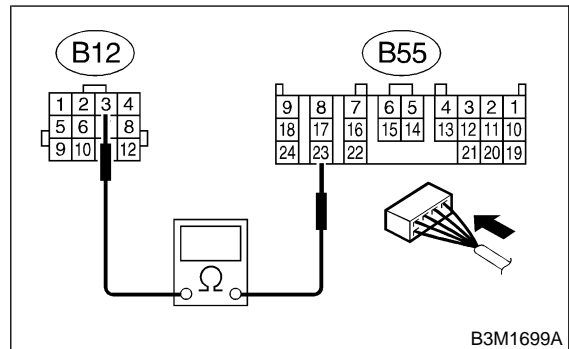


- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 9T24.
- NO** : Repair open circuit in harness between TCM and inhibitor switch connector, and poor contact in coupling connector.

**9T24 : CHECK INHIBITOR SWITCH.**

Measure resistance between inhibitor switch connector receptacle's terminals.

**Terminals**  
(T3) No. 4 — No. 3:

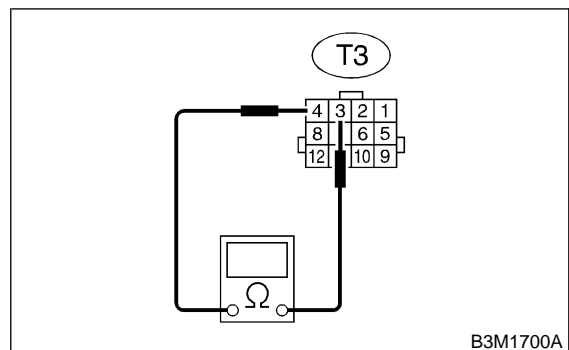


- CHECK** : Is the resistance less than 1 Ω in "P" range?
- YES** : Go to step 9T25.
- NO** : Adjust inhibitor switch. <Ref. to 3-2 [W200].>

**9T25 : CHECK INPUT SIGNAL FOR TCM.**

- 1) Turn ignition switch to OFF.
- 2) Connect connector to TCM and inhibitor switch.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between TCM and chassis ground.

**Connector & terminal**  
**(B55) No. 23 (+) — Chassis ground (-):**

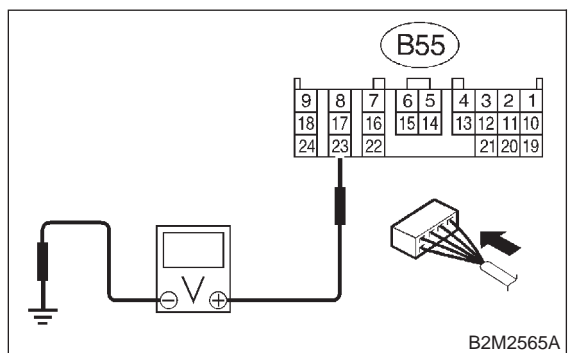


- CHECK** : *Is the voltage less than 1 V in "P" range?*
- YES** : Go to step 9T26.
- NO** : Go to step 9T79.

**9T26 : CHECK INPUT SIGNAL FOR TCM.**

Measure voltage between TCM and chassis ground.

**Connector & terminal**  
**(B55) No. 23 (+) — Chassis ground (-):**

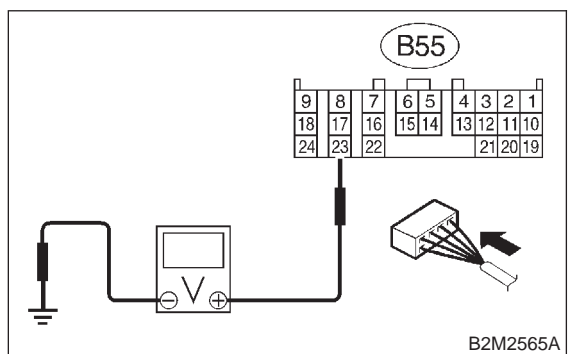

- CHECK** : *Is the voltage more than 8 V in other ranges?*
- YES** : Go to step 9T79.
- NO** : Replace TCM. <Ref. to 3-2 [W23A0].>

**9T27 : CHECK "P" RANGE INDICATOR LIGHT BULB.**


- 1) Turn ignition switch to OFF.
- 2) Remove combination meter.
- 3) Remove "P" range indicator light bulb from combination meter.

- CHECK** : *Is "P" range indicator light bulb OK?*
- YES** : Go to step 9T28.
- NO** : Replace "P" range indicator light bulb. <Ref. to 6-2 [W8B0].>

**9T28 : CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.**

- 1) Disconnect connectors from TCM and combination meter.
- 2) Measure resistance of harness between TCM and combination meter.

**Connector & terminal**  
**(B55) No. 23 — (i11) No. 1:**

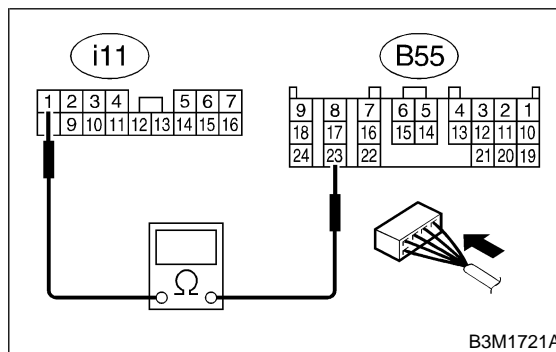


- CHECK** : *Is the resistance more than 1 Ω?*
- YES** : Go to step 9T79.
- NO** : Repair open circuit in harness between inhibitor switch connector and combination meter.

**9T29 : CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from TCM, inhibitor switch and combination meter.
- 3) Measure resistance of harness between TCM and chassis ground.

**Connector & terminal**

**(B55) No. 23 — Chassis ground:**

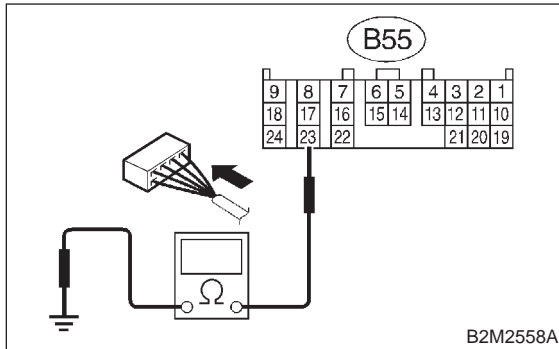


- CHECK** : Is the resistance more than 1 MΩ?
- YES** : Go to step 9T30.
- NO** : Repair ground short circuit in "P" range circuit.

**9T30 : CHECK INHIBITOR SWITCH.**

Measure resistance between inhibitor switch connector receptacle's terminals.

**Terminals**

**(T3) No. 4 — No. 3:**

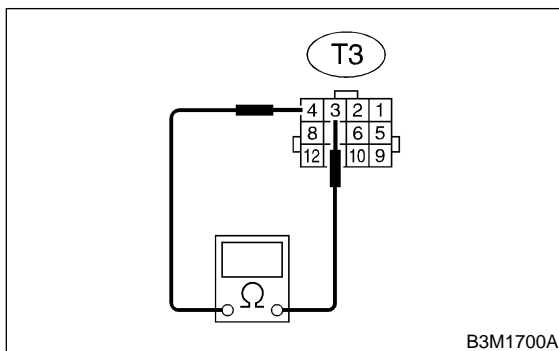


- CHECK** : Is the resistance more than 1 MΩ in other ranges?
- YES** : Replace TCM. <Ref. to 3-2 [W23A0].>
- NO** : Adjust inhibitor switch. <Ref. to 3-2 [W200].>

**9T31 : CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from TCM and inhibitor switch.
- 3) Measure resistance of harness between TCM and inhibitor switch connector.

**Connector & terminal**

**(B55) No. 17 — (B12) No. 2:**

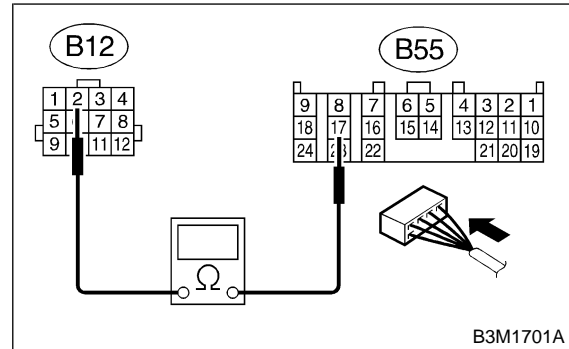


- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 9T32.
- NO** : Repair open circuit in harness between TCM and inhibitor switch connector, and poor contact in coupling connector.

**9T32 : CHECK INHIBITOR SWITCH.**

Measure resistance between inhibitor switch connector receptacle's terminals.

**Terminals**

**(T3) No. 2 — No. 4:**

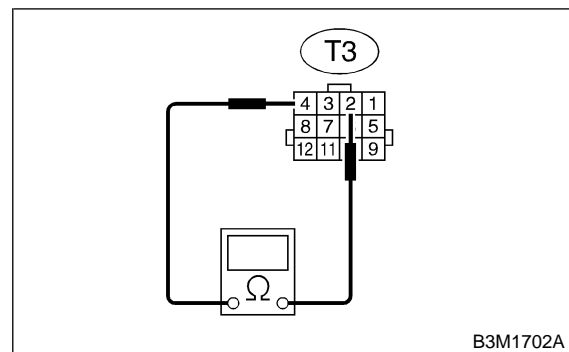


- CHECK** : Is the resistance less than 1 Ω in "R" range?
- YES** : Go to step 9T33.
- NO** : Adjust inhibitor switch. <Ref. to 3-2 [W200].>

**9T33 : CHECK INPUT SIGNAL FOR TCM.**

- 1) Turn ignition switch to OFF.
- 2) Connect connector to TCM and inhibitor switch.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between TCM and chassis ground.

**Connector & terminal**  
**(B55) No. 17 (+) — Chassis ground (-):**

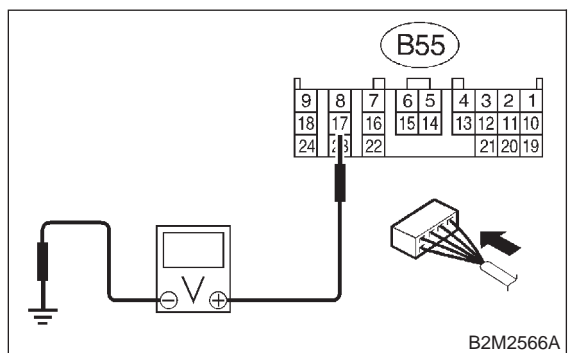


- CHECK** : Is the voltage less than 1 V in "R" range?
- YES** : Go to step 9T34.
- NO** : Go to step 9T79.

**9T34 : CHECK INPUT SIGNAL FOR TCM.**

Measure voltage between TCM and chassis ground.

**Connector & terminal**  
**(B55) No. 17 (+) — Chassis ground (-):**

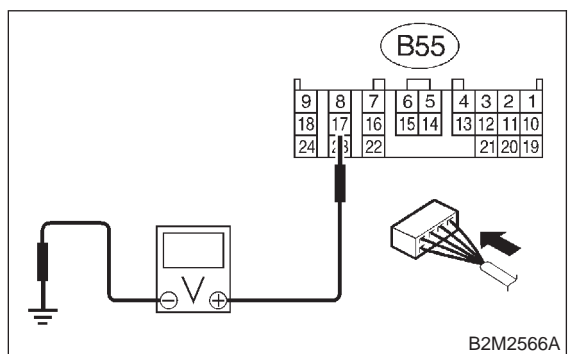

- CHECK** : Is the voltage more than 9.5 V in other ranges?
- YES** : Go to step 9T79.
- NO** : Replace TCM. <Ref. to 3-2 [W23A0].>

**9T35 : CHECK "R" RANGE INDICATOR LIGHT BULB.**


- 1) Turn ignition switch to OFF.
- 2) Remove combination meter.
- 3) Remove "R" range indicator light bulb from combination meter.

- CHECK** : Is "R" range indicator light bulb OK?
- YES** : Go to step 9T36.
- NO** : Replace "R" range indicator light bulb. <Ref. to 6-2 [W8B0].>

**9T36 : CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.**

- 1) Disconnect connectors from TCM and combination meter.
- 2) Measure resistance of harness between TCM and combination meter.

**Connector & terminal**  
**(B55) No. 17 — (i11) No. 2**

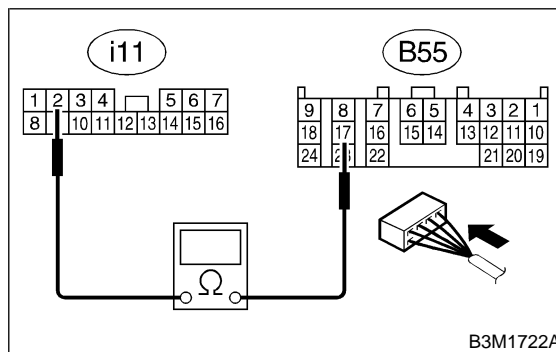


- CHECK** : Is the resistance more than 1 Ω?
- YES** : Go to step 9T79.
- NO** : Repair open circuit in harness between inhibitor switch connector and combination meter.

**9T37 : CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from TCM, inhibitor switch and combination meter.
- 3) Measure resistance of harness between TCM and chassis ground.

**Connector & terminal**

**(B55) No. 17 — Chassis ground:**

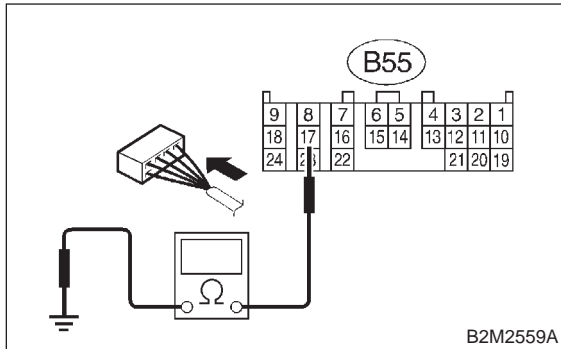


- CHECK** : Is the resistance more than 1 MΩ?
- YES** : Go to step 9T38.
- NO** : Repair ground short circuit in “R” range circuit.

**9T38 : CHECK INHIBITOR SWITCH.**

Measure resistance between inhibitor switch connector receptacle’s terminals.

**Terminals**

**(T3) No. 2 — No. 4:**

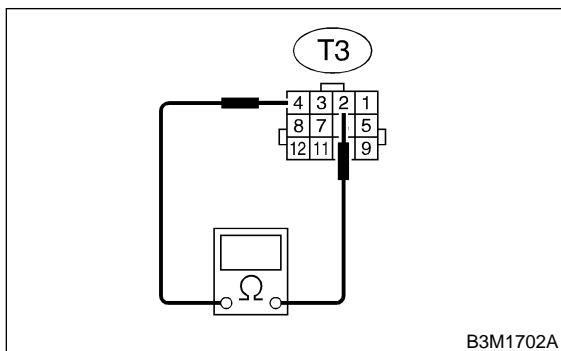


- CHECK** : Is the resistance more than 1 MΩ in other ranges?
- YES** : Replace TCM. <Ref. to 3-2 [W23A0].>
- NO** : Adjust inhibitor switch. <Ref. to 3-2 [W200].>

**9T39 : CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from TCM and inhibitor switch.
- 3) Measure resistance of harness between TCM and inhibitor switch connector.

**Connector & terminal**

**(B55) No. 22 — (B12) No. 1:**

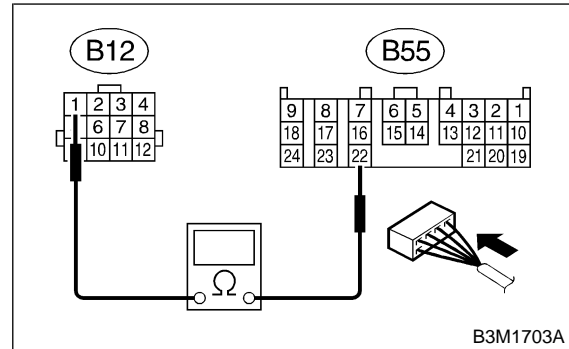


- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 9T40.
- NO** : Repair open circuit in harness between TCM and inhibitor switch connector, and poor contact in coupling connector.

**9T40 : CHECK INHIBITOR SWITCH.**

Measure resistance between inhibitor switch connector receptacle’s terminals.

**Terminals**

**(T3) No. 4 — No. 1:**

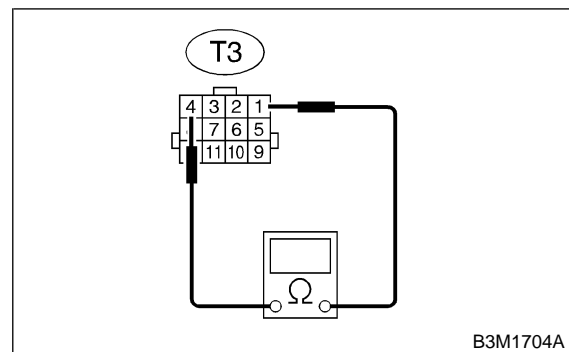


- CHECK** : Is the resistance less than 1 Ω in “N” range?
- YES** : Go to step 9T41.
- NO** : Adjust inhibitor switch. <Ref. to 3-2 [W200].>

**9T41 : CHECK INPUT SIGNAL FOR TCM.**

- 1) Turn ignition switch to OFF.
- 2) Connect connector to TCM and inhibitor switch.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between TCM and chassis ground.

**Connector & terminal**  
**(B55) No. 22 (+) — Chassis ground (-):**

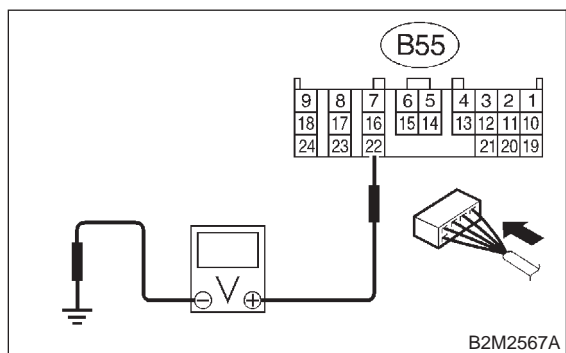


- CHECK** : Is the voltage less than 1 V in “N” range?
- YES** : Go to step 9T42.
- NO** : Go to step 9T79.

**9T42 : CHECK INPUT SIGNAL FOR TCM.**

Measure voltage between TCM and chassis ground.

**Connector & terminal**  
**(B55) No. 22 (+) — Chassis ground (-):**

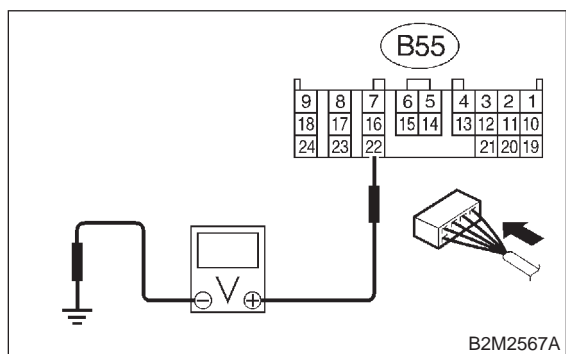

- CHECK** : Is the voltage more than 8 V in other ranges?
- YES** : Go to step 9T79.
- NO** : Replace TCM. <Ref. to 3-2 [W23A0].>

**9T43 : CHECK “N” RANGE INDICATOR LIGHT BULB.**


- 1) Turn ignition switch to OFF.
- 2) Remove combination meter.
- 3) Remove “N” range indicator light bulb from combination meter.

- CHECK** : Is “N” range indicator light bulb OK?
- YES** : Go to step 9T44.
- NO** : Replace “N” range indicator light bulb. <Ref. to 6-2 [W8B0].>

**9T44 : CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.**

- 1) Disconnect connectors from TCM and combination meter.
- 2) Measure resistance of harness between TCM and combination meter.

**Connector & terminal**  
**(B55) No. 22 — (i11) No. 3:**

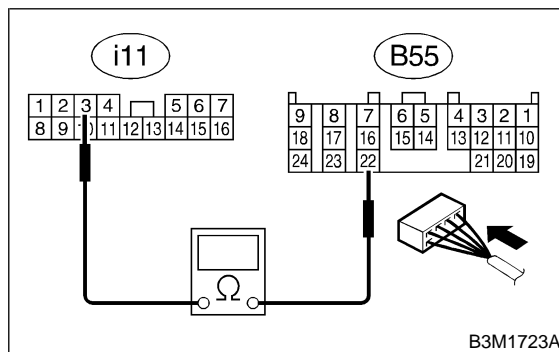


- CHECK** : Is the resistance more than 1 Ω?
- YES** : Go to step 9T79.
- NO** : Repair open circuit in harness between inhibitor switch connector and combination meter.

**9T45 : CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from TCM, inhibitor switch and combination meter.
- 3) Measure resistance of harness between TCM and chassis ground.

**Connector & terminal**  
**(B55) No. 22 — Chassis ground:**

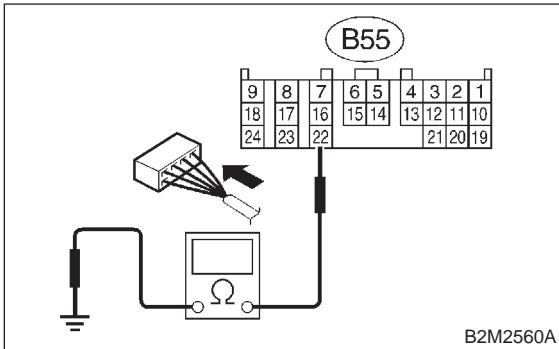


- CHECK** : Is the resistance more than 1 MΩ?
- YES** : Go to step 9T47.
- NO** : Repair ground short circuit in “N” range circuit.

**9T46 : CHECK INHIBITOR SWITCH.**

Measure resistance between inhibitor switch connector receptacle’s terminals.

**Terminals**  
**(T3) No. 1 — No. 4:**

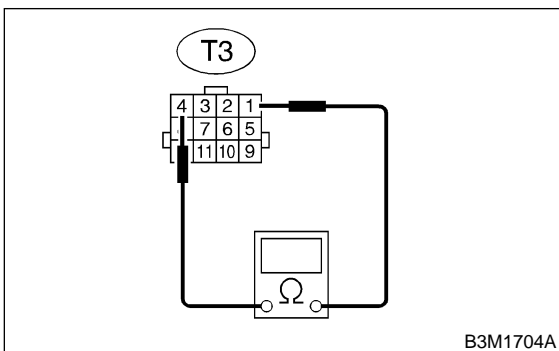


- CHECK** : Is the resistance more than 1 MΩ in other ranges?
- YES** : Replace TCM. <Ref. to 3-2 [W23A0].>
- NO** : Adjust inhibitor switch. <Ref. to 3-2 [W200].>

**9T47 : CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from TCM and inhibitor switch.
- 3) Measure resistance of harness between TCM and inhibitor switch connector.

**Connector & terminal**  
**(B55) No. 8 — (B12) No. 8:**

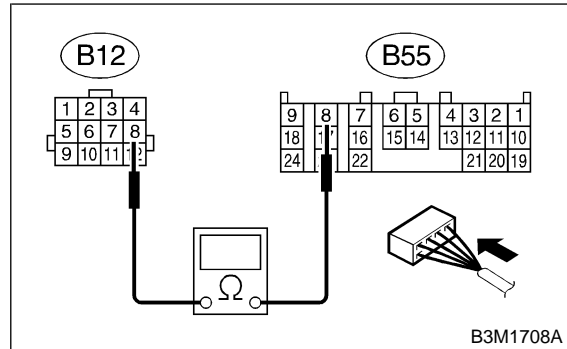


- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 9T48.
- NO** : Repair open circuit in harness between TCM and inhibitor switch connector, and poor contact in coupling connector.

**9T48 : CHECK INHIBITOR SWITCH.**

Measure resistance between inhibitor switch connector receptacle’s terminals.

**Terminals**  
**(T3) No. 4 — No. 8:**

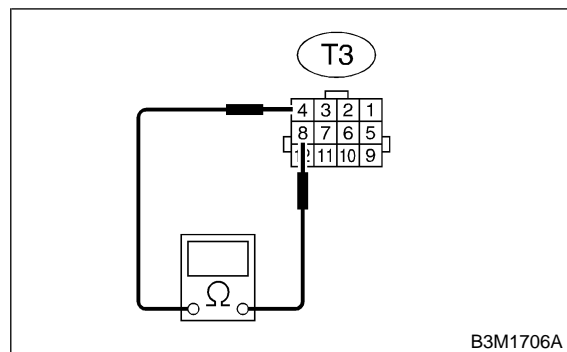


- CHECK** : Is the resistance less than 1 Ω in “D” range?
- YES** : Go to step 9T49.
- NO** : Adjust inhibitor switch. <Ref. to 3-2 [W200].>

**9T49 : CHECK INPUT SIGNAL FOR TCM.**

- 1) Turn ignition switch to OFF.
- 2) Connect connector to TCM and inhibitor switch.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between TCM and chassis ground.

**Connector & terminal**  
**(B55) No. 8 (+) — Chassis ground (-):**

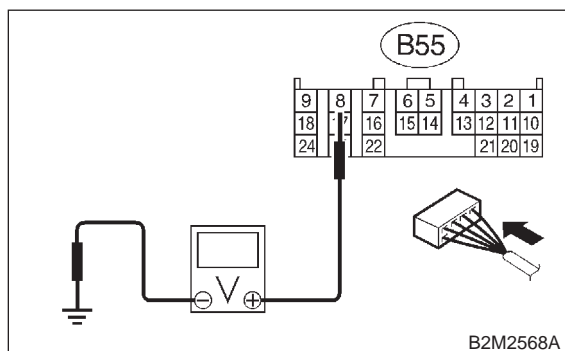


- CHECK** : Is the voltage less than 1 V in “D” range?
- YES** : Go to step 9T50.
- NO** : Go to step 9T79.

**9T50 : CHECK INPUT SIGNAL FOR TCM.**

Measure voltage between TCM and chassis ground.

**Connector & terminal**  
**(B55) No. 8 (+) — Chassis ground (-):**

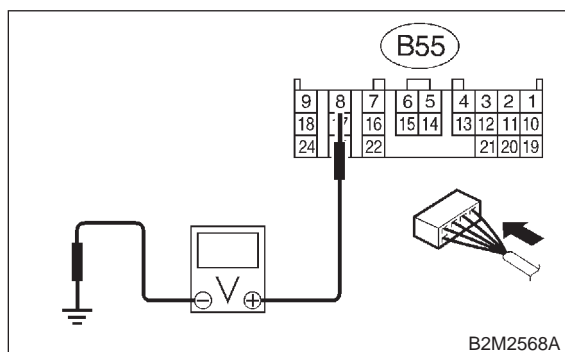

- CHECK** : Is the voltage more than 9.5 V in other ranges?
- YES** : Go to step 9T79.
- NO** : Replace TCM. <Ref. to 3-2 [W23A0].>

**9T51 : CHECK “D” RANGE INDICATOR LIGHT BULB.**


- 1) Turn ignition switch to OFF.
- 2) Remove combination meter.
- 3) Remove “D” range indicator light bulb from combination meter.

- CHECK** : Is “D” range indicator light bulb OK?
- YES** : Go to step 9T52.
- NO** : Replace “D” range indicator light bulb. <Ref. to 6-2 [W8B0].>

**9T52 : CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.**

- 1) Disconnect connectors from TCM and combination meter.
- 2) Measure resistance of harness between TCM and combination meter.

**Connector & terminal**  
**(B55) No. 8 — (i11) No. 4:**

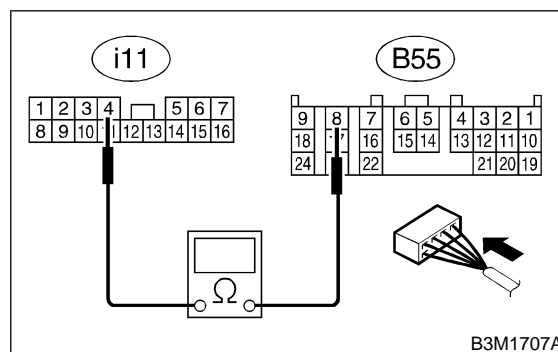


- CHECK** : Is the resistance more than 1 Ω?
- YES** : Go to step 9T79.
- NO** : Repair open circuit in harness between inhibitor switch connector and combination meter.



**9T53 : CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from TCM, inhibitor switch and combination meter.
- 3) Measure resistance of harness between TCM and chassis ground.

**Connector & terminal**  
**(B55) No. 8 — Chassis ground:**

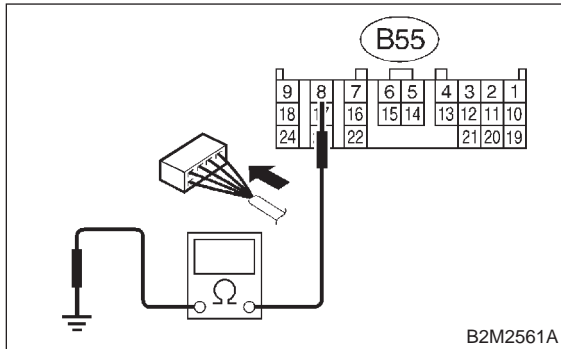


- CHECK** : Is the resistance more than 1 MΩ?
- YES** : Go to step 9T54.
- NO** : Repair ground short circuit in “D” range circuit.

**9T54 : CHECK INHIBITOR SWITCH.**

Measure resistance between inhibitor switch connector receptacle’s terminals.

**Terminals**  
**(T3) No. 4 — No. 8:**

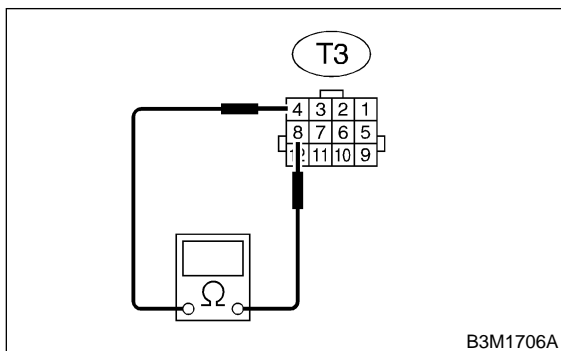


- CHECK** : Is the resistance more than 1 MΩ in other ranges?
- YES** : Replace TCM. <Ref. to 3-2 [W23A0].>
- NO** : Adjust inhibitor switch. <Ref. to 3-2 [W200].>

**9T55 : CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from TCM and inhibitor switch.
- 3) Measure resistance of harness between TCM and inhibitor switch connector.

**Connector & terminal**  
**(B55) No. 18 — (B12) No. 7:**

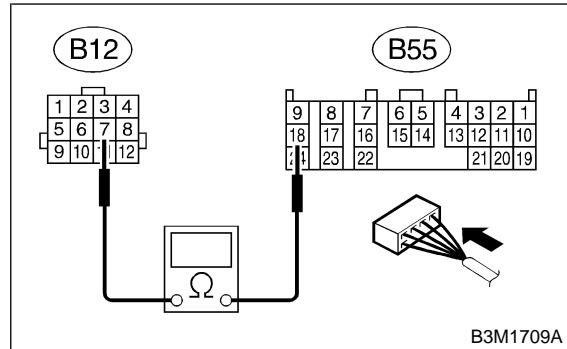


- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 9T56.
- NO** : Repair open circuit in harness between TCM and inhibitor switch connector, and poor contact in coupling connector.

**9T56 : CHECK INHIBITOR SWITCH.**

Measure resistance between inhibitor switch connector receptacle’s terminals.

**Terminals**  
**(T3) No. 4 — No. 7:**

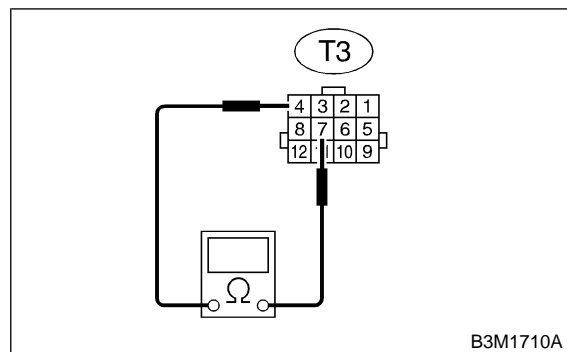


- CHECK** : Is the resistance less than 1 Ω in “3” range?
- YES** : Go to step 9T57.
- NO** : Adjust inhibitor switch. <Ref. to 3-2 [W200].>

**9T57 : CHECK INPUT SIGNAL FOR TCM.**

- 1) Turn ignition switch to OFF.
- 2) Connect connector to TCM and inhibitor switch.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between TCM and chassis ground.

**Connector & terminal**  
**(B55) No. 18 (+) — Chassis ground (-):**

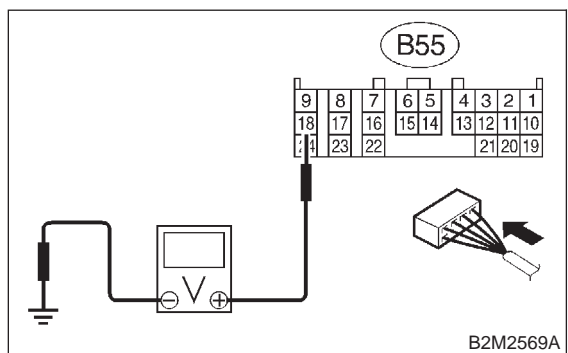


- CHECK** : *Is the voltage less than 1 V in "3" range?*
- YES** : Go to step 9T58.
- NO** : Go to step 9T79.

**9T58 : CHECK INPUT SIGNAL FOR TCM.**

Measure voltage between TCM and chassis ground.

**Connector & terminal**  
**(B55) No. 18 (+) — Chassis ground (-):**

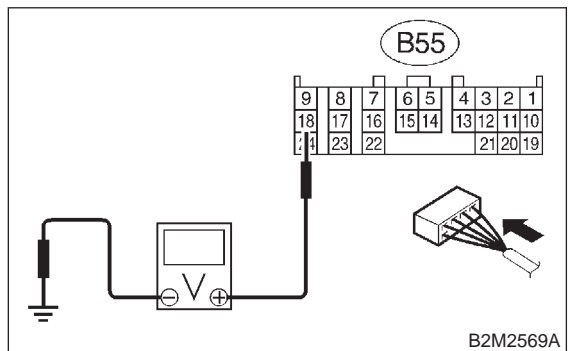

- CHECK** : *Is the voltage more than 9.5 V in other ranges?*
- YES** : Go to step 9T79.
- NO** : Replace TCM. <Ref. to 3-2 [W23A0].>

**9T59 : CHECK "3" RANGE INDICATOR LIGHT BULB.**


- 1) Turn ignition switch to OFF.
- 2) Remove combination meter.
- 3) Remove "3" range indicator light bulb from combination meter.

- CHECK** : *Is "3" range indicator light bulb OK?*
- YES** : Go to step 9T60.
- NO** : Replace "3" range indicator light bulb. <Ref. to 6-2 [W8B0].>

**9T60 : CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.**

- 1) Disconnect connectors from TCM and combination meter.
- 2) Measure resistance of harness between TCM and combination meter.

**Connector & terminal**  
**(B55) No. 18 — (i11) No. 11:**

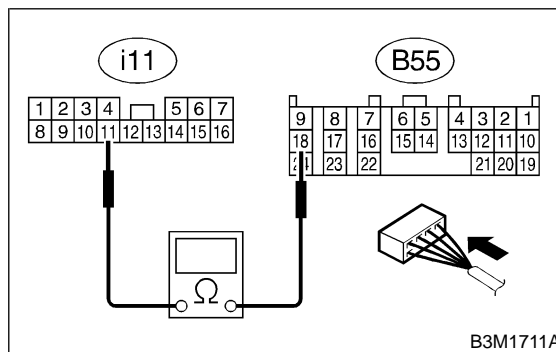


- CHECK** : *Is the resistance more than 1 Ω?*
- YES** : Go to step 9T79.
- NO** : Repair open circuit in harness between inhibitor switch connector and combination meter.

**9T61 : CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from TCM, inhibitor switch and combination meter.
- 3) Measure resistance of harness between TCM and chassis ground.

**Connector & terminal**  
**(B55) No. 18 — Chassis ground:**

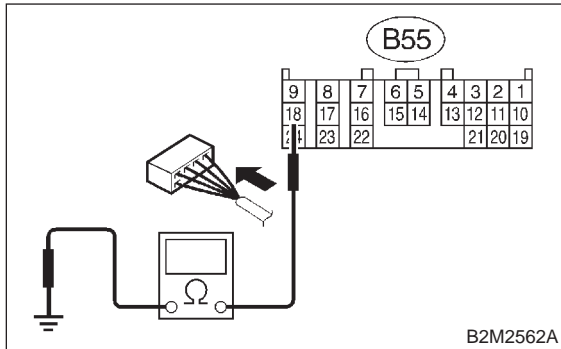


- CHECK** : Is the resistance more than 1 MΩ?
- YES** : Go to step 9T62.
- NO** : Repair ground short circuit in “3” range circuit.

**9T62 : CHECK INHIBITOR SWITCH.**

Measure resistance between inhibitor switch connector receptacle’s terminals.

**Terminals**  
**(T3) No. 4 — No. 7:**

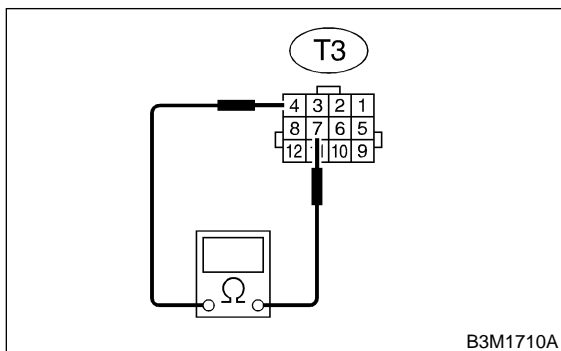


- CHECK** : Is the resistance more than 1 MΩ in other ranges?
- YES** : Replace TCM. <Ref. to 3-2 [W23A0].>
- NO** : Adjust inhibitor switch. <Ref. to 3-2 [W200].>

**9T63 : CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from TCM and inhibitor switch.
- 3) Measure resistance of harness between TCM and inhibitor switch connector.

**Connector & terminal**  
**(B54) No. 10 — (B12) No. 6:**

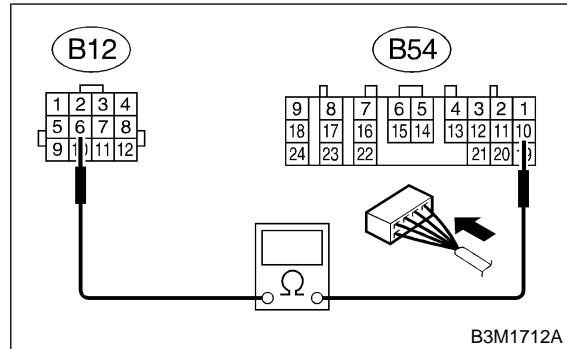


- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 9T64.
- NO** : Repair open circuit in harness between TCM and inhibitor switch connector, and poor contact in coupling connector.

**9T64 : CHECK INHIBITOR SWITCH.**

Measure resistance between inhibitor switch connector receptacle’s terminals.

**Terminals**  
**(T3) No. 6 — No. 4:**

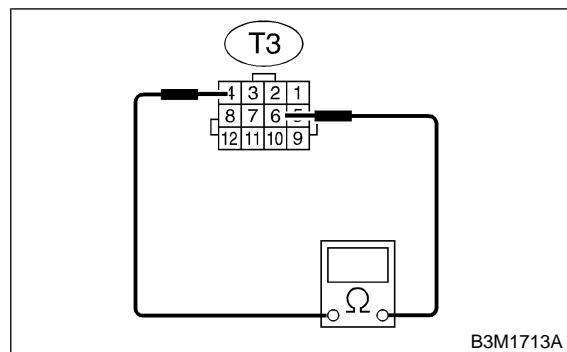


- CHECK** : Is the resistance less than 1 Ω in “2” range?
- YES** : Go to step 9T65.
- NO** : Adjust inhibitor switch. <Ref. to 3-2 [W200].>

**9T65 : CHECK INPUT SIGNAL FOR TCM.**

- 1) Turn ignition switch to OFF.
- 2) Connect connector to TCM and inhibitor switch.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between TCM and chassis ground.

**Connector & terminal**

**(B54) No. 10 (+) — Chassis ground (-):**

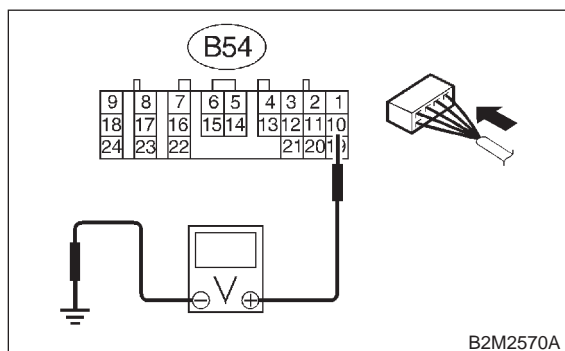

**CHECK** : Is the voltage less than 1 V in "2" range?

**YES** : Go to step 9T66.


**NO** : Go to step 9T79.

**9T66 : CHECK INPUT SIGNAL FOR TCM.**

Measure voltage between TCM and chassis ground.

**Connector & terminal**

**(B54) No. 10 (+) — Chassis ground (-):**

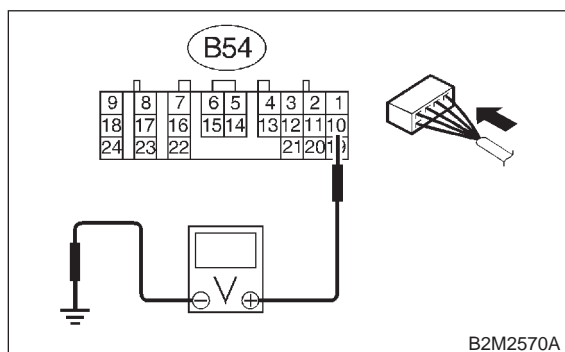

**CHECK** : Is the voltage more than 9.5 V in other ranges?

**YES** : Go to step 9T79.

**NO** : Replace TCM. <Ref. to 3-2 [W23A0].>

**9T67 : CHECK "2" RANGE INDICATOR LIGHT BULB.**

- 1) Turn ignition switch to OFF.
- 2) Remove combination meter.
- 3) Remove "2" range indicator light bulb from combination meter.

**CHECK** : Is "2" range indicator light bulb OK?

**YES** : Go to step 9T68.


**NO** : Replace "2" range indicator light bulb. <Ref. to 6-2 [W8B0].>

**9T68 : CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.**

- 1) Disconnect connectors from TCM and combination meter.
- 2) Measure resistance of harness between TCM and combination meter.

**Connector & terminal**

**(B54) No. 10 — (i11) No. 12:**

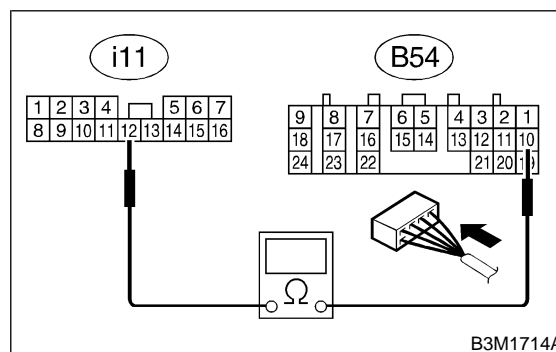

**CHECK** : Is the resistance more than 1 Ω?


**YES** : Go to step 9T79.

**NO** : Repair open circuit in harness between inhibitor switch and combination meter.

**9T69 : CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from TCM, inhibitor switch and combination meter.
- 3) Measure resistance of harness between TCM and chassis ground.

**Connector & terminal**  
**(B54) No. 10 — Chassis ground:**

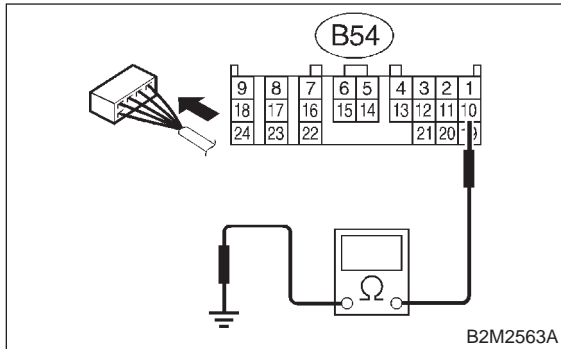


- CHECK** : Is the resistance more than 1 MΩ?
- YES** : Go to step 9T70.
- NO** : Repair ground short circuit in “2” range circuit.

**9T70 : CHECK INHIBITOR SWITCH.**

Measure resistance between inhibitor switch connector receptacle’s terminals.

**Terminals**  
**(T3) No. 6 — No. 4:**

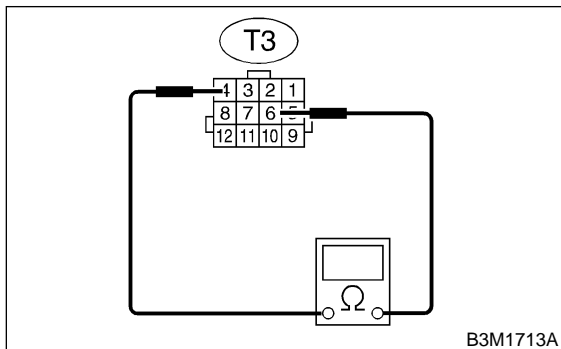


- CHECK** : Is the resistance more than 1 MΩ in other ranges?
- YES** : Replace TCM. <Ref. to 3-2 [W23A0].>
- NO** : Adjust inhibitor switch. <Ref. to 3-2 [W200].>

**9T71 : CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from TCM and inhibitor switch.
- 3) Measure resistance of harness between TCM and inhibitor switch connector.

**Connector & terminal**  
**(B54) No. 1 — (B12) No. 5:**

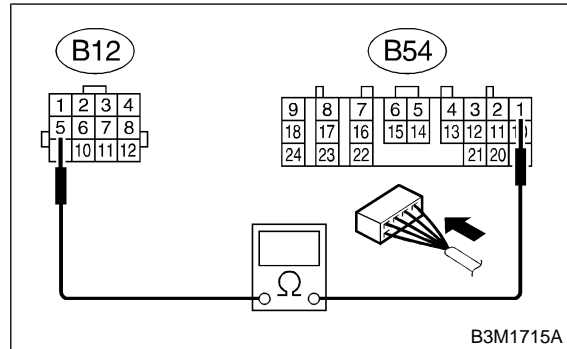


- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 9T72.
- NO** : Repair open circuit in harness between TCM and inhibitor switch connector, and poor contact in coupling connector.

**9T72 : CHECK INHIBITOR SWITCH.**

Measure resistance between inhibitor switch connector receptacle’s terminals.

**Terminals**  
**(T3) No. 5 — No. 4:**

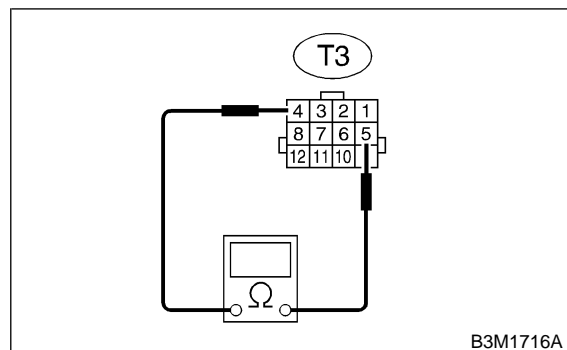


- CHECK** : Is the resistance less than 1 Ω in “1” range?
- YES** : Go to step 9T73.
- NO** : Adjust inhibitor switch. <Ref. to 3-2 [W200].>

**9T73 : CHECK INPUT SIGNAL FOR TCM.**

- 1) Turn ignition switch to OFF.
- 2) Connect connector to TCM and inhibitor switch.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between TCM and chassis ground.

**Connector & terminal**  
**(B54) No. 1 (+) — Chassis ground (-):**

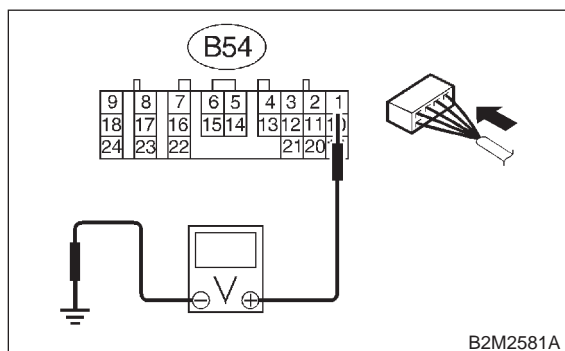


- CHECK** : Is the voltage less than 1 V in "1" range?
- YES** : Go to step 9T74.
- NO** : Go to step 9T79.

**9T74 : CHECK INPUT SIGNAL FOR TCM.**

Measure voltage between TCM and chassis ground.

**Connector & terminal**  
**(B54) No. 1 (+) — Chassis ground (-):**

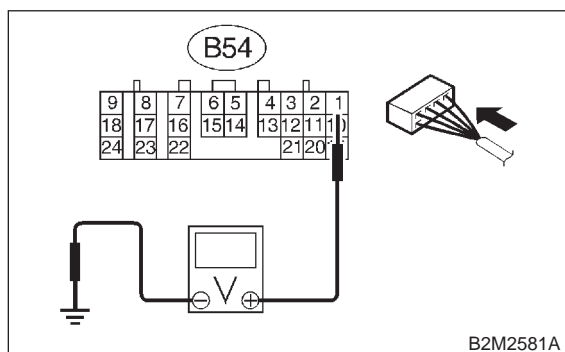

- CHECK** : Is the voltage more than 9.5 V in other ranges?
- YES** : Go to step 9T79.
- NO** : Replace TCM. <Ref. to 3-2 [W23A0].>

**9T75 : CHECK "1" RANGE INDICATOR LIGHT BULB.**


- 1) Turn ignition switch to OFF.
- 2) Remove combination meter.
- 3) Remove "1" range indicator light bulb from combination meter.

- CHECK** : Is "1" range indicator light bulb OK?
- YES** : Go to step 9T76.
- NO** : Replace "1" range indicator light bulb. <Ref. to 6-2 [W8B0].>

**9T76 : CHECK HARNESS CONNECTOR BETWEEN TCM AND COMBINATION METER.**

- 1) Disconnect connectors from TCM and combination meter.
- 2) Measure resistance of harness between TCM and combination meter.

**Connector & terminal**  
**(B54) No. 1 — (i11) No. 5:**

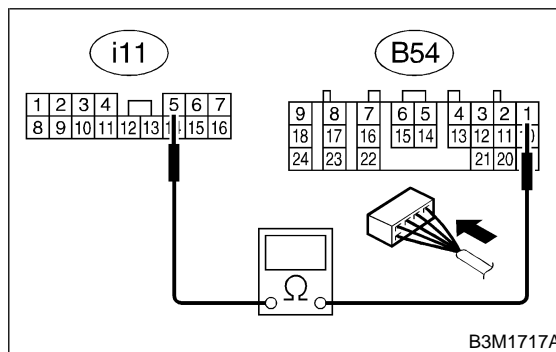


- CHECK** : Is the resistance more than 1Ω?
- YES** : Go to step 9T79.
- NO** : Repair open circuit in harness between inhibitor switch and combination meter.

**9T77 : CHECK HARNESS CONNECTOR BETWEEN TCM AND INHIBITOR SWITCH.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from TCM, inhibitor switch and combination meter.
- 3) Measure resistance of harness between TCM and chassis ground.

**Connector & terminal**

**(B54) No. 1 — Chassis ground:**

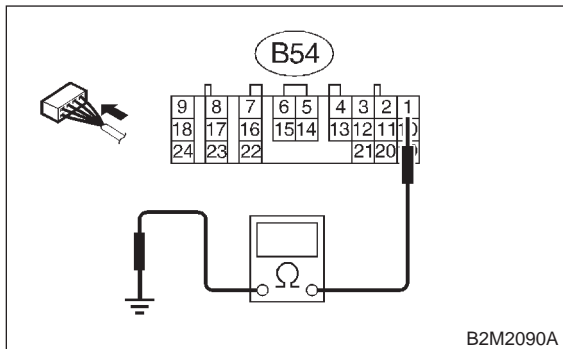


- CHECK** : Is the resistance more than 1 MΩ?
- YES** : Go to step 9T78.
- NO** : Repair ground short circuit in "1" range circuit.

**9T78 : CHECK INHIBITOR SWITCH.**

Measure resistance between inhibitor switch connector receptacle's terminals.

**Terminals**

**(T3) No. 5 — No. 4:**

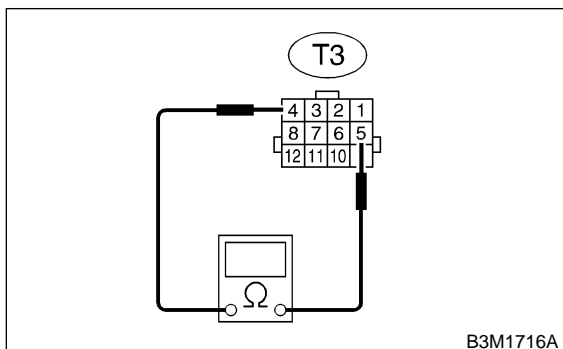

- CHECK** : Is the resistance more than 1 MΩ in other ranges?
- YES** : Replace TCM. <Ref. to 3-2 [W23A0].>
- NO** : Adjust inhibitor switch. <Ref. to 3-2 [W200].>

**9T79 : CHECK POOR CONTACT.**

- CHECK** : Is there poor contact in inhibitor switch circuit?
- YES** : Repair poor contact.
- NO** : Replace TCM. <Ref. to 3-2 [W23A0].>

**U: CHECK SHIFT SOLENOID 1.**

**9U1 : CHECK SHIFT SOLENOID 1.**

- CHECK** : Does the LED of shift solenoid 1 light up?
- YES** : Go to step SHIFT SOLENOID 2. <Ref. to 3-2 [T9V0].>
- NO** : Check shift solenoid 1 circuit. <Ref. to 3-2 [T8J0].>

**V: CHECK SHIFT SOLENOID 2.**

**9V1 : CHECK SHIFT SOLENOID 2.**

- CHECK** : Does the LED of shift solenoid 2 light up?
- YES** : Go to step TORQUE CONTROL 1 SIGNAL. <Ref. to 3-2 [T9W0].>
- NO** : Check shift solenoid 2 circuit. <Ref. to 3-2 [T8K0].>

**W: CHECK TORQUE CONTROL 1 SIGNAL.**

**9W1 : CHECK TORQUE CONTROL 1 SIGNAL.**

Turn ignition switch to ON (engine ON).

- CHECK** : Does the LED of torque control 1 signal light up?
- YES** : Go to step TORQUE CONTROL 2 SIGNAL. <Ref. to 3-2 [T9X0].>
- NO** : Check torque control 1 signal circuit. <Ref. to 3-2 [T8H0].>

**X: CHECK TORQUE CONTROL 2 SIGNAL.**

**9X1 : CHECK TORQUE CONTROL 2 SIGNAL.**

Turn ignition switch to ON (engine ON).

- CHECK** : *Does the LED of torque control 2 signal light up?*
- YES** : Go to step 2-4 BRAKE TIMING SOLENOID. <Ref. to 3-2 [T9Y0].>
- NO** : Check torque control 2 signal circuit. <Ref. to 3-2 [T8H0].>

**Y: CHECK 2-4 BRAKE TIMING SOLENOID.**

**9Y1 : CHECK 2-4 BRAKE TIMING SOLENOID.**

Turn ignition switch to ON, and select 1 range.

- CHECK** : *Does the LED of 2-4 brake timing solenoid light up?*
- YES** : Go to step LOW CLUTCH TIMING SOLENOID. <Ref. to 3-2 [T9Z0].>
- NO** : Check 2-4 brake timing solenoid circuit. <Ref. to 3-2 [T8M0].>

**Z: CHECK LOW CLUTCH TIMING SOLENOID.**

**9Z1 : CHECK LOW CLUTCH TIMING SOLENOID.**

Turn ignition switch to ON, and select 2 range.

- CHECK** : *Does the LED of low clutch timing solenoid light up?*
- YES** : Go to step DIAGNOSIS LAMP. <Ref. to 3-2 [T9AA0].>
- NO** : Check low clutch timing solenoid circuit. <Ref. to 3-2 [T8L0].>

**AA: CHECK DIAGNOSIS LAMP.**

**9AA1 : CHECK DIAGNOSIS WARNING LAMP.**

Turn ignition switch to ON (engine OFF).

- CHECK** : *Does diagnosis lamp light up?*
- YES** : Go to step FWD LAMP. <Ref. to 3-2 [T9AB0].>
- NO** : Check diagnosis lamp circuit. <Ref. to 3-2 [T7A0].>

**AB: CHECK FWD LAMP.**

**9AB1 : CHECK FWD LAMP.**

- CHECK** : *Does the LED of FWD lamp light up?*
- YES** : Check FWD lamp circuit. <Ref. to 3-2 [T9P0].>
- NO** : Go to step General Diagnostic Table. <Ref. to 3-2 [T1000].>