

5. How to Use Super Multiple Junction (SMJ)

The "SMJ" indicated in wiring diagrams is shown in a simplified form.

A: TERMINAL ARRANGEMENT

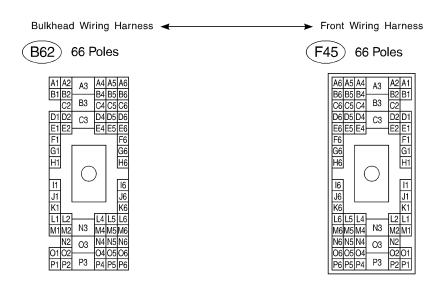


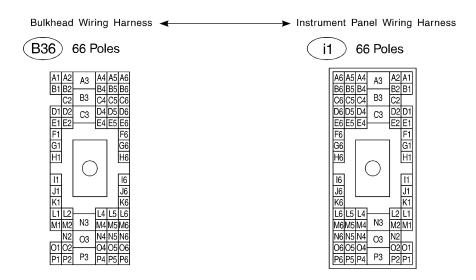

B6M1280A

5. How to Use Super Multiple Junction (SMJ)

B: INSTALLATION

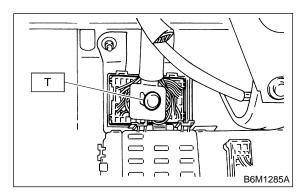

Tightening torque:

T: 4.4 — 7.4 N·m (45 — 75 kg-cm, 39 — 65 in-lb)

NOTE:

- Align the cutout portion of one connector with that of other before tightening the connecting bolt.
- Do not tighten the bolt excessively since this may deform the connectors.

C: EXPLANATION OF SMJ SHOWN IN THE WIRING DIAGRAM

