

# 2005 Subaru Impreza Factory Service Manual BACKUP CD

Brought to you by Eris Studios  
NOT FOR RESALE

This CD is provided strictly to backup software, which you currently own, to protect it from damage, accidental or otherwise. These duplications are allowed under the copyright law, and you are entitled to this service by law. The provider of this service will not be held accountable for the purchaser's use. If you sell your original software, you will destroy the backup of that title. If you imply piracy, we cannot legally serve you, and we hold no liability for anything you, the purchaser will do with the backup. We understand that by buying these backups from us, you are implying you have the original copy of that title, and we will supply it to you on that understanding only. If you imply to us that you do not own the original copy, then we cannot supply you with the disc, as you have no legal rights to own it. As a service provider, we cannot allow this, as it would mean we would be no longer able to provide you with this service. By complying with these regulations, it allows us, as the service provider to duplicate and you, as a consumer to receive the right of back-up's to protect your original software. Please note, we do not condone piracy, but we do recognize the ever-growing need for CD backup software to protect valuable originals.

# Table of Contents

## 1 – General Info

01. Foreword	FW
02. How to Use This Manual	HU
03. Specifications	SPC
04. Precaution	PC
05. Note	NT
06. Identification	ID
07. Recommended Materials	RM
08. Pre-delivery Inspection	PI
09. Periodic Maintenance Services	PM

## 2 – STi Engine

01. Fuel Injection (Fuel System)	FU(STi)
02. Emission Control (Aux. Emission Control Devices)	EC(STi)
03. Intake (Induction)	IN(STi)
04. Mechanical	ME(STi)
05. Exhaust	EX(STi)
06. Cooling	CO(STi)
07. Lubrication	LU(STi)
08. Speed Control Systems	SP(STi)
09. Ignition	IG(STi)
10. Starting-Charging Systems	SC(STi)
11. Engine (Diagnostics)	EN(STi)(diag)
12. General Description	GD(STi)

## 3 – H4SO Engine (non-turbo)

01. Fuel Injection (Fuel System)	FU(H4SO)
02. Emission Control (Aux. Emission Control Devices)	EC(H4SO)
03. Intake (Induction)	IN(H4SO)
04. Mechanical	ME(H4SO)
05. Exhaust	EX(H4SO)
06. Cooling	CO(H4SO)
07. Lubrication	LU(H4SO)
08. Speed Control Systems	SP(H4SO)
09. Ignition	IG(H4SO)
10. Starting-Charging Systems	SC(H4SO)
11. Engine (Diagnostics)	EN(H4SO)(diag)
12. General Description	GD(H4SO)

## 4 – H4DOTC Engine (turbo)

01. Fuel Injection (Fuel System)	FU(H4DOTC)
02. Emission Control (Aux. Emission Control Devices)	EC(H4DOTC)
03. Intake (Induction)	IN(H4DOTC)
04. Mechanical	ME(H4DOTC)
05. Exhaust	EX(H4DOTC)
06. Cooling	CO(H4DOTC)
07. Lubrication	LU(H4DOTC)
08. Speed Control Systems	SP(H4DOTC)
09. Ignition	IG(H4DOTC)
10. Starting-Charging Systems	SC(H4DOTC)
11. Engine (Diagnostics)	EN(H4DOTC)(diag)
12. General Description	GD(H4DOTC)

## 5 – Transmission

01. Control Systems	CS
02. Automatic Transmission	4AT
03. Automatic Transmission (Diagnostics) H4SO (non-turbo)	4AT(D)(diag)
04. Automatic Transmission (Diagnostics) H4DOTC (turbo)	4AT(diag)
05. Manual Transmission and Differential 5-speed (5MT)	5MT
06. Manual Transmission and Differential 6-speed (6MT)	6MT
07. Manual Transmission and Differential (Diagnostics)	6MT(diag)
08. Clutch System	CL

## 6 – Chassis

01. Front Suspension	FS
02. Rear Suspension	RS
03. Wheel and Tire System	WT
04. Differentials	DI
05. Transfer Case	TC
06. Drive Shaft System	DS
07. ABS	ABS
08. ABS (Diagnostics)	ABS(diag)
09. Brake	BR
10. Parking Brake	PB
11. Power Assisted System (Power Steering)	PS

## 7 – Body

01. HVAC System (Heater, Ventilator and AC)	AC
02. HVAC System (Auto AC) (Diagnostics)	AC(diag)
03. Airbag System	AB
04. Airbag System (Diagnostics)	AB(diag)
05. Seat Belt System	SB
06. Lighting System	LI
07. Wiper and Washer Systems	WW
08. Entertainment	ET
09. Communication System	COM
10. Glass / Windows / Mirrors	GW
11. Body Structure	BS
12. Instrumentation Driver Info	IDI
13. Seats	SE
14. Security and Locks	SL
15. Sunroof T-Top Convertible Top (Sunroof)	SR
16. Exterior / Interior Trim	EI
17. Exterior Body Panels	EB
18. Cruise Control System	CC
19. Cruise Control System H4SO & STi (Diagnostics)	CC(ETC)(diag)
20. Cruise Control System H4DOTC (Diagnostics)	CC(diag)
21. Immobilizer (Diagnostics)	IM(diag)
22. Option Parts	OP

## 8 – Wiring

01. Wiring	WI
------------	----

## 9 – Mechanism and Function

- 01. Specifications
- 02. Fuel Injection (Fuel System)
  - a. H4SO FU(H4SO)
  - b. H4SO U5 FU(H4SO U5)
  - c. H4DOTC FU(H4DOTC)
- 03. Emission Control (Aux. Emission Control Devices)
  - a. H4SO EC(H4SO)
  - b. H4SO U5 EC(H4SO U5)
  - c. H4DOTC EC(H4DOTC)
- 04. Intake (Induction)
  - a. H4SO IN(H4SO)
  - b. H4SO U5 IN(H4SO U5)
  - c. H4DOTC IN(H4DOTC)
- 05. Mechanical
  - a. H4SO ME(H4SO)
  - b. H4SO U5 ME(H4SO U5)
  - c. H4DOTC ME(H4DOTC)
- 06. Exhaust
  - a. H4SO EX(H4SO)
  - b. H4SO U5 EX(H4SO U5)
  - c. H4DOTC EX(H4DOTC)
- 07. Cooling
  - a. H4SO CO(H4SO)
  - b. H4SO U5 CO(H4SO U5)
  - c. H4DOTC CO(H4DOTC)
- 08. Lubrication
  - a. H4SO LU(H4SO)
  - b. H4SO U5 LU(H4SO U5)
  - c. H4DOTC LU(H4DOTC)
- 09. Speed Control Systems
  - a. H4SO SP(H4SO)
  - b. H4SO U5 SP(H4SO U5)
  - c. H4DOTC SP(H4DOTC)
- 10. Ignition
  - a. H4SO IG(H4SO)
  - b. H4SO U5 IG(H4SO U5)
  - c. H4DOTC IG(H4DOTC)
- 11. Starting-Charging Systems
  - a. H4SO SC(H4SO)
  - b. H4DOTC SC(H4DOTC)

## 9 – Mechanism and Function (cont.)

12. Control System (Manual)	CS
13. Control System (Automatic)	CS
14. Automatic Transmission (4AT)	4AT
15. Automatic Transmission (5AT)	5AT
16. Manual Transmission and Differential	5MT
17. Clutch	CL
18. Front Suspension	FS
19. Rear Suspension	RS
20. Wheel and Tire System	WT
21. Differentials	DI
22. Transfer Case	TC
23. Drive Shaft System	DS
24. ABS	ABS
25. Vehicle Dynamics Control System (VDC)	VDC
26. Brake	BR
27. Parking Brake	PB
28. Power Assisted System (Power Steering)	PS
29. HVAC System (Heater, Ventilator and AC)	AC
30. Airbag System	AB
31. Seat Belt System	SB
32. Lighting System	LI
33. Wiper and Washer System	WW
34. Communication System	COM
35. Entertainment System	ET
36. Glass / Windows / Mirrors	GW
37. Instrumentation / Driver Info	IDI
38. Seat	SE
39. Security and Locks	SL
40. Sunroof T-Top Convertible Top	SR
41. Exterior / Interior Trim	EI
42. Exterior Body Panels	EB
43. Cruise Control System	CC
44. LAN System	LAN