

9. Brake Booster


A: REMOVAL

1) Remove or disconnect the following parts at engine compartment.

- (1) Disconnect the connector for brake fluid level gauge.
- (2) Remove the brake pipes from master cylinder.
- (3) Remove the master cylinder installing nuts.
- (4) Disconnect the vacuum hose from brake booster.

2) Remove the following parts from pedal bracket.

- (1) Snap pin and clevis pin
- (2) Four brake booster installing nuts

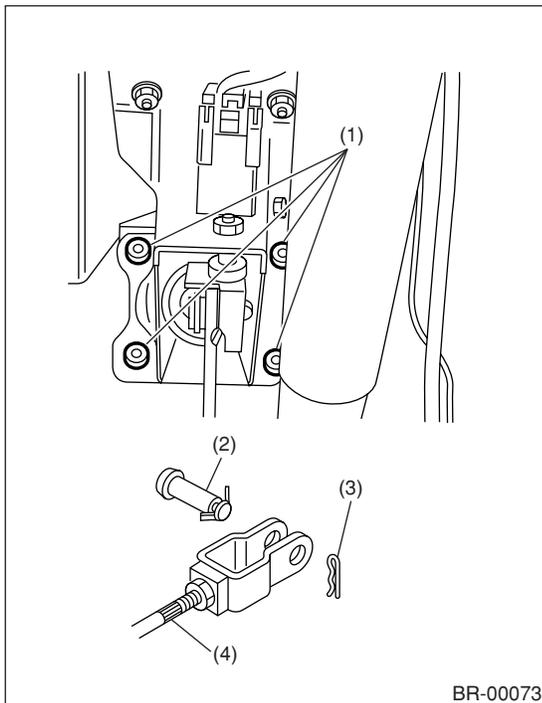

- (1) Nut
- (2) Clevis pin
- (3) Snap pin
- (4) Operating rod

3) Remove the brake booster while shunning brake pipes.


NOTE:

- Do not apply strong impact to booster shell and vacuum pipe.
- Be careful not to drop the brake booster. The brake booster should be replaced if it has been dropped.
- Use special care when handling the operating rod. If excessive force is applied to operating rod sufficient to cause a change in the angle in excess of $\pm 3^\circ$, it may result in damage to the power piston cylinder.

- Use care when placing the brake booster on the floor.
- Do not change the push rod length.

CAUTION:

- Do not disassemble the brake booster.
- If external force is applied from above when brake booster is placed in this position, the resin portion as indicated by "P", may be damaged.

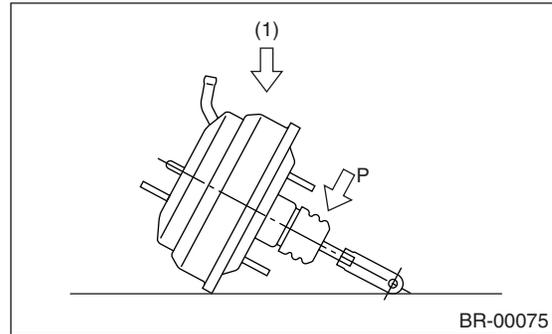

(1) Force


B: INSTALLATION

1) Check and adjust the operating rod of brake booster.

Standard L:

136.3 mm (5.38 in)

If it is not within the specified value, adjust it by adjusting the brake booster operating rod.

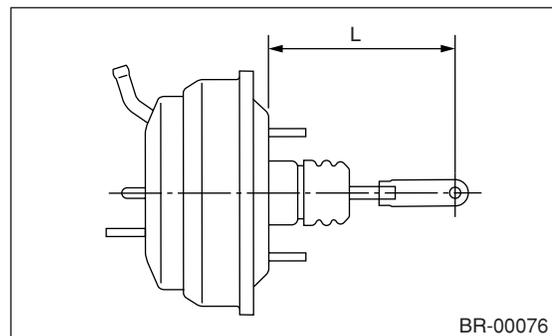


2) Mount the brake booster in position.

Brake Booster

BRAKE

3) Connect the operating rod to brake pedal with clevis pin and snap pin.

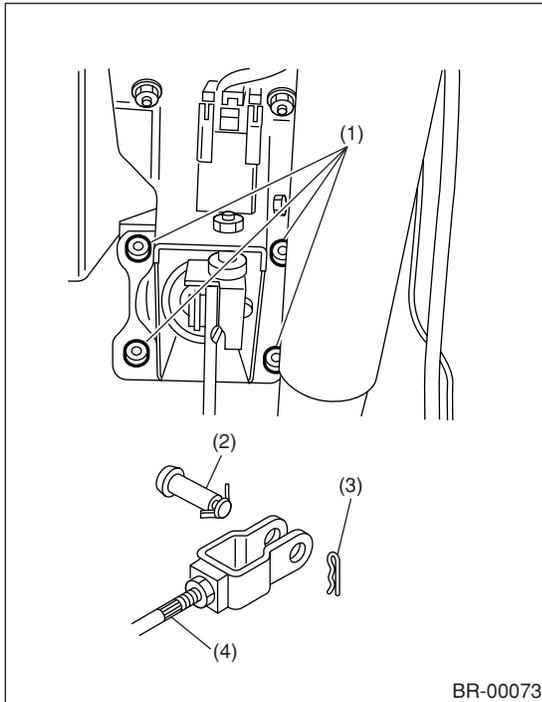


- (1) Nut
- (2) Clevis pin
- (3) Snap pin
- (4) Operating rod

NOTE:

Apply a thin coat of grease [SUNLIGHT 2 (Part No. 003602010)] to clevis pin.

- 4) Connect the vacuum hose to brake booster.
- 5) After replacing the O-ring with a new one, install the master cylinder to brake booster.

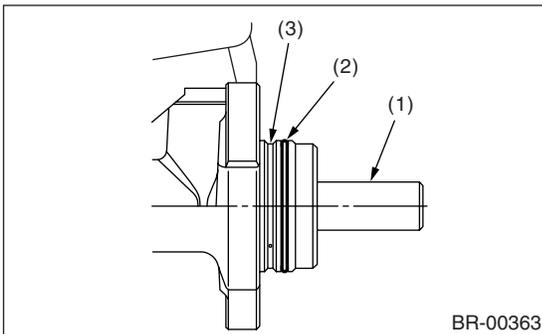

- (1) Primary piston
- (2) O-ring
- (3) Do not install the O-ring on this groove.


- 6) Connect the brake pipes to master cylinder.
- 7) Connect the connector for brake fluid level gauge.
- 8) Measure the clearance between the threaded end of stop light switch and stopper.

If it is not within specified value, adjust it by adjusting the position of stop light switch. <Ref. to BR-41, ADJUSTMENT, Stop Light Switch.>

CAUTION:

Be careful not to rotate the stop light switch.

Stop light switch clearance A:
0.3 mm (0.012 in)

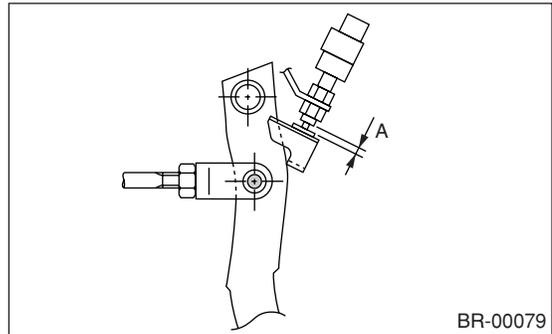

- 9) Apply grease to the operating rod connecting pin to prevent it from wearing.
- 10) Bleed air from the brake system.

Tightening torque (Air bleeder screw):
8 N·m (0.8 kgf-m, 5.8 ft-lb)

- 11) Conduct road tests to ensure brakes do not drag.

C: INSPECTION

1. OPERATION CHECK (WITHOUT GAUGES)

CAUTION:

When checking operation, be sure to securely apply the parking brake.


• CHECKING WITHOUT GAUGES

This method cannot determine the exact portion which has failed. But it can provide a rough understanding of the nature of failure if checking is conducted in accordance with the following procedures.

• AIR TIGHTNESS CHECK

Start the engine, and idle it for 1 to 2 minutes, then turn it OFF. Depress the brake pedal several times applying the same pedal force as that used in ordinary braking operations. The pedal stroke should be greatest on the 1st depression, and it should become smaller with each successive depression. If

no change occurs in the pedal height while in a depressed state, the brake booster is faulty.

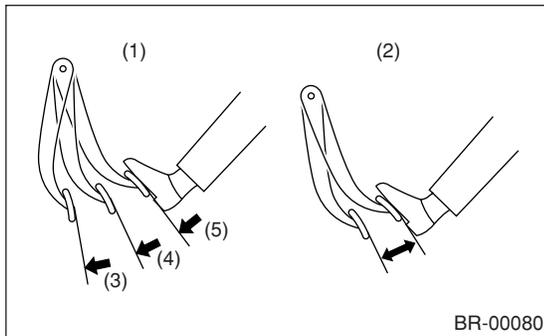


- (1) Normal operation
- (2) Not OK
- (3) 1st
- (4) 2nd
- (5) 3rd

NOTE:

- In the event of defective operation, also inspect the condition of the check valve and vacuum hose.
- Replace them if faulty and conduct the test again.
- If no improvement is observed, check precisely with gauges.

• OPERATION CHECK

1) With the engine OFF, depress the brake pedal several times applying the same pedal force and make sure that the pedal height does not vary with each depression of the pedal.

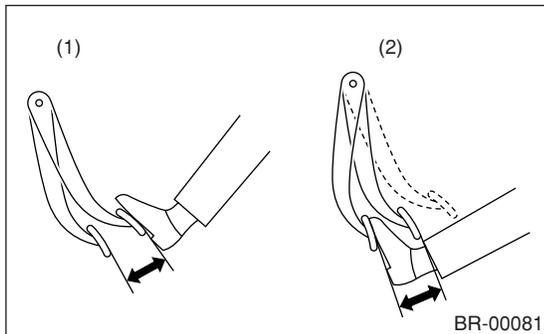

- (1) When engine is stopped
- (2) When engine is started

2) With the brake pedal depressed, start the engine.

3) As engine starts, the brake pedal should move slowly toward the floor. If no change occurs in the pedal height, the brake booster is faulty.

NOTE:

If faulty, check precisely with gauges.

• LOADED AIR TIGHTNESS CHECK

Depress the brake pedal while engine is running, and turn OFF the engine while the pedal is still depressed. Keep the pedal depressed for 30 seconds; if no change occurs in the pedal height, the brake booster is functioning normally; if the pedal height increases, it is faulty.

NOTE:

If faulty, check precisely with gauges.


2. OPERATION CHECK (WITH GAUGES)

CAUTION:

When checking operation, be sure to securely apply the parking brake.

• CHECKING WITH GAUGES


Connect gauges as shown in the figure. After bleeding air from pressure gauges, proceed to each check.

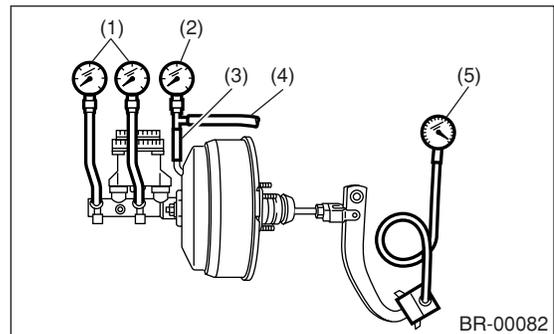

- (1) Pressure gauge
- (2) Vacuum gauge
- (3) Adapter hose
- (4) Vacuum hose
- (5) Pedal force gauge

• AIR TIGHTNESS CHECK

1) Start the engine and keep it running until a vacuum of 66.7 kPa (500 mmHg, 19.69 inHg) = point A is indicated on vacuum gauge. Do not depress the brake pedal at this moment.

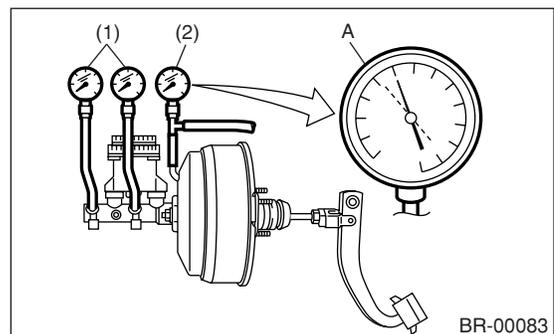

- (1) Pressure gauge
- (2) Vacuum gauge

Brake Booster


BRAKE

2) Stop the engine and watch the gauge. If the vacuum drop range is less than 3.3 kPa (25 mmHg, 0.98 inHg) within 15 seconds after stopping the engine, brake booster is functioning properly. If defective, the cause may be one of those listed below.

- Check valve malfunction
- Leak from vacuum hose
- Leak from shell jointed portion or stud bolt welded portion
- Damaged diaphragm
- Leak from valve body seal and bearing portion
- Leak from plate and seal assembly portion
- Leak from poppet valve assembly portion

• LOADED AIR TIGHTNESS CHECK

1) Start the engine and depress the brake pedal with pedal force of 196 N (20 kgf, 44 lb). Keep the engine running until a vacuum of 66.7 kPa (500 mmHg, 19.69 inHg) = point B is indicated on vacuum gauge while the pedal is still depressed.

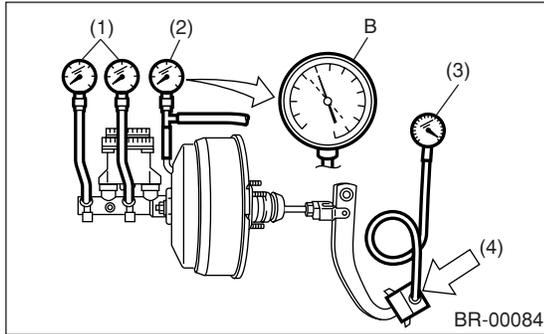

- (1) Pressure gauge
- (2) Vacuum gauge
- (3) Pedal force gauge
- (4) Depressed

2) Stop the engine and watch vacuum gauge. If the vacuum drop range is less than 3.3 kPa (25 mmHg, 0.98 inHg) within 15 seconds after stopping the engine, brake booster is functioning properly. If defective, refer to "AIR TIGHTNESS CHECK".

<Ref. to BR-30, INSPECTION, Brake Booster.>

3) If any fault is found on brake booster, replace the brake booster with a new one.

• LACK OF BOOSTING ACTION CHECK

Turn OFF the engine, and set the vacuum gauge reading at "0". Then, check the fluid pressure when brake pedal is depressed. The pressure must be greater than the standard value listed.

• BOOSTING ACTION CHECK

Set the vacuum gauge reading at 66.7 kPa (500 mmHg, 19.69 inHg) by running engine. Then, check the fluid pressure when brake pedal is depressed. The pressure must be greater than the standard value listed.

Brake pedal force N (kgf, lb)		147 (15, 33)	294 (30, 66)
Fluid pressure kPa (kg/cm ² , psi)	15" 16" OUT- BACK	6,003 (61, 871)	11,273 (115, 1,635)
	16" (Except for OUT- BACK)	5,381 (55, 780)	10,982 (112, 1,593)
	17"	4,963 (51, 720)	10,055 (103, 1,458)

Brake pedal force N (kgf, lb)	147 (15, 33)	294 (30, 66)
Fluid pressure kPa (kg/cm ² , psi)	545 (6, 79)	1,564 (16, 227)