
1. General Description

A: SPECIFICATION

Item		Specification	
Ignition coil and ignitor ASSY	Model		FK0186
	Ignition system		Independent ignition coil
	Manufacturer		Diamond Electric
Spark plug	Manufacturer and type		NGK: ILFR6B
	Thread size (diameter, pitch, length)	mm	14, 1.25, 26.5
	Spark plug gap	mm (in)	0.7 — 0.8 (0.028 — 0.031)
	Electrode		Iridium

B: COMPONENT

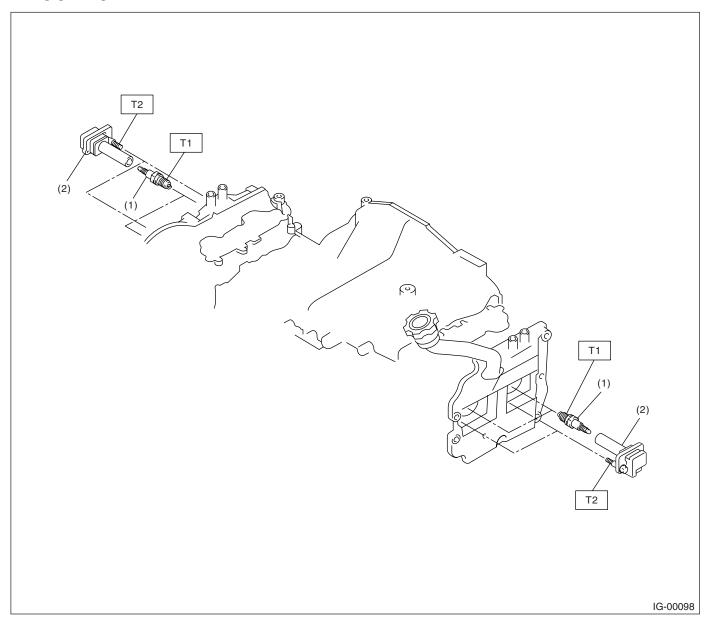

(1) Spark plug

(2) Ignition coil and ignitor ASSY

Tightening torque: N⋅m (kgf-m, ft-lb)

T1: 21 (2.1, 15.2) T2: 16 (1.6, 11.7)

C: CAUTION

- Wear work clothing, including a cap, protective goggle and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Be careful not to burn yourself, because each part on the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting electrical connectors of sensors or units, be sure to disconnect the ground cable from battery.