


Intercooler

INTAKE (INDUCTION)



7. Intercooler

A: REMOVAL

- 1) Remove the collector cover.
- 2) Loosen the clamp, and then remove the air by-pass pipe (A) from air by-pass valve.
- 3) Loosen the clamp, and then remove the intake duct (B) from intercooler.

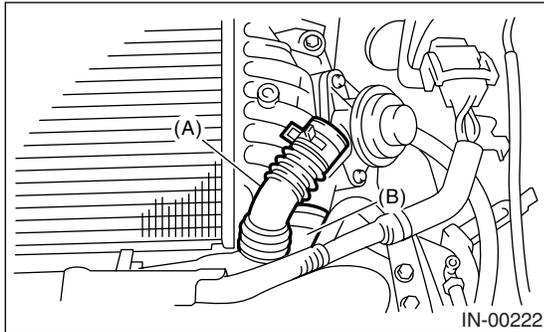

- 4) Remove the bolts which secure intake duct to turbocharger.
- 5) Remove the bolts which secure intercooler to bracket, and then remove the intercooler.

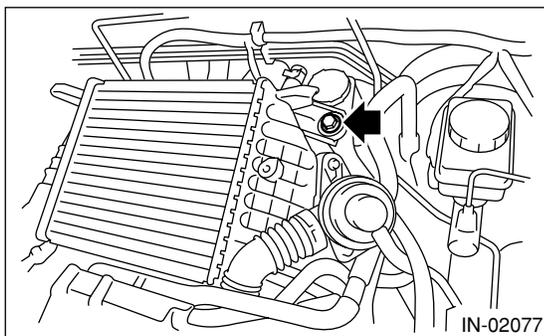
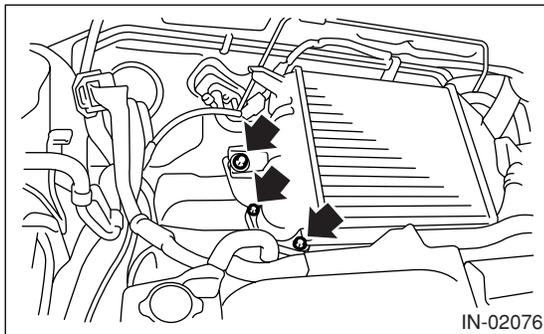


B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

16 N·m (1.6 kgf-m, 11.6 ft-lb)

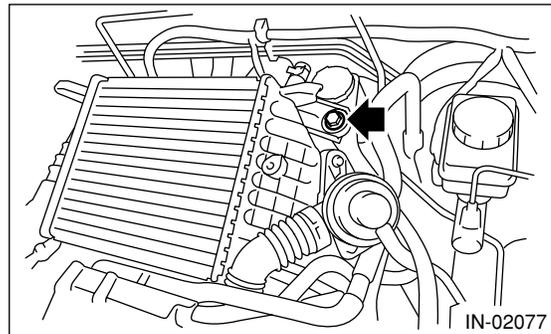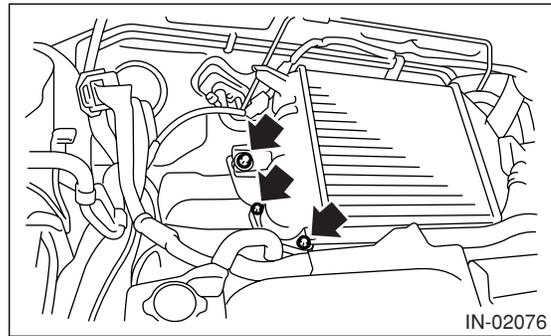

C: DISASSEMBLY

- 1) Remove the intake duct from intercooler.
- 2) Remove the air by-pass valve from intercooler.

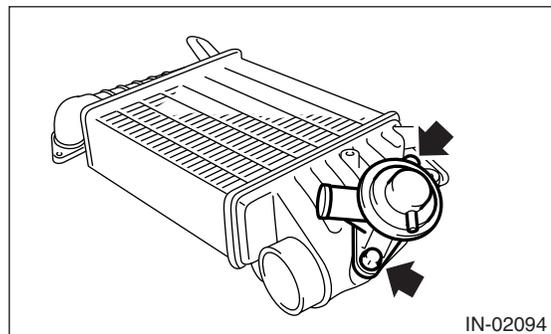

D: ASSEMBLY

Assemble in the reverse order of disassembly.

Tightening torque:

6.5 N·m (0.66 kgf-m, 4.8 ft-lb)

