## 8. General Diagnostic Table

## A: INSPECTION

Symptom	Possible cause	Corrective action
Wheel wobble.	Improperly inflated tire	Adjust the tire pressure.
	Uneven wear	Check the tire referring to Abnormal tire wear in this table, carry out the procedure and replace the tire.
	Front wheel alignment	Check the front wheel alignments. <ref. fs-7,="" inspection,="" to="" wheel<br="">Alignment.&gt;</ref.>
	Rear wheel alignment	Check the rear wheel alignments. <ref. inspection,="" rs-8,="" to="" wheel<br="">Alignment.&gt;</ref.>
	Front strut	Check the front strut. <ref. fs-<br="" to="">23, INSPECTION, Front Strut.&gt;</ref.>
	Rear shock absorber	Check the rear shock absorber. <ref. inspection,="" rear<br="" rs-16,="" to="">Shock Absorber.&gt;</ref.>
	Front axle	Check the front axle. <ref. ds-<br="" to="">16, INSPECTION, Front Axle.&gt;</ref.>
	Front hub unit bearing	Check the front hub unit bearing. <ref. ds-18,="" front<br="" inspection,="" to="">Hub Unit Bearing.&gt;</ref.>
	Rear hub unit bearing	Check the rear hub unit bearing. <ref. ds-21,="" inspection,="" rear<br="" to="">Hub Unit Bearing.&gt;</ref.>
Vehicle is abnormally out of	Improperly inflated tire	Adjust the tire pressure.
balance.	Uneven wear	Check the tire referring to Abnormal tire wear in this table, carry out the procedure and replace the tire.
	Front stabilizer	Check the front stabilizer. <ref. to<br="">FS-15, INSPECTION, Front Stabi- lizer.&gt;</ref.>
	Front wheel alignment	Check the front wheel alignments. <ref. fs-7,="" inspection,="" to="" wheel<br="">Alignment.&gt;</ref.>
	Rear wheel alignment	Check the rear wheel alignments. <ref. inspection,="" rs-8,="" to="" wheel<br="">Alignment.&gt;</ref.>
Abnormal wheel vibration	Improperly inflated tire	Adjust the tire pressure.
	Uneven wear	Check the tire referring to Abnormal tire wear in this table, carry out the procedure and replace the tire.
	Improper wheel balancing	Check the wheel balance. <ref. to<br="">WT-8, ADJUSTMENT, Wheel Bal- ancing.&gt;</ref.>
	Front axle	Check the front axle. <ref. ds-<br="" to="">16, INSPECTION, Front Axle.&gt;</ref.>
	Front hub unit bearing	Check the front hub unit bearing. <ref. ds-18,="" front<br="" inspection,="" to="">Hub Unit Bearing.&gt;</ref.>
	Rear hub unit bearing	Check the rear hub unit bearing. <ref. ds-21,="" inspection,="" rear<br="" to="">Hub Unit Bearing.&gt;</ref.>

## General Diagnostic Table

## WHEEL AND TIRE SYSTEM

Symptom	Possible cause	Corrective action
Abnormal tire wear	Improperly inflated tire	Adjust the tire pressure.
	Improper wheel balancing	Check the wheel balance. <ref. to<br="">WT-8, ADJUSTMENT, Wheel Bal- ancing.&gt;</ref.>
	Front wheel alignment	Check the front wheel alignments. <ref. fs-7,="" inspection,="" to="" wheel<br="">Alignment.&gt;</ref.>
	Rear wheel alignment	Check the rear wheel alignments. <ref. inspection,="" rs-8,="" to="" wheel<br="">Alignment.&gt;</ref.>