
1. General Description

A: SPECIFICATION

Туре	Mechanical on rear brakes, drum in disc
Effective drum mm (in) diameter	170 (6.69)
Lining dimensions (length × width × mm (in) thickness)	163.1 × 30.0 × 3.2 (6.421 × 1.181 × 0.126)
Clearance adjustment	Manual adjustment
Lever stroke notches/N (kgf, lb)	5 to 6/200 (20.4, 45)

B: COMPONENT

1. PARKING BRAKE (REAR DISC BRAKE)

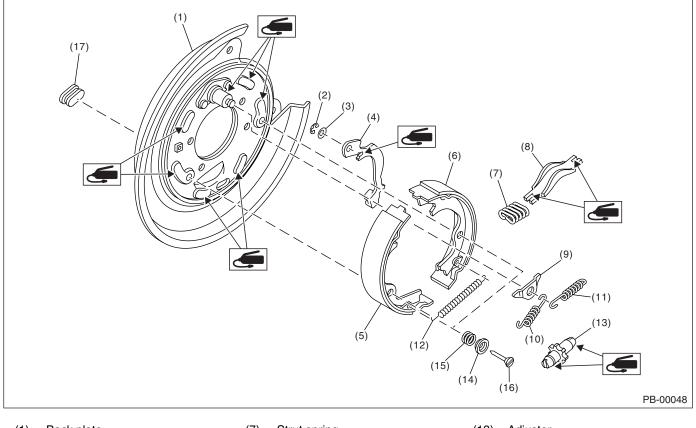


- (1) Back plate
- (2) Retainer
- (3) Spring washer
- (4) Lever
- (5) Parking brake shoe (Primary)
- (6) Parking brake shoe (Secondary)
- (7) Strut spring
- (8) Strut
- (9) Shoe guide plate
- (10) Primary return spring
- (11) Secondary return spring
- (12) Adjusting spring

- (13) Adjuster
- (14) Shoe hold-down cup
- (15) Shoe hold-down spring
- (16) Shoe hold-down pin
- (17) Adjusting hole cover

General Description

2. PARKING BRAKE CABLE

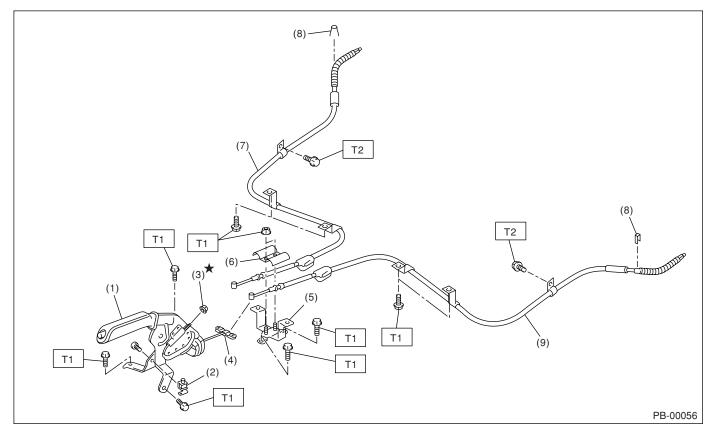

- (1) Parking brake lever
- (6) Clamp

Clamp

(7) (8)

(9)

Parking brake cable RH

Parking brake cable LH

- (2) Parking brake switch
- (3) Adjusting nut (Self-locking nut)
- (4) Equalizer
- (5) Bracket

C: CAUTION

• Wear work clothing, including a cap, protective goggles, and protective shoes during operation.

• Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.

• Be careful not to burn your hands, because each part on the vehicle is hot after running.

• Use SUBARU genuine grease etc. or the equivalent. Do not mix grease etc. with that of another grade or from other manufacturers.

• Be sure to tighten fasteners including bolts and nuts to the specified torque.

• Place shop jacks or rigid racks at the specified points.

• Before securing a part on a vice, place cushioning material such as wood blocks, aluminum plate, or shop cloth between the part and the vice.

• Keep grease etc. away from parking brake shoes.

Tightening torque: N·m (kgf-m, ft-lb) T1: 18 (1.8, 13.0) T2: 33 (3.4, 24.3)