
- **1. General Description**
- A: COMPONENT
- 1. SEDAN MODEL

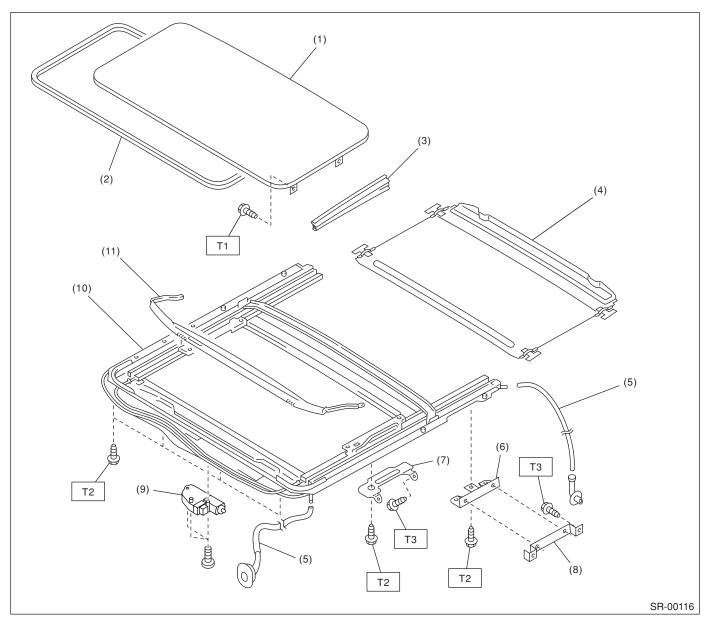

- (1) Glass lid
- (2) Weatherstrip
- (3) Cover
- (4) Sunshade
- (5) Drain tube
- (6) Assist rail bracket (Rear)
- (7) Assist rail bracket (Front)
- (8) Sunroof bracket (Rear)
- (9) Motor ASSY
- (10) Frame ASSY
- (11) Deflector


 Tightening torque: N·m (kgf-m, ft-lb)

 T1:
 4.5 (0.46, 3.3)

 T2:
 6.0 (0.61, 4.4)

 T3:
 7.5 (0.76, 5.3)

2. WAGON MODEL

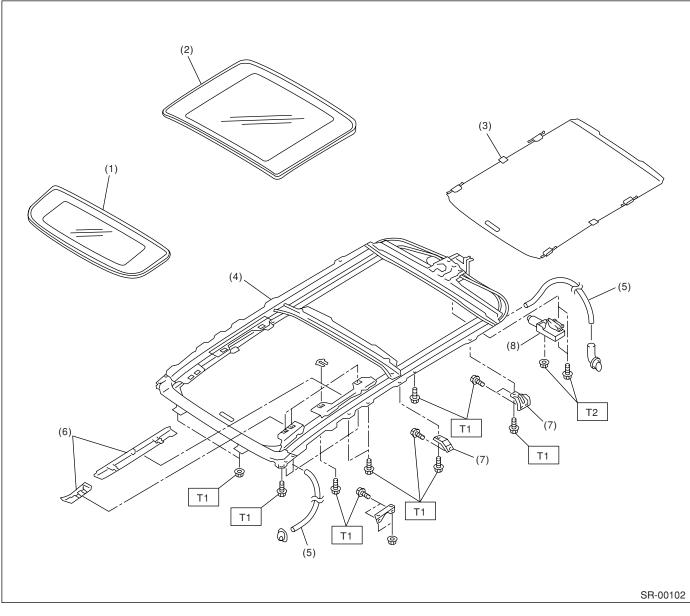

- (1) Glass lid (Front)
- (2) Glass lid (Rear)
- (3) Sunshade
- (4) Frame ASSY

B: CAUTION

• Before disassembling or reassembling parts, always disconnect the battery ground cable. When replacing the audio, control unit, and other parts provided with memory functions, record the memory contents before disconnecting the battery ground cable in order to prevent memory deletion.

• Reassemble the parts in the reverse order of disassembly unless otherwise indicated.

- Adjust parts to the given specifications.
- Connect the connectors securely for reassembly.

- (5) Drain tube
- (6) Cover (Front and rear)
- (7) Frame bracket
- (8) Motor ASSY

- Tightening torque: N⋅m (kgf-m, ft-lb) T1: 7.5 (0.76, 5.3) T2: 4.5 (0.46, 3.0)
- After reassembly, make sure functional parts operate smoothly.

C: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.