2. Wiper and Washer System

A: WIRING DIAGRAM

1. WIPER AND WASHER (FRONT)

<Ref. to WI-157, WIRING DIAGRAM, Front Wiper and Washer System.>

2. WIPER AND WASHER (REAR)

<Ref. to WI-158, WIRING DIAGRAM, Rear Wiper and Washer System.>

B: INSPECTION

Symptom	Repair order
Wiper and washers do not operate.	(1) Wiper fuse (Front: F/B No. 30, Rear: F/B No. 23)
	(2) Combination switch
	(3) Wiper motor assembly
	(4) Wiring harness
	(5) Body integrated unit (rear wiper only)
Wipers do not operate in LO or HI.	(1) Combination switch
	(2) Wiper motor assembly
	(3) Wiring harness
Wipers do not operate in INT.	(1) Combination switch
	(2) Wiper motor assembly
	(3) Wiring harness
	(4) Body integrated unit (rear wiper only)
Washer motor does not operate.	(1) Washer switch
	(2) Washer motor
	(3) Wiring harness
Wipers do not operate when washer switch is ON.	(1) Wiper motor assembly
	(2) Wiring harness
Washer fluid spray does not operate properly.	(1) Washer motor
	(2) Washer hose and nozzle