


7. Front Wiper Motor and Link

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the cowl panel. <Ref. to EI-39, REMOVAL, Cowl Panel.>
- 3) Disconnect the connector of wiper motor assembly.
- 4) Remove the bolt to remove wiper assembly.

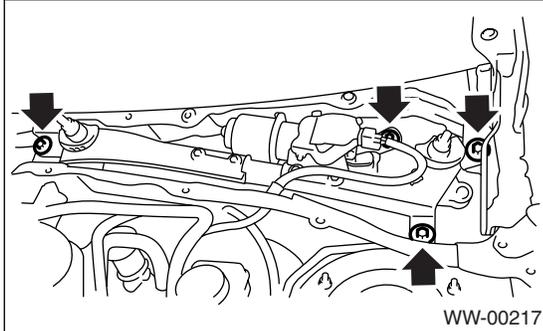

NOTE:

Wiper motor and wiper link can not be disassembled, because those are assembly part.

B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

Refer to “COMPONENT” of “General Description”.


<Ref. to WW-2, FRONT WIPER, COMPONENT, General Description.>

C: INSPECTION


- 1) When the battery is connected to the terminal of connectors, confirm that the wiper motor operates at low speed.

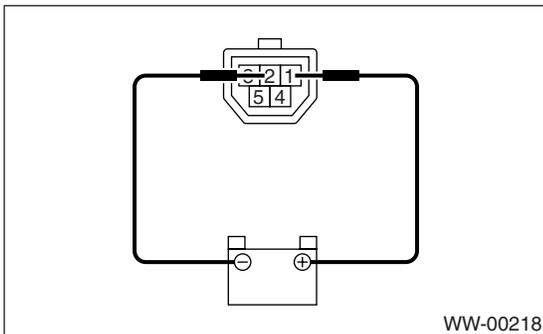

- 2) When the battery is connected to the terminal of connectors, confirm that the wiper motor operates at high speed.

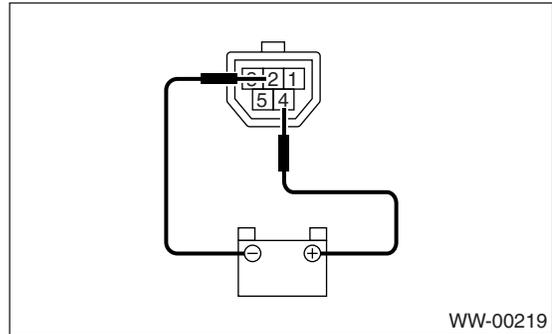

- 3) Connect the battery to terminals of connector, and remove the terminal connection with wiper motor rotated at low speed, and stop the wiper motor through operation.

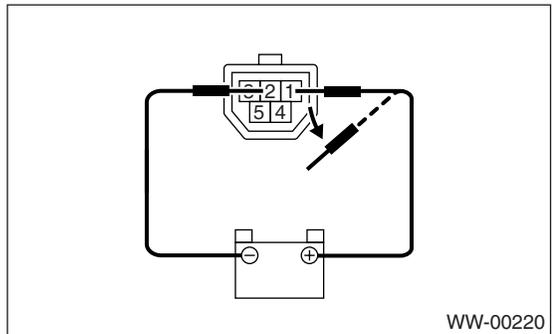

- 4) Connect the battery and confirm that the wiper motor stops at automatic stop position after the wiper motor operates at low speed again.

