



## 34. Trunk Lid Garnish

### A: REMOVAL


1) Remove the license plate, loosen the bolts (A).

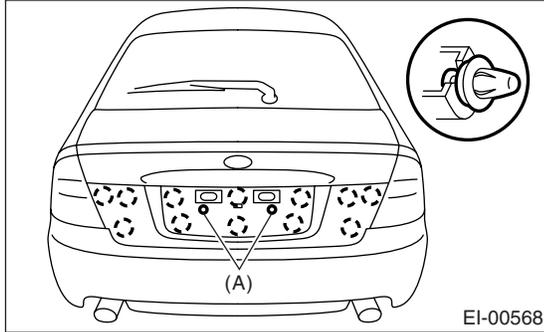

2) Remove the clip in the upper corner of trunk lid garnish.

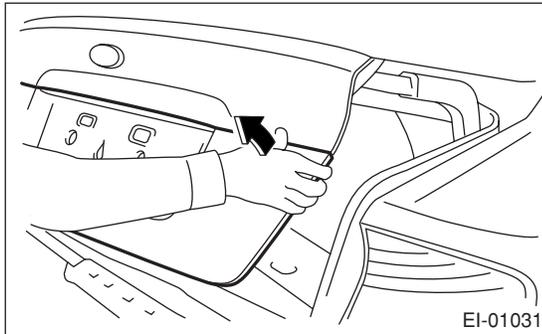

3) Remove the trunk lid garnish in the order from the end of it, by accessing it through the gap between trunk lid garnish and trunk lid panel.

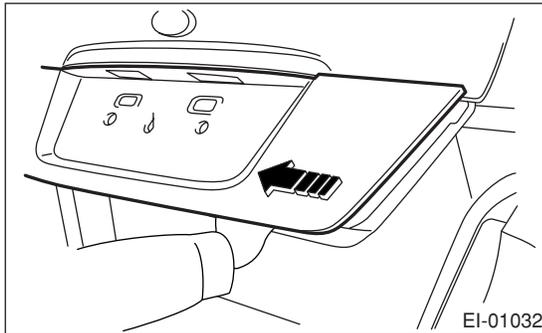

### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**

**7.5 N·m (0.77 kgf-m, 5.53 ft-lb)**