



## 3. Front Crossmember Support Plate

### A: REMOVAL

- 1) Lift-up the vehicle.
  - 2) Remove the front under cover. <Ref. to EI-26, REMOVAL, Front Under Cover.>
  - 3) Remove the bolt and remove front crossmember support plate.
- Large type

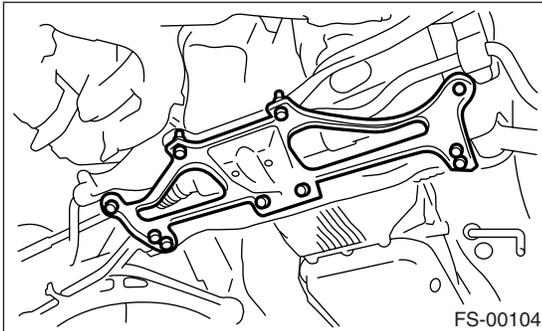

- Small type

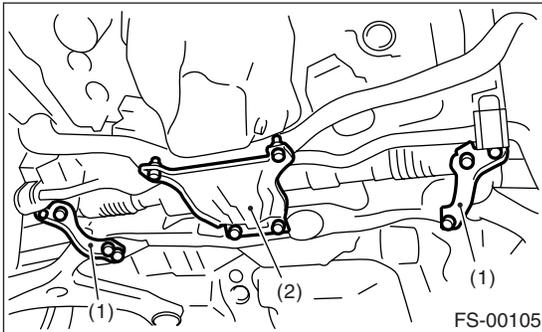

- (1) Crossmember support plate
- (2) Jack-up plate

### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Tighten the small type crossmember support plate together with stabilizer bracket.

After installing the stabilizer bracket to crossmember, tighten the crossmember support plate together.

#### Tightening torque:

##### **Crossmember support plate:**

**60 N·m (6.1 kgf-m, 44.3 ft-lb)**

##### **Crossmember support plate (Joint tightening portion of stabilizer bracket):**

**25 N·m (2.5 kgf-m, 18.1 ft-lb)**

##### **Jack-up plate:**

**60 N·m (6.1 kgf-m, 44.3 ft-lb)**