


# Exhaust Temperature Sensor

FUEL INJECTION (FUEL SYSTEMS)

## 19. Exhaust Temperature Sensor

### A: REMOVAL

1) Disconnect the ground cable from battery.

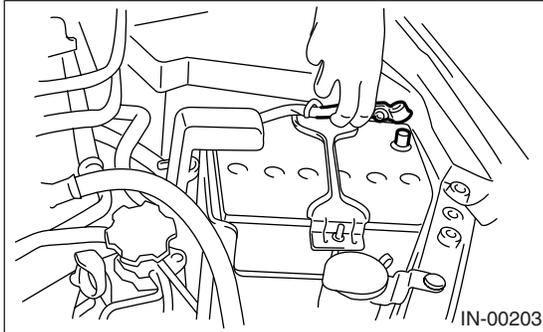


2) Remove the joint pipe. <Ref. to EX(H4DOTC)-11, REMOVAL, Joint Pipe.>

3) Apply spray type lubricant or its equivalent to the threaded portion of exhaust temperature sensor, and leave it for one minute or more.

4) Remove the exhaust temperature sensor.

#### CAUTION:

**When removing the exhaust temperature sensor, wait until exhaust pipe cools, otherwise it will damage exhaust pipe.**

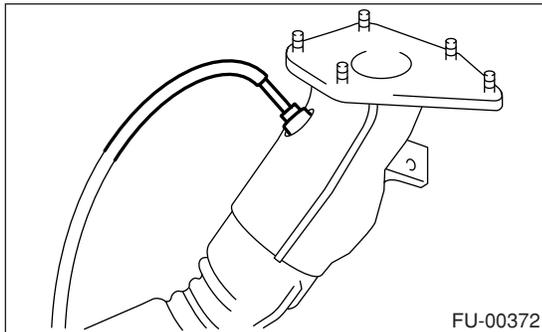

### B: INSTALLATION

1) Before installing exhaust temperature sensor, apply anti-seize compound only to the threaded portion of exhaust temperature sensor to make the next removal easier.

#### CAUTION:

**Never apply anti-seize compound to protector of exhaust temperature sensor.**

#### Anti-seize compound:

**SS-30 JET LUBE**


2) Install the exhaust temperature sensor.

#### NOTE:

Align the harness (A) of exhaust temperature sensor to the marking (B) of joint pipe, and tighten the screws.

#### Tightening torque:

**21 N·m (2.1 kgf-m, 15.2 ft-lb)**

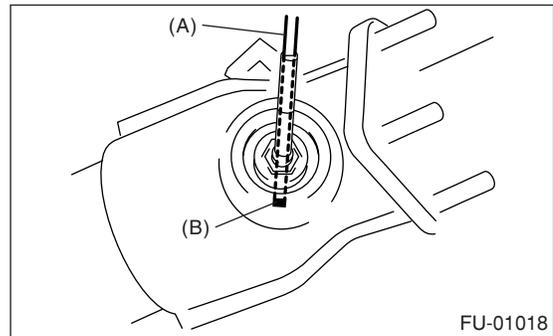

3) Install the joint pipe. <Ref. to EX(H4DOTC)-11, INSTALLATION, Joint Pipe.>

4) Connect the battery ground cable to battery.

