


SATELLITE SWITCHES

ENTERTAINMENT SYSTEM

2. Satellite Switches

A: GENERAL

The driver can operate the audio system without releasing the hand from the steering wheel. Illumination is provided for nighttime visibility.

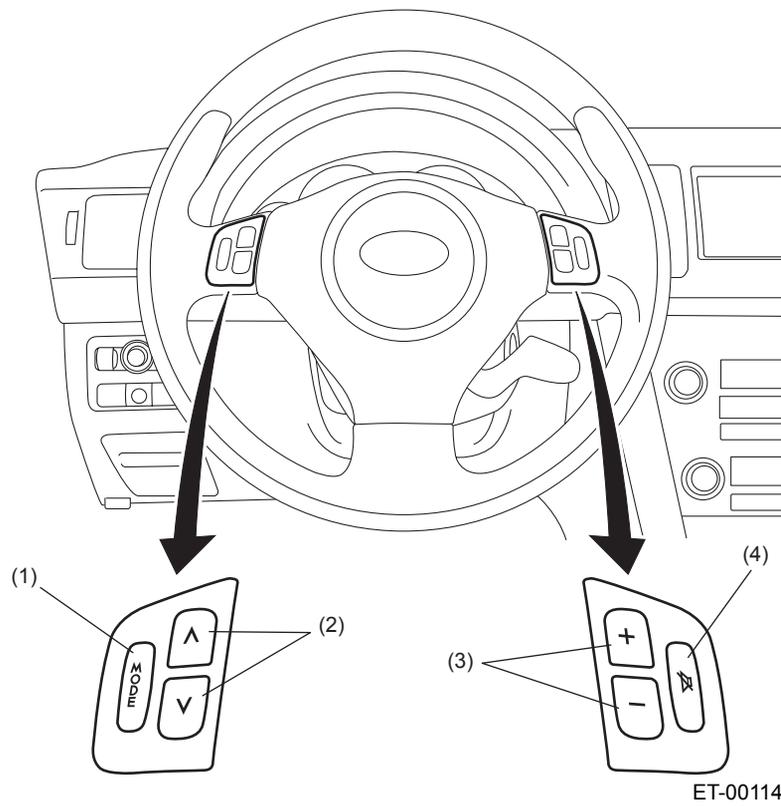

(1) Mode switch

(2) ^ v (Up/down) switch

(3) + - (volume) switch

(4) Mute switch

SATELLITE SWITCHES

ENTERTAINMENT SYSTEM

1. MODE SWITCH

The mode of the audio system can be changed.

2. \wedge \vee (UP/DOWN) SWITCH

- When receiving radio or TV waves, the frequency can be changed upwards or downwards. When the receiver is tuned to a radio or TV station during the upward or downward seek, the seek stops. (seek up/seek down)
- While listening to a CD, the next track or previous track can be selected. (track up/track down)

3. + – (VOLUME) SWITCH

The sound level can be turned up or down.

4. MUTE SWITCH

The sound can be temporarily muted. When this switch is operated, "MUTE" is indicated on the audio display. The sound level is resumed when the switch is pushed again.