


## 2. Air Cleaner Element

### A: REMOVAL


1) Disconnect the ground cable from battery.

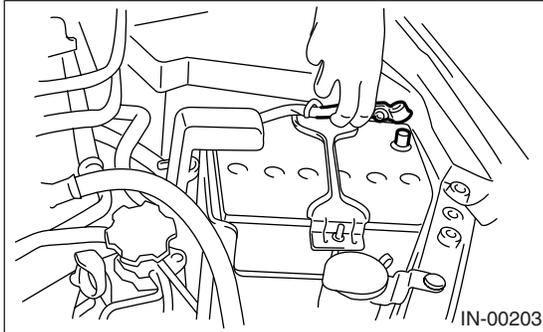

2) Disconnect the connector (A) from mass air flow sensor.

3) Loosen the clamps (B) which connect air intake boot to intake duct.

4) Remove the clips (C) from air cleaner case.

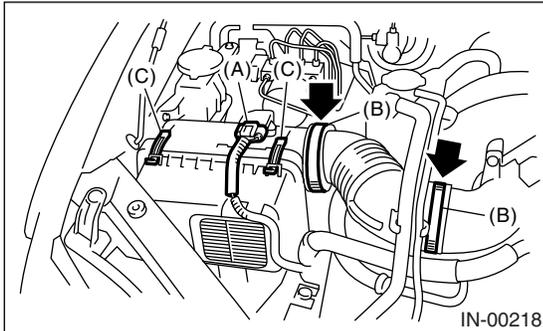

5) Remove the air cleaner case (rear) and air intake boot.


6) Remove the air cleaner element.

### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

When installing the air cleaner case (rear), align the protrusion part of air cleaner case (rear) to the hole of air cleaner case (front).

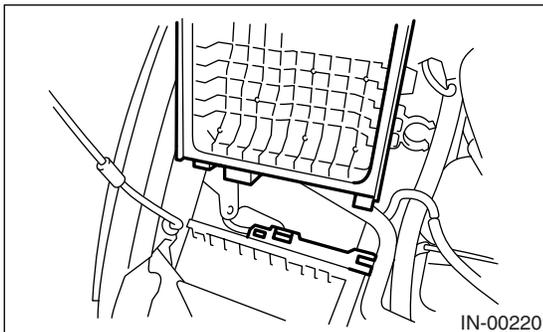

### C: INSPECTION

Replace if excessively damaged or dirty.