


## 24.Upper Inner Trim


### A: REMOVAL

1) From the top side of trim, remove the metal clip using flat tip driver.

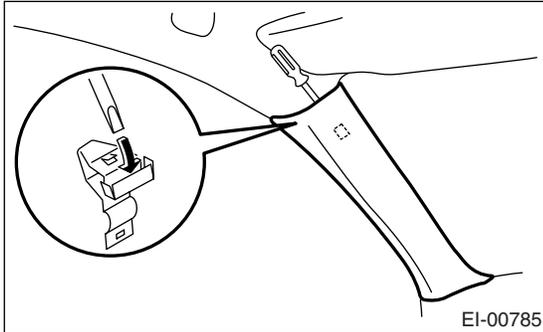


**CAUTION:**  
When metal clip is removed or damaged, replace the both of trim and metal clip with new ones.

2) Remove the front pillar upper trim.

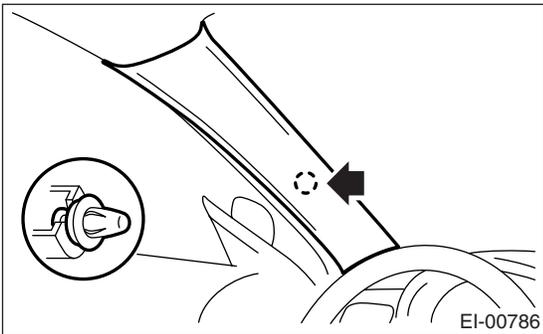


3) Remove the front inside scuff plate, rear inside scuff plate and center pillar lower trim. <Ref. to EI-60, REMOVAL, Lower Inner Trim.>

4) Remove the cap on the upper side of pillar trim, and remove the bolt inside.

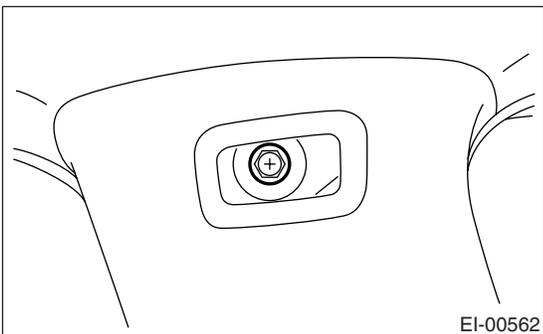

5) Remove the center pillar upper trim.

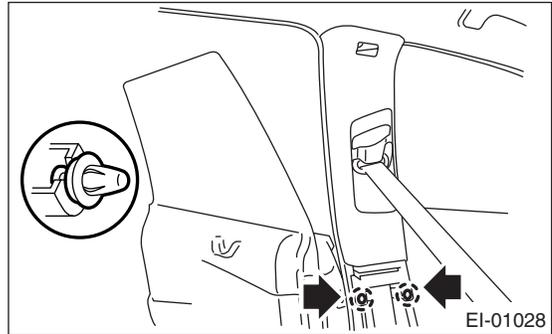

6) Remove the seat belt lower anchor bolt at center pillar lower port. (Driver's seat)

7) Refer to the removal procedure of "Front Seat Belt". (Passenger's seat). <Ref. to SB-10, OUTER SEAT BELT ASSEMBLY, REMOVAL, Front Seat Belt.>

### B: INSTALLATION

Install in the reverse order of removal.