


## 4. Seat Heater System

### A: REMOVAL

#### 1. SEAT HEATER UNIT

- 1) Remove the front seats. <Ref. to SE-9, REMOVAL, Front Seat.>
- 2) Remove the backrest cover and seat cushion cover of front seat. <Ref. to SE-10, DISASSEMBLY, Front Seat.>
- 3) Remove the hog ring, and then remove the seat heater unit.

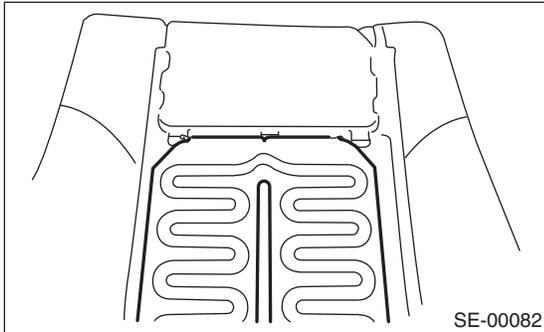

#### 2. SEAT HEATER SWITCH

- 1) Remove the console box. <Ref. to EI-53, REMOVAL, Console Box.>
- 2) Remove the seat heater switch from console box.

### B: INSTALLATION

#### 1. SEAT HEATER UNIT

Install in the reverse order of removal.

#### 2. SEAT HEATER SWITCH

Install in the reverse order of removal.